

ORIGINAL INSTRUCTIONS

OPERATOR'S MANUAL

TS6.110

TS6.110 HC

TS6.120

TS6.120 HC

TS6.130

TS6.140

Tier 4B (final)

Tractor



Part number 51490476

3rd edition English

August 2018

Replaces part number 48047744



Contents

1 GENERAL INFORMATION

Note to the owner.....	1-1
Intended use.....	1-2
Electro-Magnetic Compatibility (EMC)	1-3
Product identification	1-4
Product Identification Number (PIN).....	1-8
Operator's manual storage on the machine	1-9
Machine orientation.....	1-10
Machine components.....	1-12
Selective Catalytic Reduction (SCR) exhaust treatment - Product overview	1-14

2 SAFETY INFORMATION

Safety rules and signal word definitions	2-1
Safety rules.....	2-2
Ecology and the environment	2-12
Safety signs	2-13
Informational decals.....	2-36

3 CONTROLS AND INSTRUMENTS

Access to operator's platform

Proper entry and exit	3-1
-----------------------------	-----

Operator's seat

Mechanical operator's seat.....	3-3
Pneumatic operator's seat.....	3-4
Seat belt operation	3-6

Instructional seat

Overview	3-7
----------------	-----

Forward controls

Front console	3-8
Foot pedals	3-10
Selective Catalytic Reduction (SCR) exhaust treatment - Overview	3-11

Left-hand side controls

Power Take-Off (PTO) (without cab)	3-20
Parking brake.....	3-20
Door and window operation	3-21
Storage	3-21

Right-hand side controls

Transmission controls	3-22
DualPower™	3-23
Power Take-Off (PTO) (with cab)	3-23
Hydraulic controls	3-24
Right-hand post	3-26
Heating, Ventilation, and Air Conditioning (HVAC) controls	3-27
Door and window operation	3-29

Rearward controls

Rear window operation	3-30
Rear window wiper	3-30

Overhead controls

Radio	3-31
Radio operation	3-31
Dome light	3-39
Roof hatch	3-39

Display

Analog/Digital Instrument Cluster (ADIC)	3-40
Warning and status indicators	3-41
Display overview	3-43
Alarms	3-43
Setup menu	3-52
Overview	3-52
Maintenance intervals	3-53
Audible alarm buzzer	3-54
Fuel consumption units	3-55
Active error codes and warnings	3-56
Backlighting and dimming	3-57
Lamps and gauges	3-57
Display	3-58

4 OPERATING INSTRUCTIONS

Commissioning the unit

Run-in period of a new machine	4-1
Roll Over Protective Structure (ROPS)	4-2

Starting the unit

Starting the engine	4-4
Engine starting aids	4-7

Stopping the unit

Stopping the tractor	4-9
----------------------------	-----

Hydraulic trailer brakes	4-11
--------------------------------	------

Moving the unit

General transmission operation	4-12
Steering control.....	4-13

5 TRANSPORT OPERATIONS

Road transport

Basic instructions	5-1
High visibility position markers	5-2

Recovery transport

Towing the tractor.....	5-7
-------------------------	-----

6 WORKING OPERATIONS

Tires and wheels

Tire load and inflation charts	6-1
Tractor ballasting	6-7
Liquid ballast	6-9
Front wheel tread settings	6-11
Rear wheel tread settings	6-15
Bar axle adjustment	6-17
Dual rear wheels	6-22

Driveline

Creeper gears	6-24
Four-Wheel Drive (4WD)	6-27
Differential lock	6-28
Front axle oscillation.....	6-29

Hydraulic system

Hydraulic Power Lift (HPL)	6-31
Bosch remote valves	6-34
Hydraulic remote control valves	6-34
Connecting remote cylinders	6-37
Bleeding remote cylinders	6-39
Operating single-acting hydraulic cylinders	6-40
Operating double-acting hydraulic cylinders	6-41
Operating continuous flow hydraulic equipment.....	6-42
Sohipren remote valves	6-44
Hydraulic remote control valves	6-44
Connecting remote cylinders	6-46
Operating single-acting hydraulic cylinders	6-48
Operating double-acting hydraulic cylinders	6-49

Implements

Adjusting the drawbar	6-50
Hitch operation	6-53
Power Take-Off (PTO) operation	6-58

7 MAINTENANCE

General information

Safety rules – Machine service access	7-1
Warranty notice	7-1
Jacking points	7-1
Opening the hood	7-2
Fueling the machine	7-3
Selective Catalytic Reduction (SCR) exhaust treatment - Basic instructions	7-4
General specification - Biodiesel fuels	7-5
General specification - Diesel fuel	7-7
Torque - Minimum tightening torques for normal assembly	7-8
Standard torque data for hydraulics	7-13
Organic Acid Technology (OAT) coolant	7-17
Fluid capacities and lubricants	7-18
Engine oil - Recommended engine oil for operating temperature ranges	7-20

Maintenance planning

Maintenance chart	7-21
-------------------------	------

Warning light on

Engine air filter (outer element) - Clean	7-23
Fuel filter water separator - Drain fluid	7-25
Brake fluid - Level make up	7-26

Every 10 hours or daily

Engine oil - Level make up	7-27
Radiator, oil cooler, and condenser - Clean	7-28
Engine cooling system - Level make up	7-31

Every 50 hours

Tire pressure - Check	7-32
Transmission, rear axle, and hydraulic system oil - Level make up	7-32
Final drive housing oil - Level make up	7-33
Brake fluid - Level make up	7-33
Windshield washer fluid - Level make up	7-33
Fuel filter water separator - Drain fluid	7-33
Cab recirculation air filter - Clean	7-34
Cab air filter - Clean	7-36
Wheel hardware - Check	7-37
Grease points - Grease	7-38
Clutch pedal - Adjust	7-40



Thank you very much
for your reading.
Please click here
to get more information.