

X 220

Excavator

Service Manual

 
(S/N 508212001 & Above)



PDF



DOWNLOAD

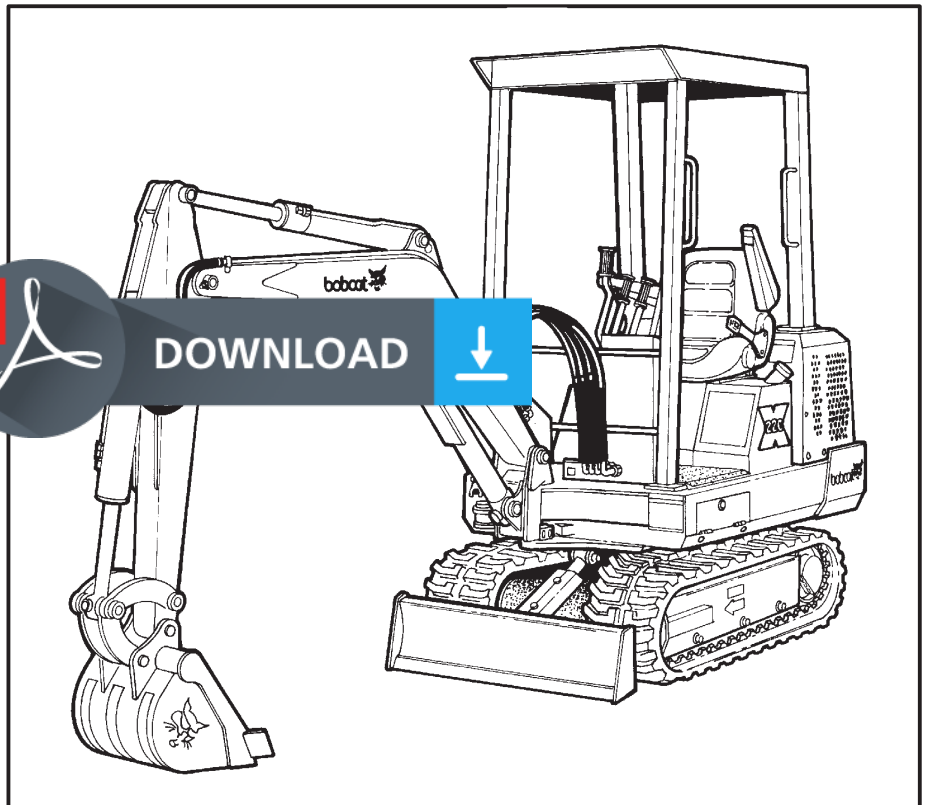

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

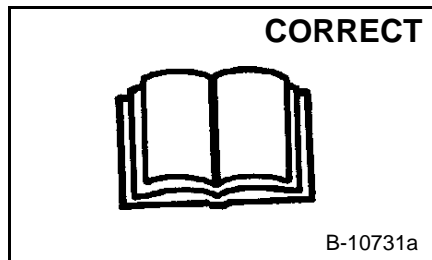


B-10731a

 ⚠ Never service the Bobcat Hydraulic Excavator without instructions.

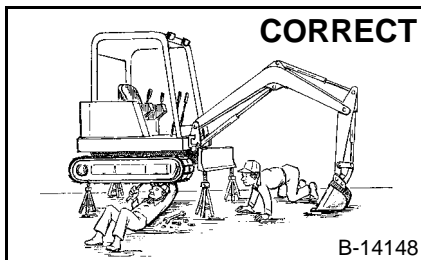


B-14148

 ⚠ Use the correct procedure to lift and support the excavator.
⚠ Always lift the blade fully before installing jackstands.

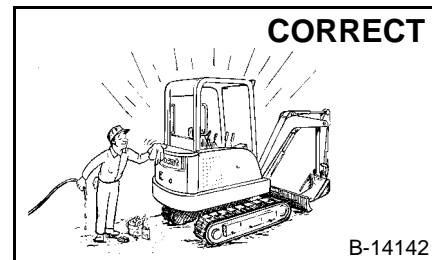


B-14142

 ⚠ Cleaning and maintenance are required daily.

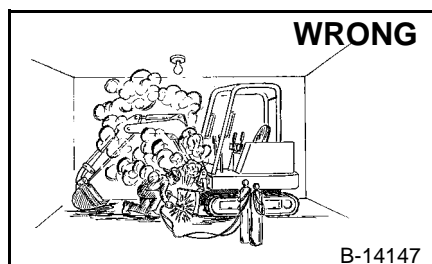


B-14147

 ⚠ Have good ventilation when welding or grinding painted parts.
⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

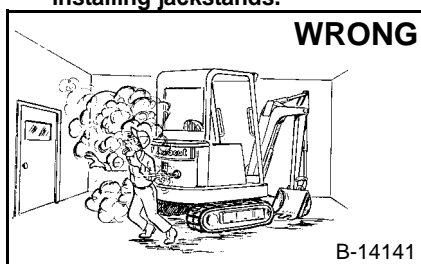


B-14141

 ⚠ Vent exhaust to outside when engine must be run for service.
⚠ Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.

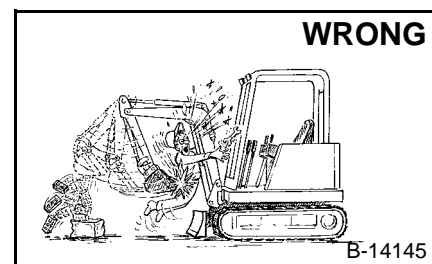


B-14145

 ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
⚠ Never modify equipment or add attachments not approved by Bobcat Company.

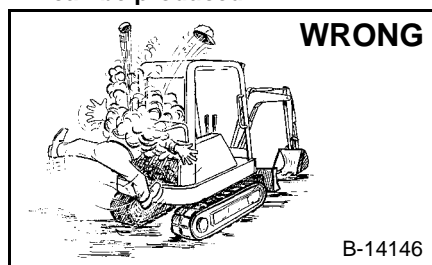


B-14146

 ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

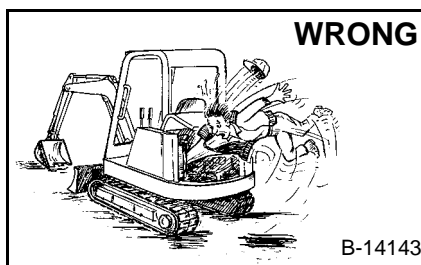

B-14143

 ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
⚠ Keep rear door closed except for service. Close and latch door before operating the excavator.

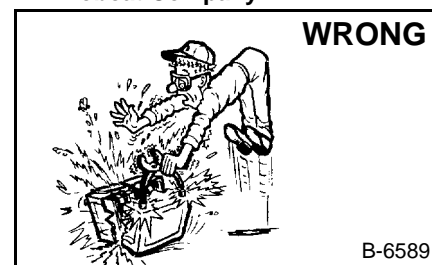

B-6589

⚠ Lead-acid batteries produce flammable and explosive gases.
⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER SERVICE	1-1	MELROE CONTROL VALVE LEVER	3-1
ALTERNATOR	6-1	MELROE HYDRAULIC CONTROL VALVE	2-1
AUXILIARY COUPLERS	2-1	OIL COOLER	7-1
AUXILIARY FITTINGS	2-1	PEDAL	3-1
BATTERY	6-1	RADIATOR	7-1
BLADE CYLINDER	2-1	SEAT AND MOUNTING FRAME	5-1
BLADE LEVER	3-1	SERVICE SCHEDULE	1-1
BOOM AND DIPPERSTICK	5-1	SPARK ARRESTOR MUFFLER	7-1
BOOM CYLINDER	2-1	STARTER	6-1
BOOM SWING BRACKET	5-1	SWING CIRCLE GEAR	4-1
BOOM SWING CYLINDER	2-1	SWING CYLINDER LOCK VALVE	2-1
BUCKET CYLINDER	2-1	SWING MOTOR	4-1
CENTER SWIVEL JOINT	4-1	TIMING GEAR, CAMSHAFT AND OIL PUMP	7-1
COOLING SYSTEM	1-1	TIMING GEAR COVER	7-1
CONSOLE	3-1	TRACK	5-1
CONTROL AND STEERING LEVERS	3-1	TRACK FRAME	5-1
CRANKSHAFT AND PISTONS	7-1	TRACK IDLER	5-1
CYLINDER HEAD	7-1	TRACK ROLLER	5-1
CYLINDER LINERS	7-1	UPPER WORKS	4-1
DIPPERARM CYLINDER	2-1	USING A BOOSTER BATTERY (JUMP STARTING)	1-1
DRIVE MOTOR (S/N 12001-12929)	3-1	VALVE CLEARANCE	7-1
DRIVE MOTOR (S/N 12930 & Above)	3-1	WATER PUMP	7-1
DUKES HYDRAULIC CONTROL VALVE	2-1		
ELECTRICAL SYSTEM	6-1		
ENGINE	7-1		
ENGINE COMPRESSION	7-1		
ENGINE COVER	1-1, 5-1		
ENGINE FLYWHEEL	7-1		
ENGINE LUBRICATION SYSTEM	1-1		
ENGINE OIL SPECIFICATIONS	8-1		
ENGINE SPECIFICATIONS (KUBOTA)	8-1		
FINAL DRIVE (S/N 12001-12929)	3-1		
FINAL DRIVE (S/N 12930 & Above)	3-1		
FLOOR PANEL	3-1		
FUEL, COOLANT AND LUBRICANTS	8-1		
FUEL FILTER	7-1		
FUEL INJECTOR NOZZLES	7-1		
FUEL INJECTION PUMP	7-1		
FUEL SYSTEM	1-1		
FUEL TANK	5-1		
GLOW PLUGS	7-1		
HOLDING VALVES	2-1		
HORN	6-1		
HYDRAULIC CYLINDER	2-1		
HYDRAULIC EXCAVATOR SPECIFICATIONS	8-1		
HYDRAULIC FILTER	2-1		
HYDRAULIC MOTOR	3-1		
HYDRAULIC PUMP	2-1		
HYDRAULIC RESERVOIR	2-1		
HYDRAULIC SERVICE INFORMATION	2-1		
HYDRAULIC SYSTEM	1-1		
INSTRUMENT PANEL	6-1		
LOCKING LEVER	3-1		
LUBRICATION OF THE EXCAVATOR	1-1		



Thank you very much
for your reading.
Please click here
to get more information.