

FX25, FX45, FX28, FX38, FX48, FX58 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	2
SECTION 14 - LIVE P.T.O.	3
SECTION 21 - TRANSMISSION	4
SECTION 23 - 4WD LINES	4
SECTION 25 - FRONT MECHANICAL DRIVE	4
SECTION 29 - HYDROSTATIC TRANSMISSION	5
SECTION 33 - BRAKES AND CONTROL	5
SECTION 35 - HYDRAULIC SYSTEM	5
SECTION 50 - CAB CLIMATE CONTROL	8
SECTION 55 - ELECTRICAL SYSTEM	8
SECTION 60 - PRODUCT FEED	10
SECTION 64 - CUTTERHEAD	12
SECTION 70 - EJECTION	12

