

# Parts Manual



See "General Information"  
for New Parts Manual  
Features.

---

## 966H Wheel Loader

---

A6D1-Up (Machine)  
RSX1-Up (Engine)  
DKG1-Up (Transmission)  
TKF1-Up (Torque Converter)



**Powered By C11 Engine**

This Parts Manual is also Available in .PDF Format on Compact  
Disc(CD-ROM)-Caterpillar Form No. SERP3743

---



# Product and Dealer Information

Note: For product identification plate locations, see the section "Product Identification Information" in the Operation and Maintenance Manual.

Delivery Date: \_\_\_\_\_

## Product Information

Model: \_\_\_\_\_

Product Identification Number: \_\_\_\_\_

Engine Serial Number: \_\_\_\_\_

Transmission Serial Number: \_\_\_\_\_

Generator Serial Number: \_\_\_\_\_

Attachment Serial Numbers: \_\_\_\_\_

Attachment Information: \_\_\_\_\_

Customer Equipment Number: \_\_\_\_\_

Dealer Equipment Number: \_\_\_\_\_

## Dealer Information

Name: \_\_\_\_\_ Branch: \_\_\_\_\_

Address: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Dealer Contact

Phone Number

Hours

Sales: \_\_\_\_\_

Parts: \_\_\_\_\_

Service: \_\_\_\_\_



Thank you very much  
for your reading.  
Please click here  
to get more information.