


2008 Bobcat 335 Compact Excavator Service Repair Workshop Manual AAD111001-A9KA11001

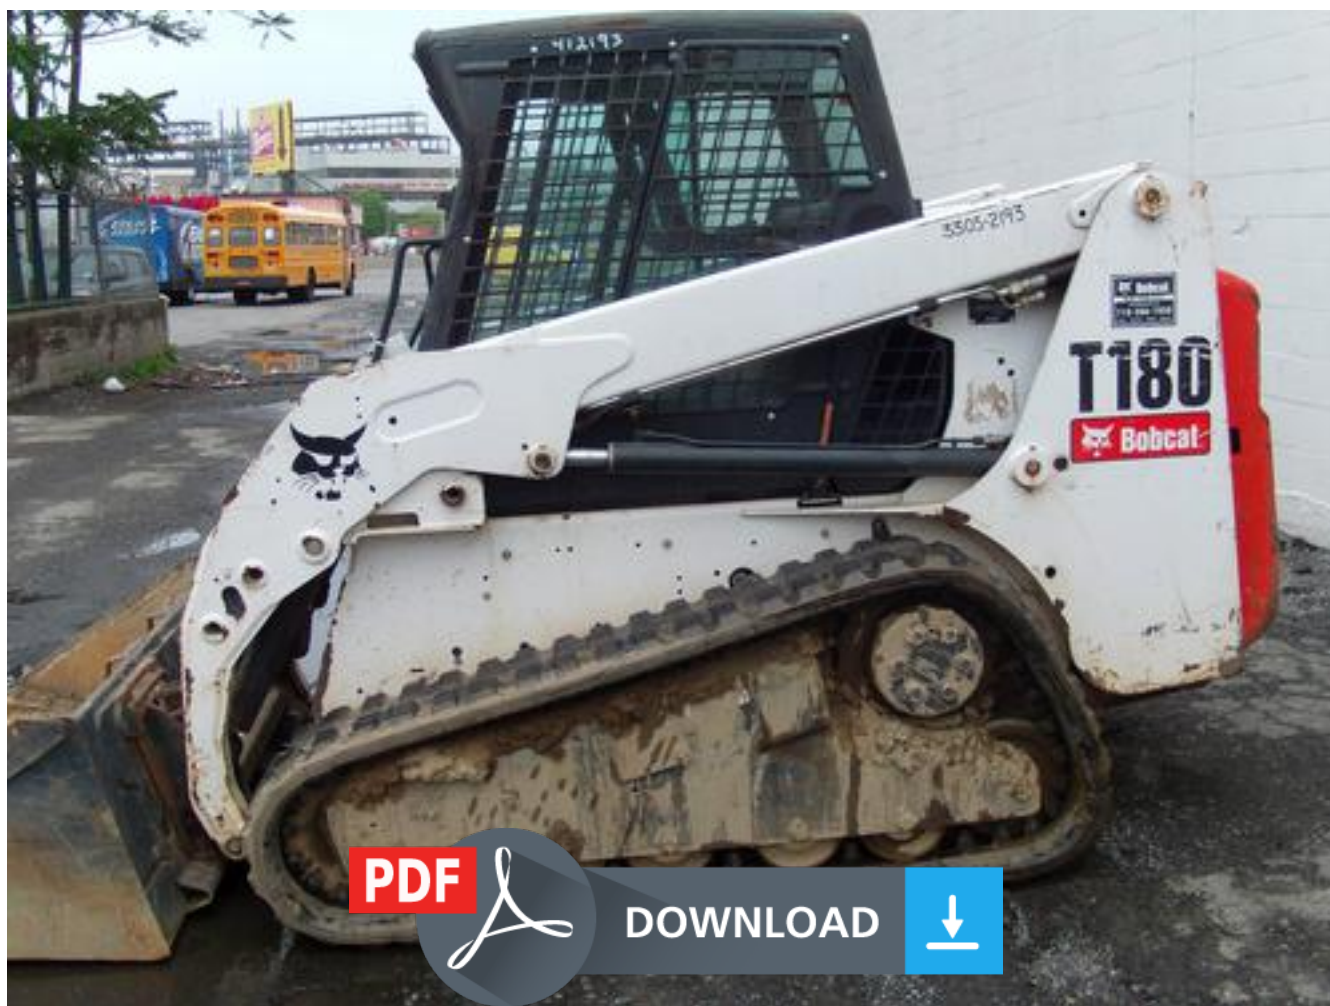




Bobcat®

Service Manual

335 Compact Excavator


S/N AAD111001 & Above
S/N A9KA11001 & Above

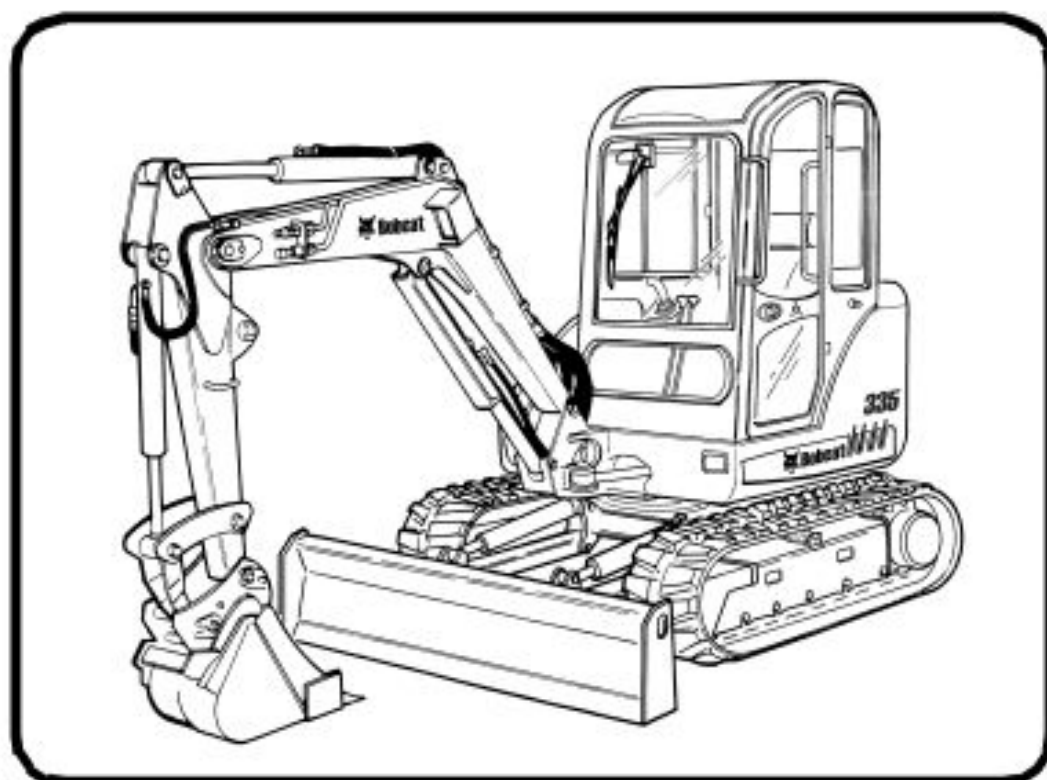

Dealer Copy -- Not for Resale



EXCAVATOR IDENTIFICATION

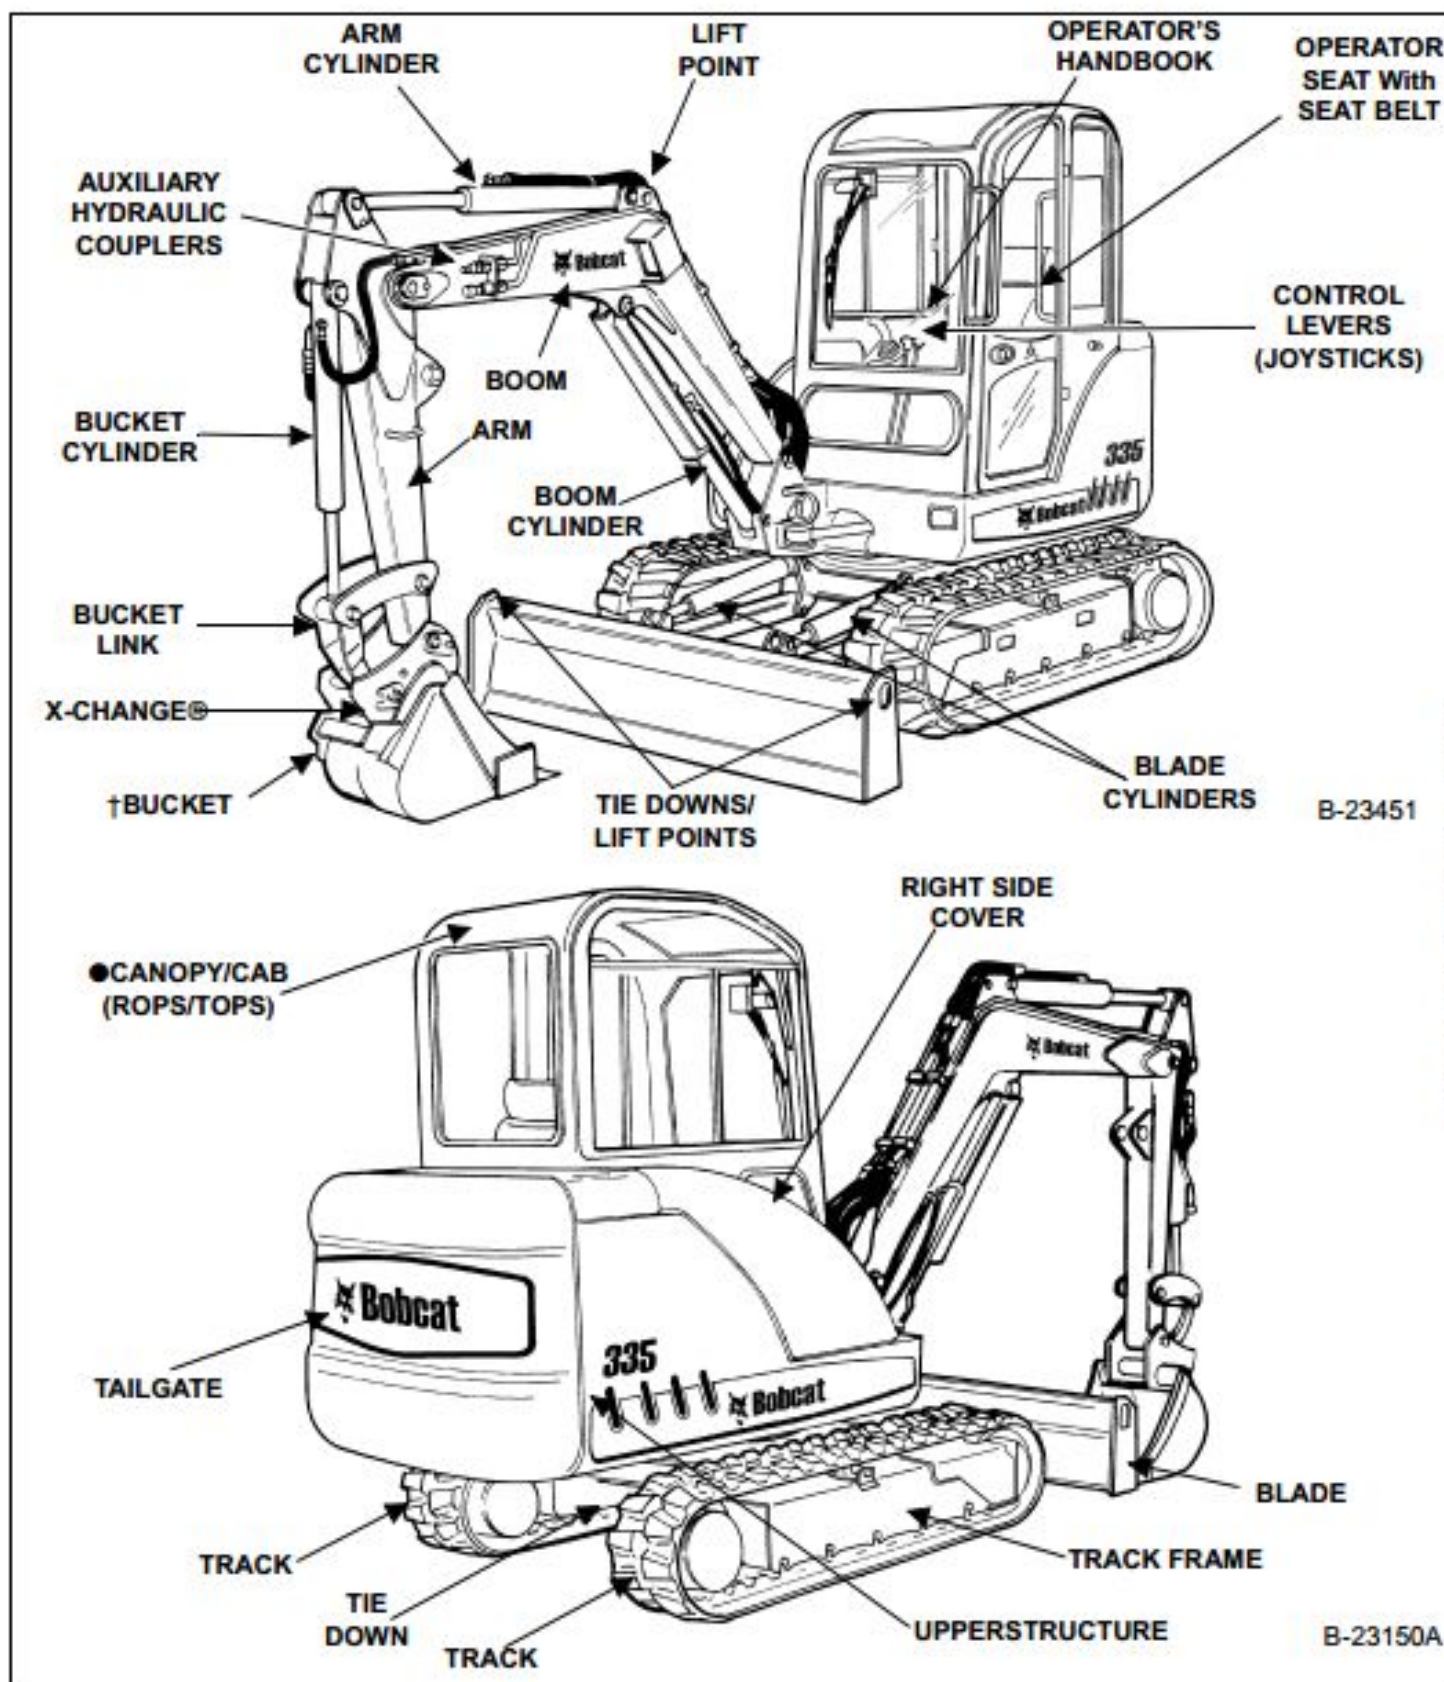

- † BUCKET - Several different buckets and other attachments are available from the Bobcat Excavator.
- ROPS, TOPS - (Roll Over Protective Structure / Tip Over Protective Structure) as standard equipment. The ROPS/TOPS meets SAE J1040, ISO 3471 and ISO 12117.

Dealer Copy -- Not for Resale

B-23451

B-23150A


ENGINE COOLING SYSTEM

Check the cooling system every day to prevent overheating, loss of performance or engine damage.

Cleaning

Open the tailgate.

Figure 10-70-1

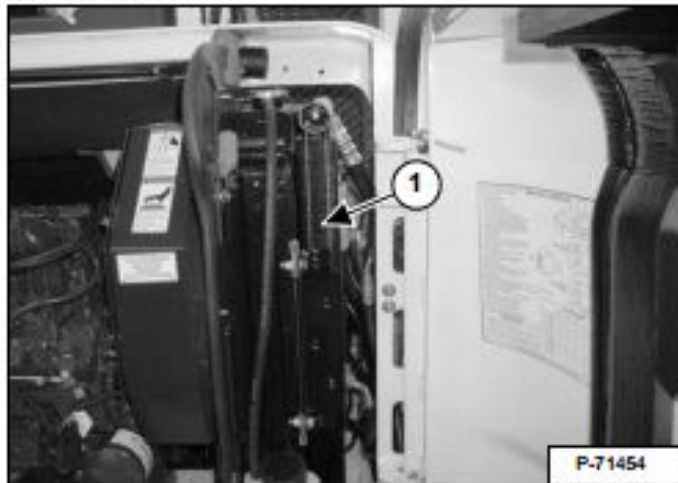

Use air pressure or water pressure to clean the radiator and oil cooler (Item 1) [Figure 10-70-1]. Be careful not to damage fins when cleaning.

NOTE: Allow the cooling system and engine to cool before servicing or cleaning the cooling system.

Checking Level

! WARNING

AVOID BURNS

Do not remove radiator cap when the engine is hot. You can be seriously burned.

W-2070-1203

! WARNING

AVOID INJURY OR DEATH


Wear safety glasses to prevent eye injury when any of the following conditions exist:

- When fluids are under pressure.
- Flying debris or loose material is present.
- Engine is running.
- Tools are being used.

W-2019-0907

Open the right side cover.

Figure 10-70-2

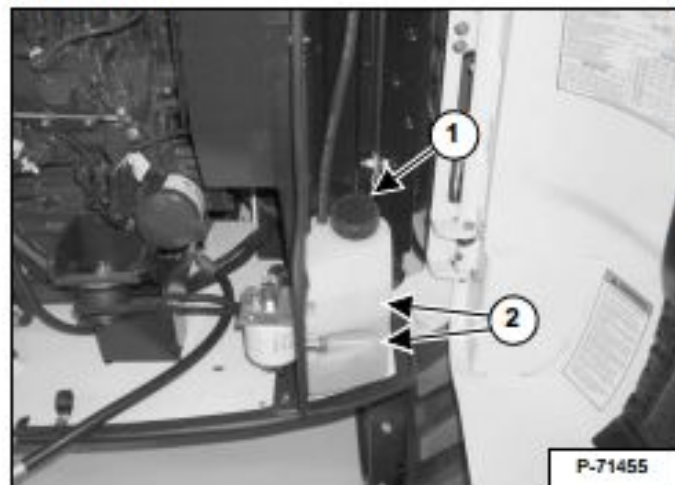

Check the coolant level in the coolant recovery tank (Item 1) [Figure 10-70-2].

The coolant level must be between the MIN and MAX marks (Item 2) [Figure 10-70-2] on the coolant recovery tank when the engine is cold.

NOTE: The cooling system is factory filled with propylene glycol (purple color). DO NOT mix propylene glycol with ethylene glycol.

Dealer Copy -- Not for Resale



Thank you very much
for your reading.
Please click here
to get more information.