


Bobcat 2200 2200S 2300 Utility Vehicle Service Repair Workshop Manual  
A59Z11001-A59W11001

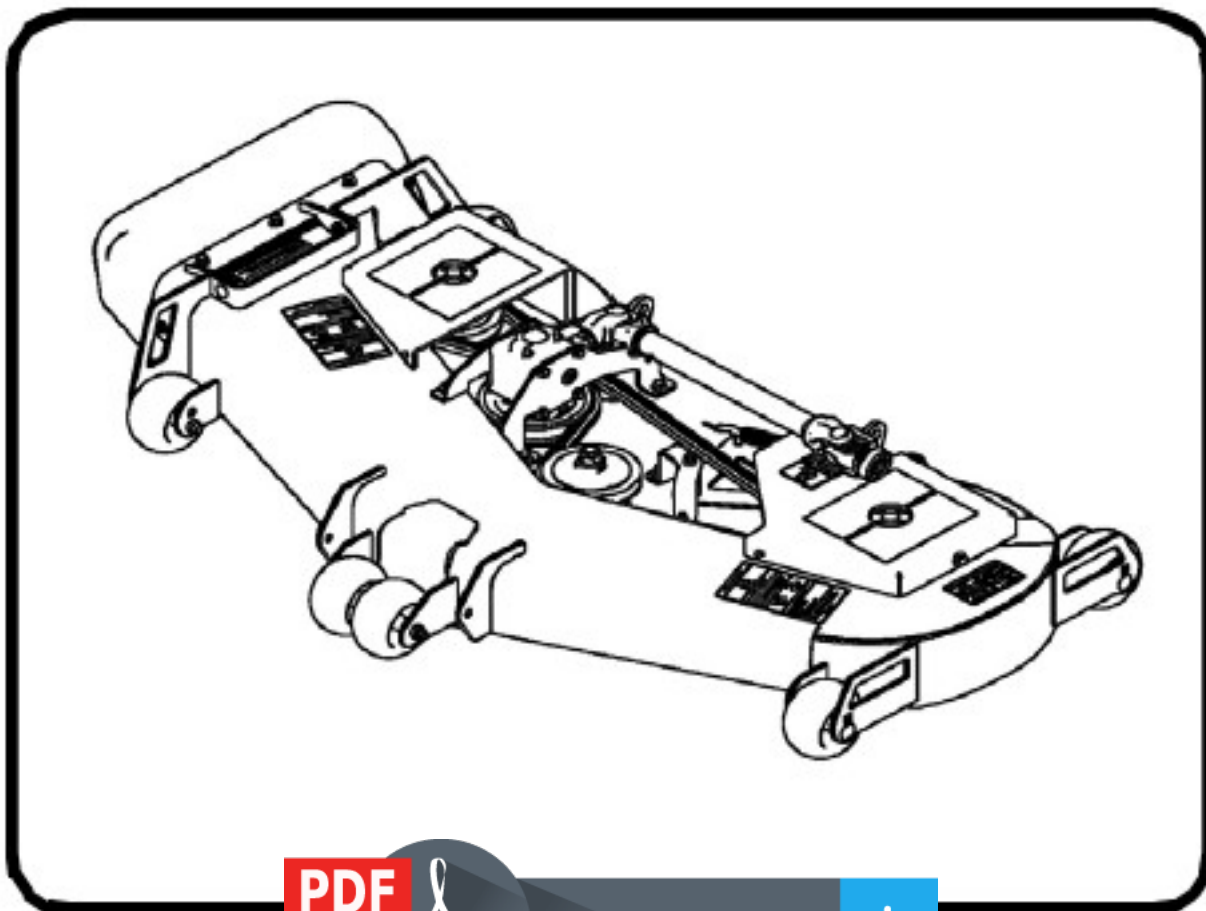

PDF



DOWNLOAD



**763**

**763**

HIGH FLOW



**Bobcat®**


# Service Manual

S/N 512212001 thru 512249999

S/N 512440001 thru 512449999

S/N 512612001 thru 512619999

EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)

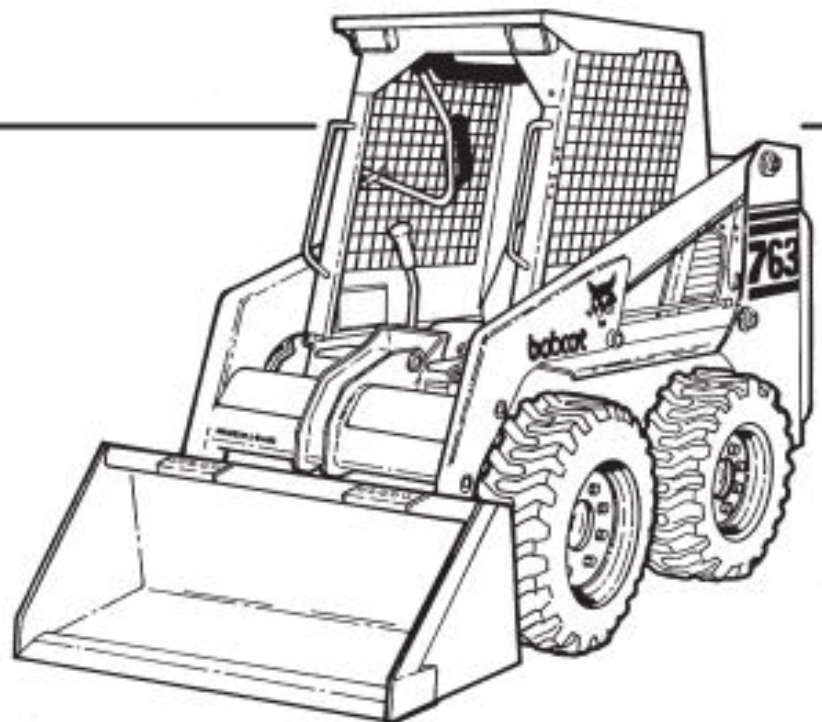

# CONTENTS

FOREWORD .....	ii
SAFETY INSTRUCTIONS .....	v
SERIAL NUMBER LOCATIONS .....	vii
DELIVERY REPORT .....	vii
BOBCAT LOADER IDENTIFICATION .....	viii
PREVENTIVE MAINTENANCE .....	1-1
HYDRAULIC SYSTEM .....	2-1
HYDROSTATIC SYSTEM .....	3-1
DRIVE SYSTEM .....	4-1
MAIN FRAME .....	5-1
ELECTRICAL SYSTEM .....	6-1
ENGINE SERVICE .....	7-1
SYSTEMS ANALYSIS .....	8-1
SPECIFICATIONS .....	9-1
ADVANCED HAND CONTROL SYSTEM .....	10-1

**CALIFORNIA  
PROPOSITION 65 WARNING**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

**PREVENTIVE  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**HYDROSTATIC  
SYSTEM**

**DRIVE  
SYSTEM**

**MAIN  
FRAME**

**ELECTRICAL  
SYSTEM**

**ENGINE  
SERVICE**

**SYSTEMS  
ANALYSIS**

**SPECIFICATIONS**

**ADVANCED  
HAND CONTROL  
SYSTEM**

Dealer Copy -- Not for Resale



## FUEL SYSTEM (Cont'd)

### Removing Air From The Fuel System

After replacing the fuel filter element or when the fuel tank has run out of fuel, the air must be removed from the fuel system prior to starting the engine.



## WARNING

Diesel fuel or hydraulic fluid under pressure can penetrate skin or eyes, causing serious injury or death. Fluid leaks under pressure may not be visible. Use a piece of cardboard or wood to find leaks. Do not use your bare hand. Wear safety goggles. If fluid enters skin or eyes, get immediate medical attention from a physician familiar with this injury.

W-2072-0496

Open the vent (Item 1) [A] on the fuel filter housing.

Operate the hand pump (priming bulb) (Item 2) [A] until fuel flows from the vent with no air bubbles.

**NOTE:** The priming bulb location may be slightly different on the 763H model loader.

Close the vent (Item 1) [A] on the fuel filter housing.



Open the vent (Item 1) [B] on the fuel injection pump.

Operate the hand pump (priming bulb) (Item 2) [A] until the pump feels solid.

Tighten the vent plug (Item 1) [B].

Start the engine.

It may be necessary to open the vent plug (at the fuel injection pump) briefly until the engine runs smoothly.

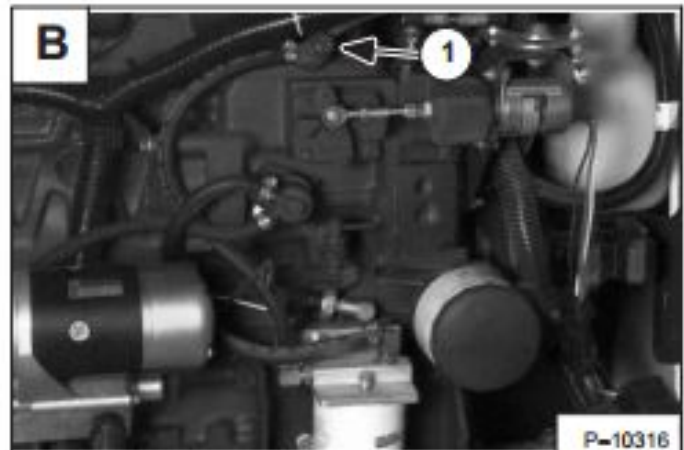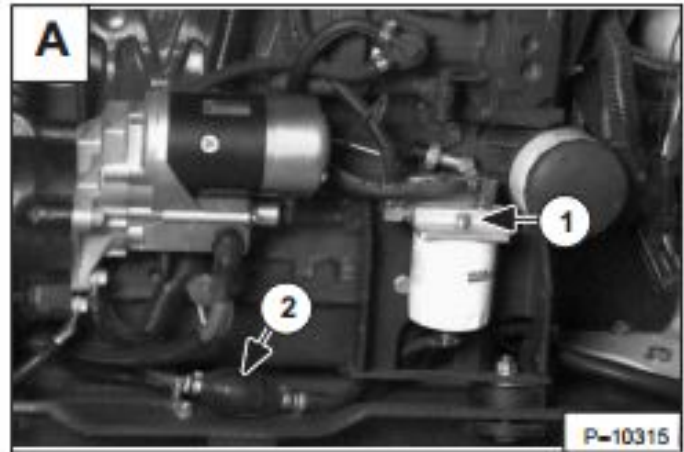

Dealer Copy -- Not for Resale



Thank you very much  
for your reading.  
Please click here  
to get more information.