


SUPPLEMENT 444, 500 & EARLY 600

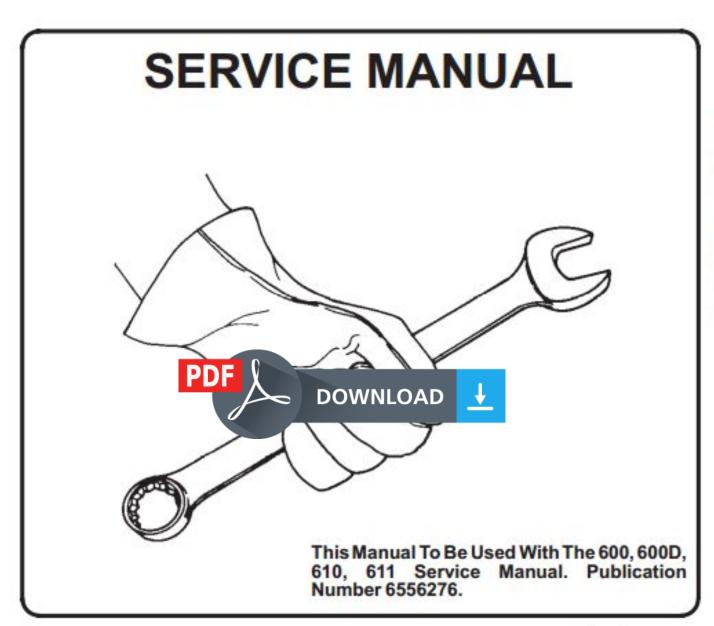












Bobcat


Service Manual

S/N 526411001 & Above S/N 526511001 & Above

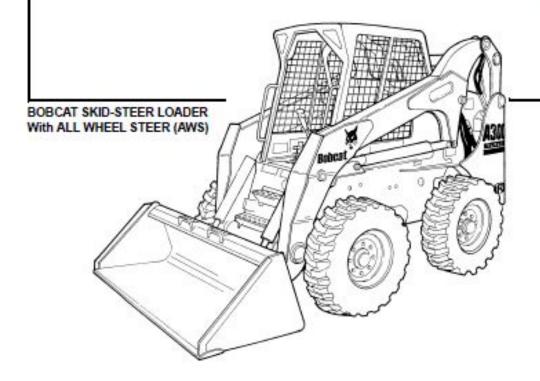

EQUIPPED WITH BOBCAT INTERLOCK CONTROL SYSTEM (BICS™)



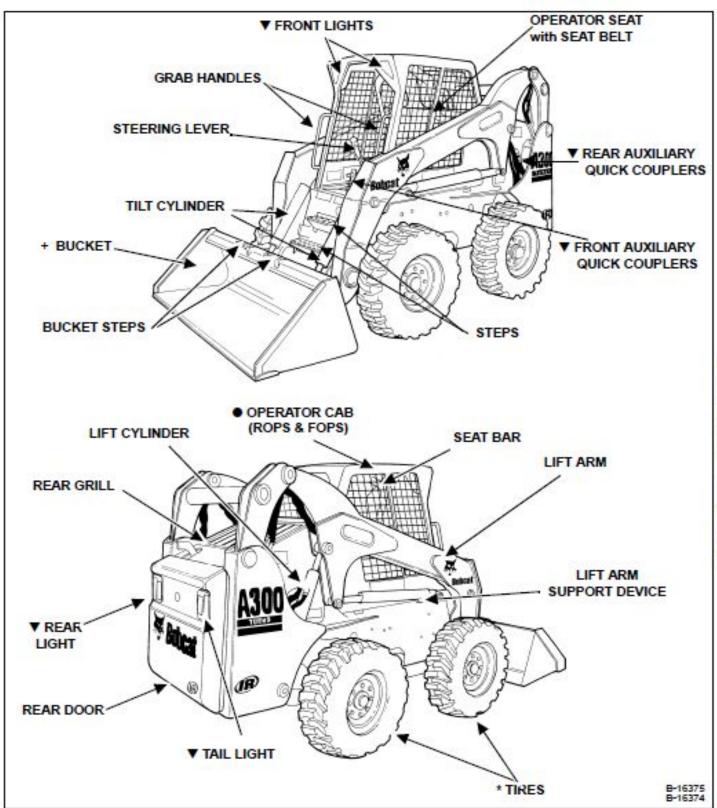


- ▼ OPTIONAL OR FIELD ACCESSORY (Not Standard Equipment)
- * TIRES Flotation tires are shown. The Bobcat loader is factory equipped with standard tires.
- BUCKET Several different buckets and other attachments are available for the Bobcat loader.
- ROPS, FOPS Roll Over Protective Structure, per SAE J1040 and ISO 3471, and Falling Object Protective Structure per SAEJ1043 and ISO 3449, Level I. Level II is available. The Bobcat loader is base-equipped with a standard operator cab as shown. Extra insulated cab is available as an option (Reduced noise level).

AIR CLEANER SERVICE (CONT'D)

Replacing Filter Element (Cont'd)

Figure 10-80-5

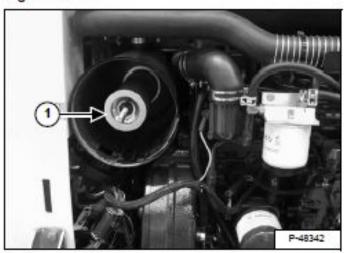

INNER FILTER

Only replace the inner filter element under the following conditions:

- Replace the inner filter element every third time the outer filter is replaced.
- After the outer element has been replaced, start the engine and run at full RPM. If the HOURMETER / CODE DISPLAY shows [01-17] (Air Filter Plugged), replace the inner filter element.

Remove the inner filter element (Item 1) [Figure 10-80-5].

NOTE: Make sure all sealing surfaces are free of dirt and debris.

Figure 10-80-6



Install the new inner element.

Install the dust cover and wing nut (Item 1) [Figure 10-80-6].



Thank you very much for your reading.

Please click here to get more information.