
Bobcat S70 Skid Steer Loader Service Repair Workshop Manual A3W611001-A3W711001





Service Manual

540 (S/N 501012001 & Above) 543 (S/N 502412001 & Above) 543B (S/N 511111001 & Above)

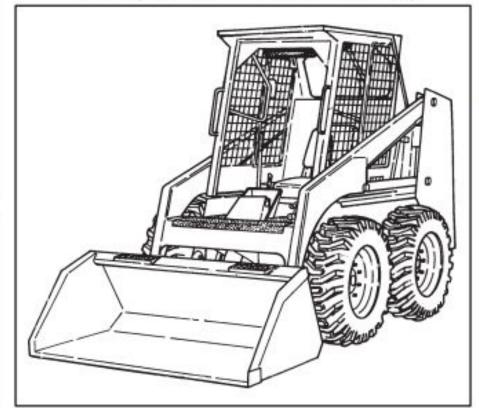







1 of 316

CONTENTS

DRIVE SYSTEM	4
ELECTRICAL SYSTEM	6
ENGINE SERVICE	7
HYDRAULIC SYSTEM	2
HYDROSTATIC SYSTEM	3
MAIN FRAME	5
PREVENTIVE MAINTENANCE	1
TECHNICAL DATA	8

PREVENTIVE MAINTENANCE

HYDRAULIC SYSTEM

HYDROSTATIC SYSTEM

DRIVE SYSTEM

MAIN

FRAME

ELECTRICAL SYSTEM

.

Dea

ENGINE SERVICE

TECHNICAL DATA

ALPHABETICAL INDEX

Make sure to replace all the covers and shrouding after cleaning the engine.

IMPORTANT

Never operate the engine with any of the covers or shrouding removed.

1-3.7 Engine Cooling System (543)

The radiator grill area must be kept clean and free of debris or overheating of the engine will result [C].

The cooling system has a coolant recovery tank. The location of the tank is on the right upright in the engine compartment [A]. Check the coolant level every day at the coolant recovery tank. Correct level of the recovery tank is 1/3 full when the engine is cold and 2/3 full when the engine is operating temperature.

Add coolant at the recovery tank only.

NOTE: Protect the cooling system from freezing temperatures by adding 50/50 (PRE-MIXED) mixture of ethylene glycol and water to the cooling system.

Removing the coolant from the Cooling System, use the following procedure:

WARNING

Stop engine and allow to cool before adding coolant or you can be burned.


W-2106-1285


The valve to remove the coolant is on the left side of the engine block [B].

Connect a hose to the valve or use a funnel to keep coolant from getting into the engine compartment.


Remove the rear grill.

Remove the radiator cap (Item 1) [D]. The grill must be removed.

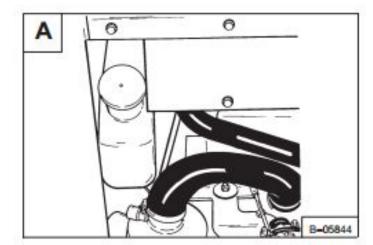

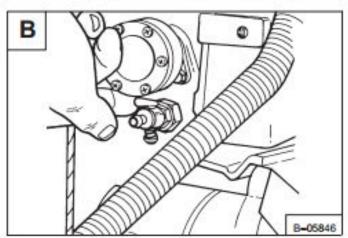



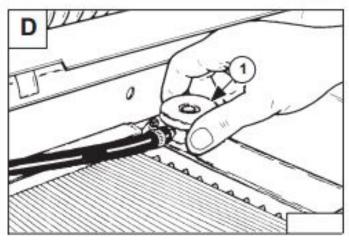

540, 543 Loader Service Manual



Thank you very much for your reading.

Please click here to get more information.