



PDF



DOWNLOAD



[Open front screen](#)

# Operation and Maintenance Manual

---

## **402D, 403D and 404D Industrial Engines**

---

GG (Engine)  
GH (Engine)  
GJ (Engine)  
GK (Engine)  
GL (Engine)  
GM (Engine)  
GN (Engine)  
GP (Engine)  
GQ (Engine)

---

## Table of Contents

|  |    |
|--|----|
| Foreword .....                                   | 4  |
| <b>Safety Section</b>                            |    |
| Safety Messages .....                            | 5  |
| General Hazard Information .....                 | 7  |
| Burn Prevention .....                            | 8  |
| Fire Prevention and Explosion Prevention .....   | 8  |
| Crushing Prevention and Cutting Prevention ..... | 10 |
| Before Starting Engine .....                     | 11 |
| Engine Starting .....                            | 11 |
| Engine Stopping .....                            | 11 |
| Electrical System .....                          | 12 |
| <b>Product Information Section</b>               |    |
| Model Views .....                                | 13 |
| Product Identification Information .....         | 23 |
| <b>Operation Section</b>                         |    |
| Lifting and Storage .....                        | 25 |
| Gauges and Indicators .....                      | 28 |
| Features and Controls .....                      | 29 |
| Engine Starting .....                            | 30 |
| Engine Operation .....                           | 33 |
| Engine Stopping .....                            | 34 |
| Cold Weather Operation .....                     | 35 |
| <b>Maintenance Section</b>                       |    |
| Refill Capacities .....                          | 39 |
| Maintenance Interval Schedule .....              | 54 |
| <b>Warranty Section</b>                          |    |
| Warranty Information .....                       | 85 |
| <b>Index Section</b>                             |    |
| Index .....                                      | 86 |

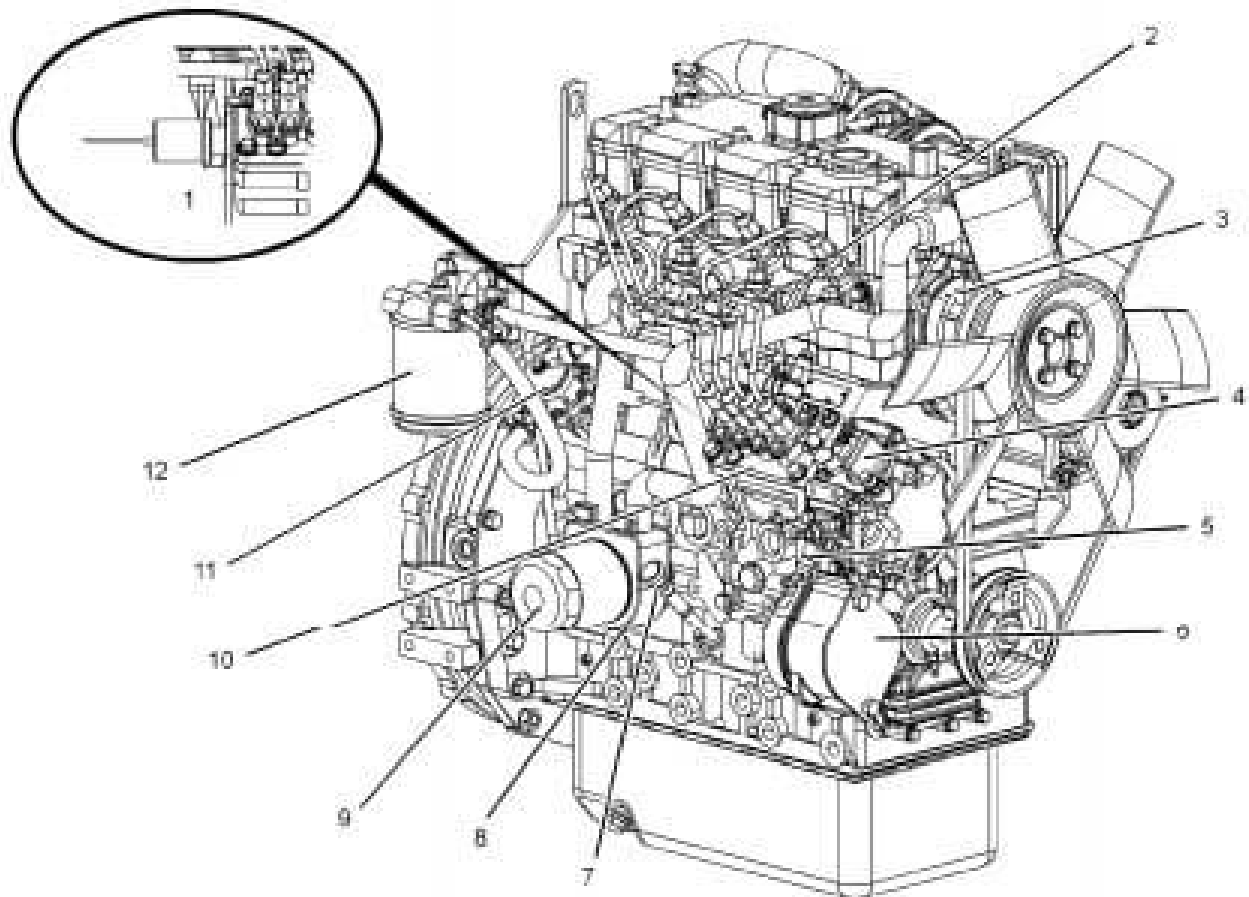


Illustration 11

g01304803

Front and right side view of the 404D-22T Engine

- (1) Fuel shutoff solenoid
- (2) Number one fuel injector
- (3) Water pump
- (4) Lower engine oil filler cap

- (5) Throttle lever
- (6) Cover plate for the accessory drive
- (7) Engine oil level gauge
- (8) Engine oil cooler

- (9) Engine oil filter
- (10) Fuel injection pump
- (11) Transfer pump
- (12) Fuel filter



Thank you very much  
for your reading.  
Please click here  
to get more information.