

John Deere Agriculture

**5083E Limited, 5093E Limited and 5101E Limited
5083E, 5093E, and 5101E (Tier 2/Stage II and Tier
3/Stage IIIA) Tractors Diagnostic**

**DIAGNOSIS AND TESTS SERVICE
MANUAL**

**5083E, 5093E LIMITED, 5101E LIMITED, 5093E,
5101E**



TM112419, August 2012



Table of contents

FOREWORD

Section 210 - GENERAL

- Group 05 - Safety
- Group 10 - General Specifications
- Group 15 - General References

Section 211 - DIAGNOSTIC TROUBLE CODES

- Group CCU - CCU Code Diagnostics
- Group PTR - PTR Code Diagnostics

Section 212 - OBSERVABLE SYMPTOMS

- Group 20 - Engines
- Group 30 - Fuel and Air
- Group 40 - Electrical
- Group 45 - Control Units
- Group 55 - PowrReverser™ Transmissions
- Group 56 - Drive Systems
- Group 60 - Steering and Brakes
- Group 70 - Hydraulics
- Group 90 - Operator Station

Section 213 - SYSTEM DIAGNOSIS

- Group 40 - Starting, Charging and Start Aid
- Group 55 - PowrReverser™ Transmission
- Group 56A - Differential Lock
- Group 56B - MFWD
- Group 56C - Rear PTO
- Group 60A - Steering
- Group 60B - Rear Brakes
- Group 70A - Rear SCV System Diagnosis
- Group 70B - Mid-Mount Control Valve System Diagnosis
- Group 70C - Rear Hitch System Diagnosis
- Group 90 - Air Conditioning

Section 220 - ENGINES

- Group 05 - General Information
- Group 15 - Tests and Adjustments
- Group 20 - Engine System Theory of Operation

Section 230 - FUEL AND AIR

- Group 05 - General Information
- Group 20 - Fuel and Air Theory of Operation

Section 240 - ELECTRICAL SYSTEM—VEHICLE ELECTRICAL CENTER (VEC)

- Group 05 - Vehicle Electrical Center and Fuse/Relay Block
- Group 15 - Tests and Adjustments
- Group 20 - Theory of Operation
- Group 25 - Functional Schematics
- Group 35 - Connector Information

Section 241 - ELECTRICAL SYSTEM—LOAD CENTER (-AUG 2012)

- Group 05 - Load Center and Fuse/Relay Block (-Aug 2012)
- Group 15 - Tests and Adjustments (-Aug 2012)
- Group 20 - Theory of Operation (-Aug 2012)
- Group 25 - Functional Schematics (-Aug 2012)
- Group 35 - Connector Information (-Aug 2012)

Section 242 - ELECTRICAL SYSTEM—LOAD CENTER (AUG 2012-)

Group 05 - Load Center and Fuse/Relay Block (Aug 2012-)

Group 15 - Test and Adjustments (Aug 2012-)

Group 20 - Theory of Operation (Aug 2012-)

Group 25 - Functional Schematics (Aug 2012-)

Group 35 - Connector Information (Aug 2012-)

Section 245 - CONTROL UNITS

Group 05 - General References

Group 15 - Tests and Adjustments

Group CCU - CCU

Group PTR - PTR

Section 255 - POWRREVERSER™ TRANSMISSION

Group 05 - General Information

Group 10 - Preliminary and Operational Checks

Group 15 - Tests and Adjustments

Group 20 - Theory of Operation

Group 25 - Schematics and Diagrams

Section 256 - DRIVE SYSTEMS

Group 05 - General Information

Group 10 - Preliminary and Operational Checks

Group 15 - Tests and Adjustments

Group 20 - Theory of Operation

Group 25 - Schematics and Diagrams

Section 260 - STEERING AND BRAKES

Group 05 - General Information

Group 10 - Preliminary and Operational Checks

Group 15 - Test and Adjustments

Group 20 - Theory of Operation

Section 270 - HYDRAULICS (-AUG 2011)

Group 05 - General Information

Group 10 - Preliminary and Operational Checks

Group 15 - Tests and Adjustments

Group 20 - Theory of Operation

Section 271 - HYDRAULICS (AUG 2011-)

Group 05 - General Information

Group 10 - Preliminary and Operational Checks

Group 15 - Tests and Adjustments

Group 20 - Theory of Operation

Section 290 - OPERATOR'S STATION

Group 05 - General Information

Group 10 - Preliminary and Operational Checks

Group 15 - Tests and Adjustments

Group 20 - Theory of Operation

Section 299 - SERVICE TOOLS

Group 05 - Dealer-Fabricated Tools

Group 10 - Service Tools and Kits

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

CAUTION:

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specification, wear tolerances, and torque values.

Technical manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic types of failures and their causes.



Thank you very much
for your reading.
Please click here
to get more information.