

CRAWLER CRANE

SHOP
MANUAL

model **CKE600**



KOBELCO

BOOK CODE : S5GB00001ZE05

TABLE OF CONTENTS

SAFETY

1. SPECIFICATION

1.1 SPECIFICATION	1-3
1.1.1 PERFORMANCE	1-3
1.1.2 OUTSIDE DIMENSIONS	1-3
1.1.3 DIMENSIONS AND WEIGHT OF EACH PARTS	1-5
1.2 STABILITY IN SWINGING AND TRAVELING	1-12

2. MAINTENANCE STANDARDS

TEST PROCEDURES

2.1 MAINTENANCE STANDARD	2-3
2.1.1 PIN, BUSHING, SPRING, LINING AND SHEAVE	2-3
2.1.2 PROPEL DEVICE	2-10
2.2 PERFORMANCE STANDARD AND TEST PROCEDURE	2-16
2.2.1 OPERATING SPEED	2-16
2.2.2 POINT AND METHOD OF MEASURING PRESSURE	2-17
2.2.3 SLEWING RING	2-21

3. GENERAL WORK STANDARD

3.1 TIGHTENING TORQUE OF CAPSCREWS AND NUTS	3-3
3.1.1 METRIC COARSE THREADS	3-3
3.1.2 METRIC FINE THREADS	3-3
3.1.3 COARSE THREDS UNC	3-4
3.1.4 FINE THREADS UNF	3-4
3.1.5 TIGHTENING TORQUE OF HYDRAULIC FITTINGS	3-5
3.2 STANDARD PARTS	3-7
3.2.1 BOLT	3-7
3.2.2 O-RING	3-8
3.2.3 BACK-UP RING	3-9
3.2.4 BITE FITTING	3-10
3.3 CONVERSION TABLE	3-12
3.3.1 UNIT CONVERSION	3-12
3.3.2 MILLIMETER : INCH CONVERSION TABLE	3-13
3.3.3 METER-FOOT CONVERSION TABLE	3-15
3.3.4 GRADIENT CONVERSION TABLE	3-16
3.4 TABLE OF UNIT WEIGHT	3-17

4. POWER TRAIN

4.1 INTRODUCTION	4-3
------------------------	-----

TABLE OF CONTENTS

4.2	ENGINE.....	4-5
4.2.1	INTRODUCTION	4-5
4.2.2	REMOVAL.....	4-5
4.2.3	REPAIR AND MAINTENANCE	4-6
4.2.4	RE-INSTALLATION.....	4-7
4.3	PUMP DRIVE ASSEMBLY.....	4-11
4.3.1	INTRODUCTION	4-11
4.3.2	REMOVAL	4-11
4.3.3	DISASSEMBLING THE POWER DIVIDER.....	4-13
4.3.4	CHECK AND REPAIR OF THE POWER DIVIDER.....	4-14
4.3.5	ASSEMBLING THE POWER DIVIDER.....	4-15
4.3.6	RE-INSTALLATION	4-16

5. HYDRAULIC SYSTEM

5.1	LOCATION OF MAIN HYDRAULIC COMPONENTS	5-3
5.2	HYDRAULIC CIRCUITS AND COMPONENTS	5-4
5.2.1	HYDRAULIC CIRCUIT	5-4
5.2.2	COMPONENT SPECIFICATIONS	5-7
5.2.3	LOCATION OF HYDRAULIC COMPONENTS.....	5-10
5.3	HYDRAULIC SYSTEM.....	5-17
5.3.1	PREFACE.....	5-17
5.3.2	OUTLINE	5-17
5.3.3	OIL FLOW FROM No.1 and No. 2 PUMPS.....	5-19
5.3.4	OIL FLOW FROM No.3 PUMP	5-22
5.3.5	OIL FLOW FROM No.4 and No.5 PUMPS (FOR MAIN AND AUX. WINCH DRUMS BRAKE COOLING CIRCUIT).....	5-24
5.3.6	OIL FLOW FROM No.6 PUMP (CONTROL PUMP)	5-25
5.3.7	OIL FLOW FROM No.7 PUMP (For Auxiliary Actuator Circuit).....	5-28
5.4	VALVES	5-29

6. HOIST SYSTEM

6.1	APPARATUS AND LOCATION OF COMPONENTS.....	6-3
6.2	CONSTRUCTION AND FUNCTION	6-4
6.2.1	HYDRAULIC SCHEMATIC.....	6-4
6.2.2	LIFTING A LOAD.....	6-6
6.2.3	HOLDING A RAISED LOAD.....	6-8
6.2.4	LOWERING A LOAD (POWERED LOWERING).....	6-10
6.2.5	FREEFALL OPERATION	6-13
6.2.6	FREE FALL ACCELERATION	6-16

TABLE OF CONTENTS

6.2.7	FRONT DRUM/REAR DRUM HYD-CIRCUIT SELECTION	6-19
6.3	ADJUSTMENT OF DRUM LOCK.....	6-23
6.4	BRAKE PEDAL.....	6-24
6.4.1	ASSEMBLY DRAWING	6-24
6.4.2	ADJUSTING THE BRAKE PEDAL	6-26
6.5	BLEEDING AIR FROM BRAKE CIRCUIT	6-27
7. BOOM HOIST SYSTEM		
7.1	APPARATUS AND LOCATION OF COMPONENTS	7-3
7.2	CONSTRUCTION AND FUNCTION	7-5
7.2.1	HYDRAULIC SCHEMATIC.....	7-5
7.2.2	RAISING THE BOOM.....	7-6
7.2.3	NEUTRAL (MAINTAINING THE BOOM POSITION)	7-8
7.2.4	LOWERING THE BOOM	7-10
7.3	BOOM DRUM LOCK.....	7-12
7.3.1	ASSEMBLY DRAWING	7-12
7.3.2	ADJUSTING THE BOOM DRUM LOCK.....	7-13
7.4	REDUCTION UNIT	7-14
8. SWING SYSTEM		
8.1	APPARATUS AND LOCATION OF COMPONENTS	8-3
8.2	CONSTRUCTION AND FUNCTION	8-4
8.2.1	HYDRAULIC SCHEMATIC.....	8-4
8.2.2	SWING.....	8-6
8.2.3	STOPPING	8-8
8.3	SWING REDUCTION UNIT.....	8-10
8.4	SWING BEARING	8-14
8.5	SWING LOCK.....	8-16
9. PROPEL SYSTEM		
9.1	LOCATION OF THE MAJOR COMPONENTS.....	9-3
9.2	CONSTRUCTION AND FUNCTION	9-4
9.2.1	HYDRAULIC SCHEMATIC.....	9-4
9.2.2	PROPELLING (RIGHT SIDE FORWARD)	9-6
9.2.3	STOPPING	9-8
9.3	PROPEL REDUCTION UNIT	9-10
9.3.1	REDUCTION UNIT	9-12
9.3.2	MOTOR	9-14



Thank you very much
for your reading.
Please click here
to get more information.