

WSM

WORKSHOP MANUAL TRACTOR, ROTARY MOWER, FRONT LOADER

BX1850, BX2350, RCK48-18BX,
RCK54-23BX, RCK60B-23BX,
RCK48-23BX, RCK54-23BX,
RCK60B-23BX,

PDF



DOWNLOAD



Kubota

TO THE READER

This Workshop Manual has been prepared to provide servicing personnel with information on the mechanism, service and maintenance of KUBOTA Tractor BX1850, BX2350, KUBOTA Rotary Mower RCK48-18BX, RCK54-23BX, RCK60B-23BX RCK48P-18BX, RCK54P-23BX and KUBOTA Front Loader LA203, LA243. It is divided into three parts, "General", "Mechanism" and "Servicing" for each section.

■ General

Information on the tractor identification, the general precautions, maintenance check list, check and maintenance and special tools are described.

■ Mechanism

Information on the construction and function are included. This part should be understood before proceeding with troubleshooting, disassembling and servicing.

Refer to Diesel Engine / Tractor Mechanism Workshop Manual (Code No. 97897-01873 / 97897-18200) for the one which has not been described to this workshop manual.

■ Servicing

Information on the troubleshooting, servicing specification lists, tightening torque, checking and adjusting, disassembling and assembling and servicing which cover procedures, precautions, factory specifications and allowable limits.

All information illustrations and specifications contained in this manual are based on the latest product information available at the time of publication.

The right is reserved to make changes in all information at any time without notice.

December 2005

© KUBOTA Corporation 2005



Thank you very much
for your reading.
Please click here
to get more information.