

A300

TURBO



Bobcat®

 
Service Manual

S/N 521111001 & Above
S/N 521211001 & Above

PDF



DOWNLOAD

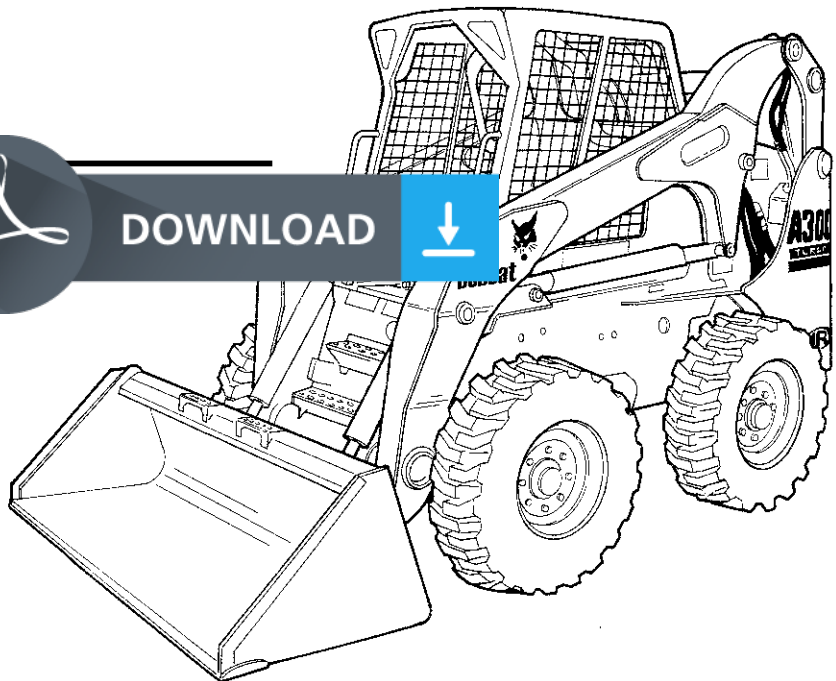

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

6901756 (7-10)

1 of 778

Printed in U.S.A.

© Bobcat Company 2010

Dealer Copy -- Not for Resale

MAINTENANCE SAFETY



WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

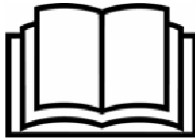

B-10731a

- Never service the Bobcat Skid-Steer Loader without instructions.

 
CORRECT

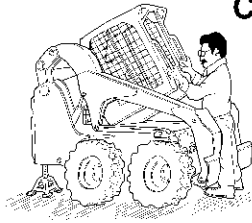

B-16261

- Use the correct procedure to lift or lower operator cab.

 
CORRECT

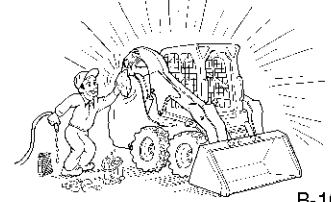

B-16264

- Cleaning and maintenance are required daily.

 
WRONG

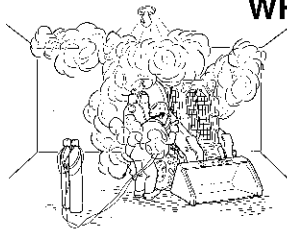

B-16272

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

 
WRONG

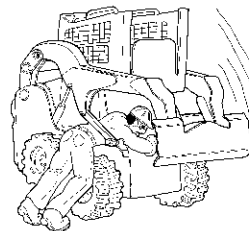

B-16260

- Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 
WRONG

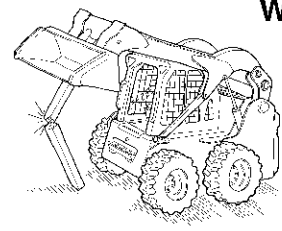

B-16263

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

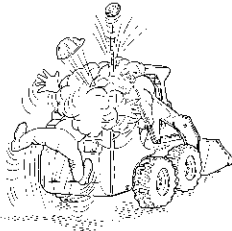

B-16271

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

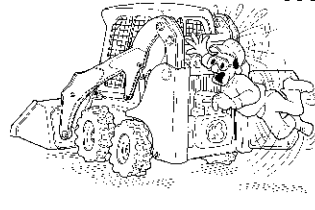

B-16270

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW14-0409

Dealer Copy -- Not for Resale



Bobcat®

ALPHABETICAL INDEX

AWS CONTROLLER	60-01	HEATER COIL	80-01
AIR CLEANER	70-01	HEATER / AC FAN	80-01
AIR CLEANER SERVICE	10-01	HEATER VALVE	80-01
AIR CONDITIONING SERVICE	80-01	HUB	40-01
AIR CONDITIONING SYSTEM FLOW	80-01	HYDRAULIC CONNECTION SPECS	SPEC-01
ALTERNATOR	60-01	HYDRAULIC FLUID RESERVOIR	20-01
		HYDRAULIC FLUID SPECIFICATIONS	SPEC-01
BASIC TROUBLESHOOTING	80-01	HYDRAULIC / HYDROSTATIC FILTER	20-01
BATTERY	60-01	HYDRAULIC / HYDROSTATIC SYSTEM	10-01
BICS™ SYSTEM	60-01	HYDRAULIC PUMP	20-01
BOBCAT 2001 CONTROLLER	60-01	HYDRAULIC SYSTEM INFORMATION	20-01
BOBCAT INTERLOCK		HYDROSTATIC MOTOR	30-01
CONTROL SYSTEM (BICS™)	60-01	HYDROSTATIC MOTOR CARRIER	30-01
BOB-TACH	10-01, 50-01	HYDROSTATIC PUMP	30-01
BRAKE	40-01	HYDROSTATIC SYSTEM INFORMATION	30-01
BUCKET POSITION VALVE	20-01	INSIDE ACCESS PANEL	50-01
		INSTRUMENT PANEL	60-01
CHAINCASE	40-01		
CHARGE PRESSURE	30-01	LIFT ARMS	50-01
CONTROL	50-01	LIFT ARM BYPASS CONTROL VALVE	20-01
CONTROL PANEL	50-01	LIFT ARM SUPPORT DEVICE	10-01
CONVERSIONS	SPEC-01	LIFT AND TILT ACTUATOR CALIBRATION	60-01
COOLING FAN	70-01	LIFTING AND BLOCKING THE LOADER	10-01
COMPONENTS	80-01	LIGHTS	60-01
COMPRESSOR	80-01	LOADER SPECIFICATIONS (A300)	SPEC-01
CONDENSER	80-01	LOADER TORQUES	SPEC-01
CYLINDER (LIFT)	20-01	LUBRICATING THE LOADER	10-01
CYLINDER (POWER BOB-TACH)	20-01		
CYLINDER (STEERING)	20-01	MAIN RELIEF VALVE	20-01
CYLINDER (TILT)	20-01	MUFFLER	70-01
DIAGNOSTICS SERVICE CODES	60-01	OIL COOLER (SEAL TO CONNECT) (STC)	30-01
DRIVE BELT	30-01	OPERATOR CAB	10-01, 50-01
DRIVE COMPONENTS	40-01	OPERATOR SEAT	50-01
		OPERATOR SEAT (SUSPENSION)	50-01
ELECTRICAL / HYDRAULIC CONTROLS			
REFERENCE	60-01	POWER BOB-TACH	10-01, 50-01
ELECTRICAL SYSTEM INFORMATION	60-01	POWER BOB-TACH BLOCK	20-01
ENGINE	70-01	PRESSURE RELIEF VALVE	80-01
ENGINE COMPONENTS AND TESTS	70-01	PRESSURE SWITCH	80-01
ENGINE COOLING SYSTEM	10-01		
ENGINE LUBRICATION SYSTEM	10-01	RADIATOR	70-01
ENGINE SPECIFICATIONS	SPEC-01	REAR AUXILIARY DIVERTER	20-01
ENGINE SPEED CONTROL	70-01	REAR DOOR	50-01
EVAPORATOR	80-01	REAR GRILL	50-01
EVAPORATOR / HEATER UNIT	80-01	RECEIVER / DRIER	80-01
EXPANSION VALVE	80-01	RECONDITIONING THE ENGINE	70-01
		REGULAR MAINTENANCE	80-01
FAN GEARBOX	10-01	REMOTE START	10-01
FINAL DRIVE TRANSMISSION (CHAINCASE) ..	10-01		
FLYWHEEL AND HOUSING	70-01	SAFETY	80-01
FUEL SYSTEM	10-01	SEAT BAR	50-01
FUEL TANK	50-01	SEAT BAR SENSOR	60-01
		SELECT VALVE	20-01
GENERAL AIR CONDITIONING		SERVICE PC (LAPTOP COMPUTER)	60-01
SERVICE GUIDELINES	80-01	SERVICE SCHEDULE	10-01

Dealer Copy -- Not for Resale



Thank you very much
for your reading.
Please click here
to get more information.