


# T140



# Bobcat®

## Service Manual

S/N 527111001 & Above  
S/N 527211001 & Above

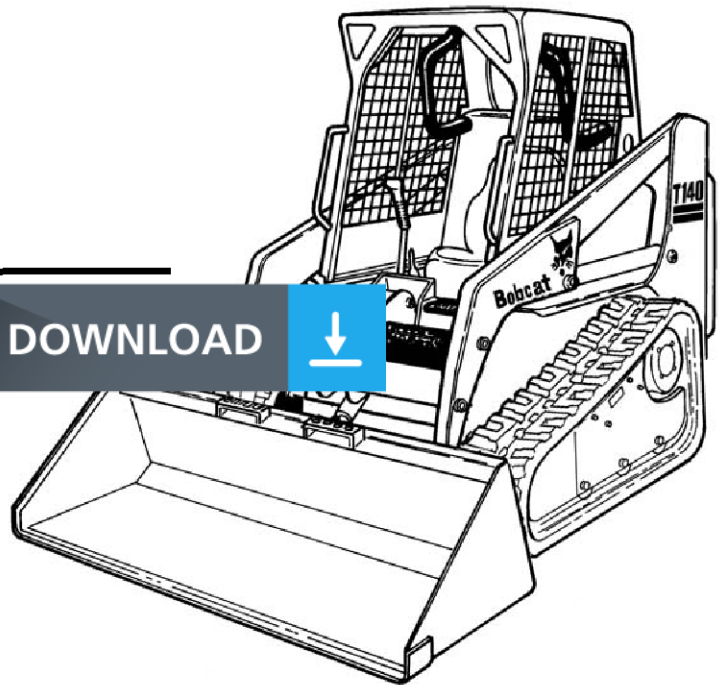

Dealer Copy -- Not for Resale

EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)



## ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS)	
SELECTRABLE HAND/FOOT CONTROL.....	60-01
ALTERNATOR .....	60-01
AIR CLEANER SERVICE .....	10-01, 70-01
BASIC TROUBLESHOOTING .....	80-01
BATTERY .....	60-01
BICS™ SYSTEM .....	60-01
BOBCAT CONTROLLER .....	60-01
BOB-TACH.....	10-01, 50-01
BRAKE .....	40-01
BUCKET POSITION VALVE.....	20-01
CHARGE PRESSURE .....	30-01
COMPONENTS .....	80-01
CONTROL HANDLE .....	50-01
CONTROL PANEL .....	50-01
CONTROL PEDALS .....	50-01
CONTROL PEDALS (ACS) .....	50-01
CONVERSIONS .....	SPEC-01
COOLING FAN .....	70-01
CYLINDER (LIFT) .....	20-01
CYLINDER (POWER BOB-TACH).....	20-01
CYLINDER (TILT) .....	20-01
DIAGNOSTICS SERVICE CODES.....	60-01
DRIVE BELT .....	30-01
DRIVE COMPONENTS .....	40-01
ELECTRICAL/HYD. CONTROLS REFERENCE ....	60-01
ELECTRICAL SYSTEM INFORMATION .....	60-01
ENGINE .....	70-01
ENGINE COMPONENTS AND TESTING .....	70-01
ENGINE COOLING SYSTEM.....	10-01
ENGINE LUBRICATION SYSTEM .....	10-01
ENGINE SPECIFICATIONS.....	SPEC-01
ENGINE SPEED CONTROL .....	70-01
FAN GEARBOX .....	10-01
FINAL DRIVE TRANSMISSION (CHAINCASE).....	10-01
FLYWHEEL AND HOUSING.....	70-01
FLYWHEEL RPM SENSOR.....	60-01
FRONT AUXILIARY HYDRAULIC	
COUPLER BLOCK .....	20-01
FUEL SYSTEM.....	10-01
FUEL TANK.....	50-01
HEATER UNIT .....	80-01
HEATER COIL .....	80-01
HEATER FAN .....	80-01
HEATER VALVE.....	80-01
HYDRAULIC CONNECTION SPECS.....	SPEC-01
HYDRAULIC CONTROL VALVE (ADVANCED	
CONTROL SYSTEM) (ACS).....	20-01
HYDRAULIC CONTROL VALVE	
(FOOT CONTROL) .....	20-01
HYDRAULIC FLUID RESERVOIR .....	20-01
HYDRAULIC/HYDROSTATIC FILTER .....	20-01
HYDRAULIC FLUID SPECIFICATIONS.....	SPEC-01
HYDRAULIC/HYDROSTATIC SYSTEM.....	10-01
HYDRAULIC SYSTEM INFORMATION .....	20-01
HYDRAULIC PUMP .....	20-01
HYDROSTATIC MOTOR .....	30-01
HYDROSTATIC PUMP .....	30-01
HYDROSTATIC SYSTEM INFORMATION.....	30-01
INSTRUMENT PANEL .....	60-01
LIFT ARM .....	50-01
LIFT ARM BY-PASS CONTROL VALVE.....	20-01
LIFT ARM SUPPORT DEVICE.....	10-01
LIFTING AND BLOCKING THE LOADER.....	10-01
LIGHTS.....	60-01
LOADER SPECIFICATIONS .....	SPEC-01
LUBRICATION OF THE BOBCAT LOADER .....	10-01
MAIN RELIEF VALVE .....	20-01
MUFFLER.....	70-01
OIL COOLER.....	30-01
OPERATOR CAB .....	10-01, 50-01
OPERATOR SEAT .....	50-01
POWER BOB-TACH.....	10-01, 50-01
POWER BOB-TACH BLOCK.....	20-01
RADIATOR.....	70-01
REAR AUXILIARY DEVERTER .....	20-01
REAR DOOR .....	50-01
REAR GRILL .....	50-01
RECONDITIONING THE ENGINE .....	70-01
REGULAR MAINTENANCE .....	80-01
REMOTE START .....	10-01
SEAT BAR.....	50-01
SEAT BAR SENSOR.....	60-01
SERVICE SCHEDULE.....	10-01
SPARK ARRESTOR MUFFLER.....	10-01
STARTER .....	60-01
SYSTEM TROUBLESHOOTING CHART .....	80-01
TORQUE SPECIFICATIONS FOR BOLTS .....	SPEC-01
TOWING THE LOADER.....	10-01
TRACTION LOCK .....	60-01
TRANSPORTING THE LOADER.....	10-01
TROUBLESHOOTING .....	70-01

Dealer Copy -- Not for Resale



**Bobcat®**

# MAINTENANCE SAFETY



 
## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

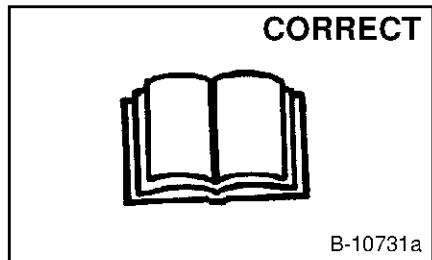


⚠ Never service the Bobcat Compact Track Loader without instructions.

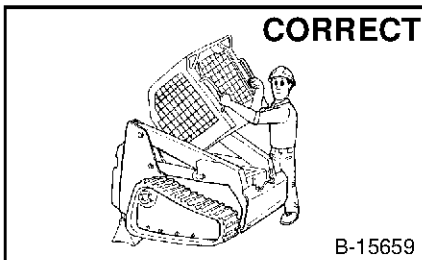

 
⚠ Use the correct procedure to lift or lower operator cab.

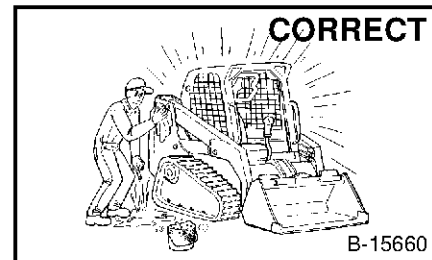

 
⚠ Cleaning and maintenance are required daily.

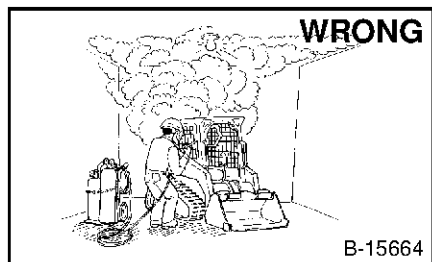


⚠ Have good ventilation when welding or grinding painted parts.  
 ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.  
 ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

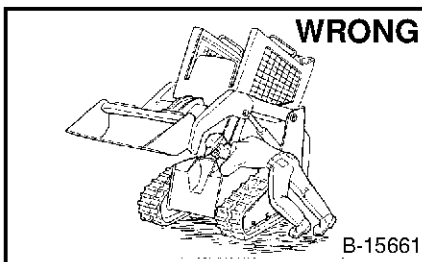


⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

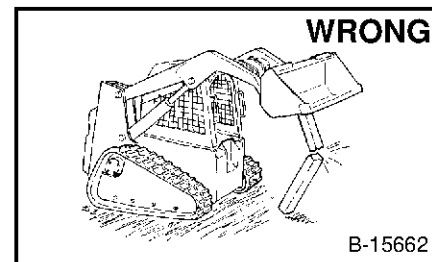

⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.  
 ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

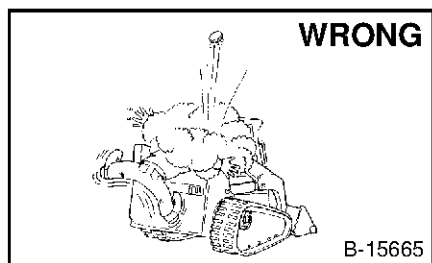

⚠ Stop, cool and clean engine of flammable materials before checking fluids.  
 ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.  
 ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.  
 ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

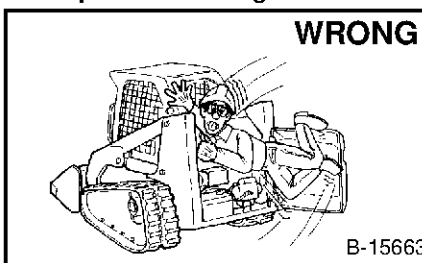

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.  
 ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.  
 ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.



⚠ Lead-acid batteries produce flammable and explosive gases.  
 ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.  
 ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Dealer Copy -- Not for Resale

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW09-0805



Thank you very much  
for your reading.  
Please click here  
to get more information.