


Service Manual T140 Compact Track Loader

S/N 529311001 & Above S/N 531311001 & Above S/N A8M511001 & Above

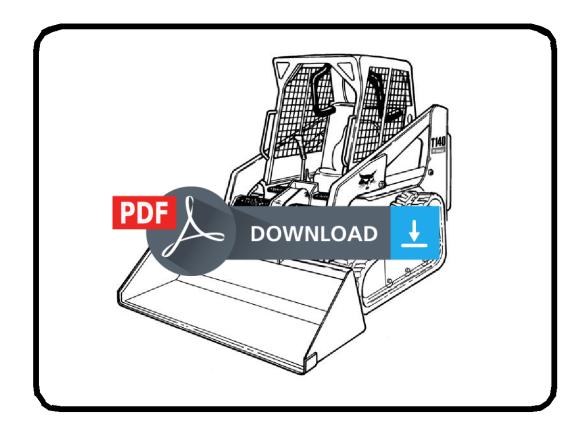

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)



MAINTENANCE SAFETY




Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0807

A

Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

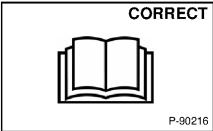

Never service the Bobcat Compact Track Loader without instructions.

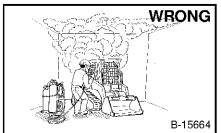

Have good ventilation when welding or grinding painted parts.

Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.



A Stop, cool and clean engine of flammable materials before checking fluids.


Never service or adjust loader with the engine running unless instructed to do so in the manual.

Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.

Never fill fuel tank with engine running, while smoking or when near open flame.



Use the correct procedure to lift or lower operator cab.

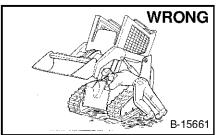


Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.




Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.

wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

Keep rear door closed except for service. Close and latch door before operating the loader.

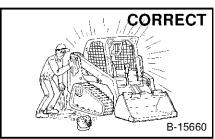

Cleaning and maintenance are required daily.

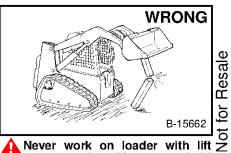

Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.

Never modify equipment or add attachments not approved by Bobcat Company.



Lead-acid batteries produce flammable and explosive gases.

Keep arcs, sparks, flames and lighted tobacco away from batteries.

Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL. Always use genuine Bobcat replacement parts**. The Service Safety Training Course is available from your Bobcat dealer.

MSW09-0409



ALPHABETICAL INDEX

ALTERNATOR		FUEL TANK	50-01
AIR CLEANER			
AIR CLEANER SERVICE	10-01	HEATER COIL	
		HEATER FAN	
BACK-UP ALARM SYSTEM		HEATING SYSTEM	
BATTERY	60-01	HEATER UNIT	80-01
BOBCAT INTERLOCK CONTROL		HEATER VALVE	80-01
SYSTEM (BICS)	60-01	HYDRAULIC CONNECTION	
BOBCAT CONTROLLER (ACS)	60-01	SPECIFICATIONS	SPEC-01
BOBCAT CONTROLLER (MAIN)	60-01	HYDRAULIC CONTROL VALVE (ACS) OR (SJ	
BOBCAT CONTROLLER (SJC) (DRIVE)	60-01	HYDRAULIC CONTROL VALVE (STANDARD)	20-01
BOB-TACH (HAND LEVER)		HYDRAULIC FLUID RESERVOIR	
BOB-TACH (POWER)		HYDRAULIC/HYDROSTATIC FILTERS	
BOB-TACH (POWER) BLOCK		HYDRAULIC / HYDROSTATIC FLUID	
BRAKE		SPECIFICATIONS	SPEC-01
BUCKET POSITION VALVE		HYDRAULIC/HYDROSTATIC SYSTEM	
DOOKETT COTTON VALVE	20-01	HYDRAULIC PUMP (SJC)	
CAMSHAFT AND TIMING GEARS	70-01	HYDRAULIC PUMP (STANDARD)	
CASE DRAIN FILTER		HYDRAULIC SYSTEM INFORMATION	
CALIBRATION		HYDROSTATIC MOTOR	
CHARGE PRESSURE			
		HYDROSTATIC PUMP	
CONTROL HANDLE / LEVER		HYDROSTATIC PUMP (SJC)	30-01
CONTROL HANDLE / LEVER (ACS)		HYDROSTATIC SYSTEM INFORMATION	30-01 हु
CONTROL HANDLE / LEVER (SJC)		INSTRUMENT PANELS	S
CONTROL PANEL		INSTRUMENT PANELS	60-01 ₾
CONTROL PANEL (SJC)			ō
CONTROL PANEL SETUP		LIFT ARMS	50-01 🚃
CONTROL PEDALS AND LINKAGES		LIFT ARM BYPASS CONTROL VALVE	
CONTROL PEDALS (ACS)		LIFT ARM SUPPORT DEVICE	
CONTROL SYSTEM (ACS)		LIFTING AND BLOCKING THE LOADER	
CONVERSIONS		LIGHTS	60-01 응
CRANKSHAFT AND PISTONS	70-01	T140 LOADER SPECIFICATIONS	SPEC-01 O
CYLINDER (BOB-TACH)	20-01	LOADER STORAGE AND RETURN	er
CYLINDER (LIFT)	20-01	TO SERVICE	10-01 📆
CYLINDER (TILT)	20-01	LUBRICATING THE LOADER	10-01 ద
CYLINDER HEAD		LUBRICATION SYSTEM	70-01
DIAGNOSTICS SERVICE CODES		MAIN RELIEF VALVE	
DRIVE BELT	30-01	MAINTENANCE CLOCK	
		MUFFLER	70-01
ELECTRICAL/HYD. CONTROLS	60-01		
ELECTRICAL/HYDRAULIC CONTROLS		OIL COOLER	
REFERENCE (SJC)		OPERATOR CAB10-	
ELECTRICAL SYSTEM INFORMATION	60-01	OPERATOR SEAT (SUSPENSION)	50-01
ENGINE COOLING SYSTEM	10-01, 70-01	·	
ENGINE INFORMATION		PASSWORD SETUP (IF EQUIPPED WITH	
ENGINE LUBRICATION SYSTEM		KEYLESS START)	60-01
ENGINE SPECIFICATIONS		PIVOT PINS	
ENGINE SPEED CONTROL			
ENGINE SPEED CONTROL (SJC)		REAR AUXILIARY DEVERTER	20-01
		REAR DOOR	
FLYWHEEL AND HOUSING	7∩-∩1	REAR GRILL	
FLYWHEEL RPM SENSOR		REGULAR MAINTENANCE	
FRONT AUXILIARY HYDRAULIC		REMOTE START TOOL KIT-MEL1563	
COUPLER BLOCK	20.01	REMOTE START TOOL (SERVICE TOOL)	10-01
FUEL SYSTEM		KIT-6689779	10.01
I OLL OTOTLINI	10-01, 70-01	IXIT-0003113	10-01



Thank you very much for your reading.

Please click here to get more information.