



SERVICE MANUAL

LOAD EXCAVATOR

ZX75

ZX125



TABLE OF CONTENTS

Service Manual

TITLE	PAGE
LOAD EXCAVATOR ZX75	5
Diesel Engine	6
Electrical System.....	6
Transmission.....	6
Travel Range.....	6
Working Hydraulics.....	7
Pressure and Setting Values (Working)	7
Slew Drive.....	8
Lubricants	8
Maintenance Parts	8
Capacities	8
Hydraulic System	9
Electrical System.....	30
Power Supply	31
Horn	32
Check Module	33
Load Warning Sensor	34
Load Warning Device	35
Joystick, Right.....	36
Working Floodlights.....	37
Reach Limitation	38
Control Module	39
Charge Indicators	41
Oil Pressure Indicators	41
Air Filter Indicators	41
Hydraulic Oil Filter Indicators	41
Hydraulic Oil Level	41
Working Hydraulics.....	42
Breaker.....	42
Fast Travel	42
Float Position	43
Swing Brake	43
Additional Control Circuit I	44
Additional Control Circuit II	44
Inspection Plan	45
Operator Controls	48
Instrument Panel	49
Working Equipment Parallel to Tracks	50
Cabin Suspension	51
Instructions for Tilting the Cabin	52

Dealer Copy -- Not for Resale

TABLE OF CONTENTS

Service Manual

TITLE	PAGE
LOAD EXCAVATOR ZX125	53
Diesel Engine	54
Electrical System	54
Transmission	54
Travel Range	54
Working Hydraulics	55
Pressure and Setting Values (Travel)	55
Slew Drive	56
Lubricants	56
Maintenance Parts	56
Capacities	56
Hydraulic Installations	57
Setting Instructions	61
Function	62
Adjustment	62
Power Control Valve	63
Description of Function	65
Test and Pressure Setting	66
Rexroth Valve Bank SX 18	68
Start-Up	71
Brakes (Downhill)	71
Electrical System	72
Power Supply	73
Horn	74
Check Module	75
Hydraulic Oil Level	76
Load Warning Device	77
Working Hydraulics	78
Joystick, Left	79
Restriction of Reach	80
Working Floodlights	81
Check Module	82
Inspection Plan	84
Operator Controls	87
Instrument Panel	88

Dealer Copy -- Not for Resale

Load Excavator ZX75



Dealer Copy -- Not for Resale



Thank you very much
for your reading.
Please click here
to get more information.