

JCB 2115,2125,2135,2140,2150,3155,3185 Fastrac Service Repair Manual



Articulated Dump Truck - 722

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Hydraulic Steering](#)

[Section K - Engine](#)

[Section S - Suspension](#)



Publication No.
9803/7170-05



Copyright © 2007 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Service, Model Parts Centre, Searhurst, Littlehampton, Baffinsdown, ST14 6PA, England. Tel +44 1995 980217 Fax +44 1995 980277

World Class
Customer Support

Contents	Page No.
Maintenance	
Health and Safety	3 - 1
Lubricants	3 - 1
Introduction	3 - 1
Hygiene	3 - 1
Storage	3 - 1
Waste Disposal	3 - 1
Handling	3 - 1
First Aid - Oil	3 - 2
Spillage	3 - 2
Fires	3 - 2
Battery	3 - 3
First Aid - Electrolyte	3 - 3
GETS INTO YOUR EYES	3 - 3
IS SWALLOWED	3 - 3
GETS ONTO YOUR SKIN	3 - 3
Warning Symbols	3 - 3
General Safety	3 - 5
General Precautions	3 - 5
Service Schedules	3 - 6
Introduction	3 - 6
Periodic Replacement of Safety Related Components	3 - 13
Lubricants and Capacities	3 - 14
ROPS/FOPS Structure	3 - 15
Checking for Damage	3 - 16
Damage	3 - 16
Cleaning the Machine	3 - 16
Checking the Seat Belt Security and Condition	3 - 16
Articulation Lock	3 - 17
Installing the Articulation Lock	3 - 17
Stowing the Articulation Lock	3 - 18
Oscillation Lock	3 - 19
General	3 - 19
Fitting the Oscillation Lock	3 - 19
Stowing the Oscillation Lock	3 - 20
Tipper Body Safety Support	3 - 21
Fitting	3 - 21
Stowing	3 - 21
Engine Cover	3 - 22
Opening the Engine cover	3 - 22
Closing the Engine Cover	3 - 22
Greasing	3 - 23
Tipper Body Rams and Body Pivot Points	3 - 23
Centre Pivot and Steering Rams	3 - 24
Propshafts	3 - 25
Centre Bearing Carrier	3 - 25
Hydraulic Suspension Cylinder	3 - 25
Propshaft Centre Bearing	3 - 26
Checking the Oil Level	3 - 26
Draining and Refilling the Oil	3 - 26
Parking Brake	3 - 28
Adjusting the Parking Brake	3 - 28
Checking the Parking Brake Pad Wear	3 - 28
Test the Parking Brake	3 - 30

ROPS/FOPS Structure

WARNING

If the machine is fitted with a Roll Over Protection Structure (ROPS) and a Falling Objects Protection Structure (FOPS). You could be killed or seriously injured if you operate the machine with a damaged or missing ROPS/FOPS. If the ROPS/FOPS has been in an accident, do not use the machine until the structure has been renewed. Modifications and repairs that are not approved by the manufacturer may be dangerous and will invalidate the ROPS/FOPS certification.

INT-3-1-8_4

- 1 Check the structure for damage.
- 2 Make sure the ROPS/FOPS rear mounting bolts **A** and front mounting bolts **B** are in place and undamaged.
- 3 Make sure the ROPS/FOPS rear mounting bolts **A** and front mounting bolts **B** are tightened to the correct torque setting. This is 330 Nm (243 lbf ft).

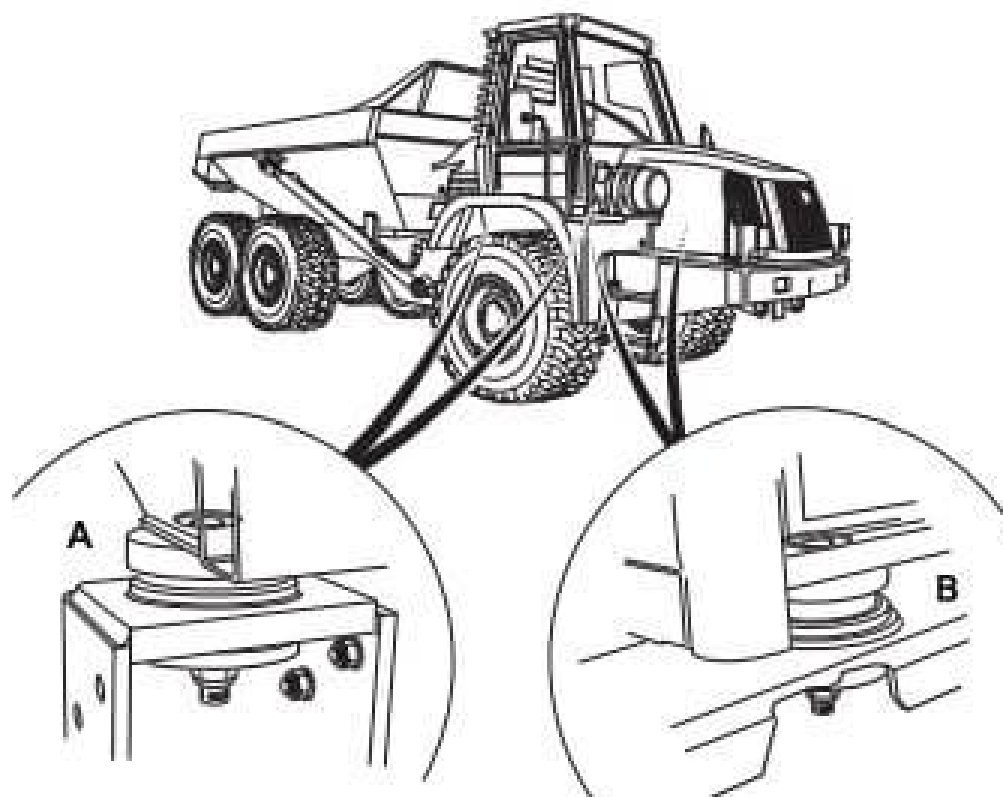


Fig 1.



Thank you very much
for your reading.
Please click here
to get more information.