

JCB 926,930,940 Rough Terrain Fork Lift Service Repair Manual





JS290 - Tier III Auto

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section B - Body & Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section J - Track and Running Gear](#)

[Section K - Engine](#)



Publication No.
9803/9800-3



Copyright © 2004 JCB SERVICES. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICES.

Issued by JCB Technical Publications, JCB Operational Training, Villacrosse, Rossau, Staffordshire, ST14 6BN, England. Tel: +44 (0)800 081000 Fax: +44 (0)800 081000

World Class
Customer Support

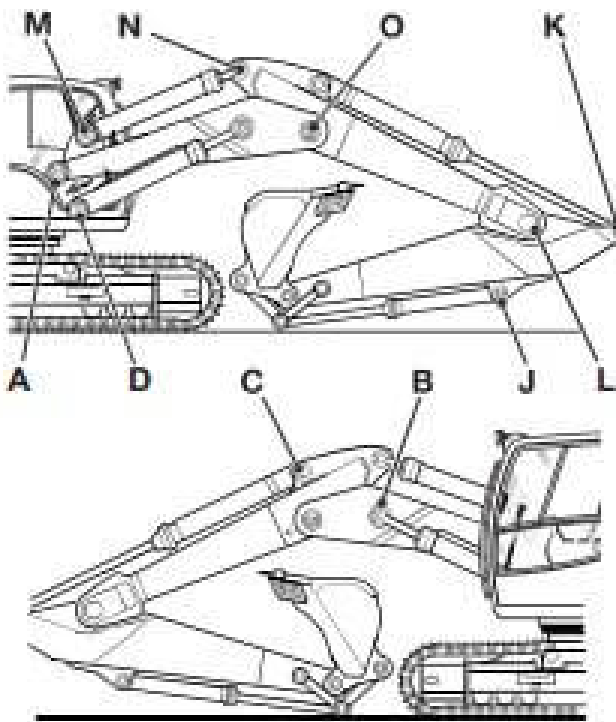


Fig 11.

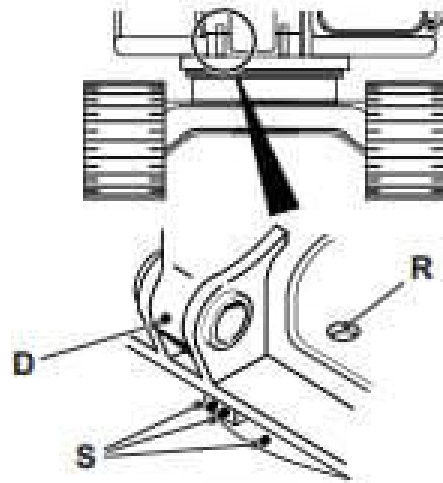


Fig 13.

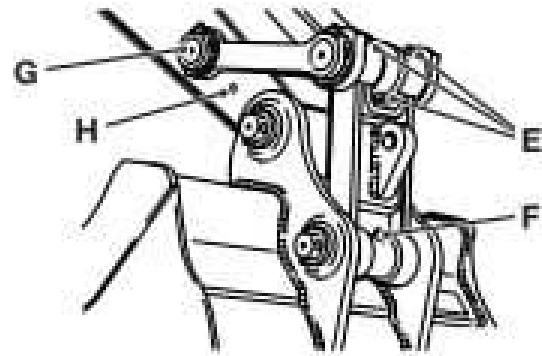


Fig 14.

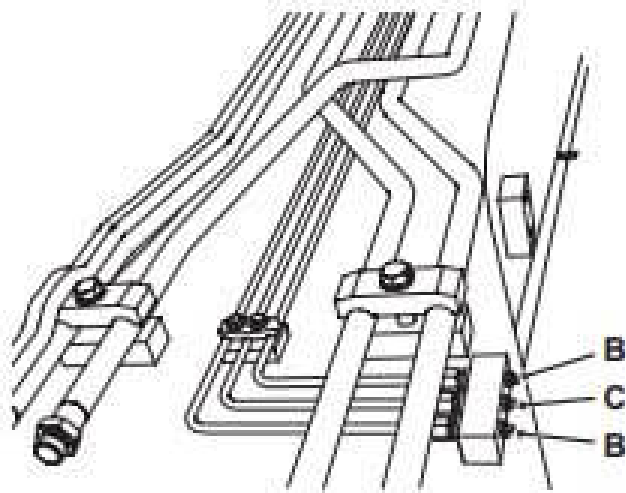


Fig 12.

Fuel System

Introduction

⚠ WARNING

Fuel

Fuel is flammable; keep naked flames away from the fuel system. Stop the engine immediately if a fuel leak is suspected. Do not smoke while refuelling or working on the fuel system. Do not refuel with the engine running. Completely wipe off any spilt fuel which could cause a fire. There could be a fire and injury if you do not follow these precautions.

INT-3-2-2_3

⚠ WARNING

Fine jets of fluid at high pressure can penetrate the skin. Keep face and hands well clear of pressurised fluid and wear protective glasses. If fluid penetrates your skin, get medical help immediately.

0177

⚠ CAUTION

Do not allow dirt to enter the system. Before disconnecting any part of the system, thoroughly clean around the connection. When a component has been disconnected, always fit protective caps and plugs to prevent dirt ingress.

Failure to follow these instructions will lead to dirt entering the system. Dirt in the system will seriously damage the systems components and could be expensive to repair.

INT-3-3-12

⚠ CAUTION

Running the engine with air in the system could damage the fuel injection pump. After maintenance, the system must be bled to remove any air.

3-3-11

Draining Fuel Tank Impurities

- 1 Stop the engine and remove the key.
- 2 Remove screws and take off the cover plate from below the fuel tank.
- 3 Position a suitable container under the drain.

Note: The machine is fitted with a self sealing drain plug X.

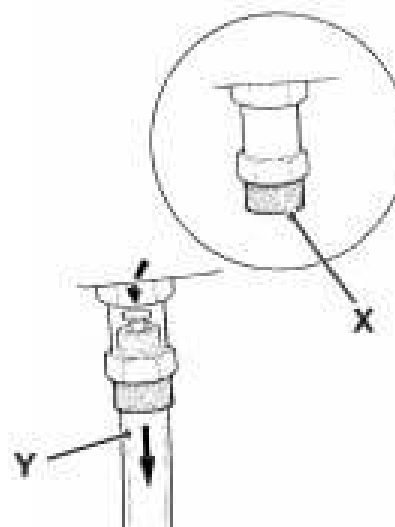


Fig 40.

- 4 Remove the self sealing drain plug outer threaded cover.
- 5 Fit the self sealing drain kit threaded union with attached pipe Y. Drain water and deposits until clean diesel oil flows.
- 6 Remove the self seal drain kit, clean and refit the outer cover. Do not over tighten the cover.



Thank you very much
for your reading.
Please click here
to get more information.