

Shop Manual

WHEEL LOADER

GALEO

WA470-6

WA480-6

SERIAL NUMBERS	WA470-	85001	and up
	WA480-	85001	

PDF



DOWNLOAD



ecot3

KOMATSU

WHEEL LOADER

WA470-6

WA480-6

Machine model Serial number

WA470-6

85001 and up

WA480-6

85001 and up

00 Index and foreword

Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

O: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00783-03
00 Index and foreword	SEN00785-03
Index	SEN00802-03 ●
Foreword and general information	SEN00803-01
01 Specification	SEN00787-00
Specification and technical data	SEN00804-00
10 Structure, function and maintenance standard	SEN00796-01
Engine and cooling system	SEN01301-00
Power train	SEN01302-00
Steering system	SEN01303-00
Brake system	SEN01304-00
Undercarriage and frame	SEN01305-00
Hydraulic system, Part 1	SEN01306-01
Hydraulic system, Part 2	SEN01307-00
Work equipment	SEN01308-00
Cab and its attachments	SEN01309-00
Electrical system, Part 1	SEN01310-00
Electrical system, Part 2	SEN01311-00
Electrical system, Part 3	SEN01312-00
20 Standard value table	SEN00797-00
Standard service value table	SEN01313-00
30 Testing and adjusting	SEN00798-00
Testing and adjusting, Part 1	SEN01589-00
Testing and adjusting, Part 2	SEN01590-00
Testing and adjusting, Part 3	SEN01591-00
40 Troubleshooting	SEN00799-00
Failure code table and fuse locations	SEN01691-00
General information on troubleshooting	SEN01692-00
Troubleshooting by failure code (Display of code), Part 1	SEN01693-00
Troubleshooting by failure code (Display of code), Part 2	SEN01694-00
Troubleshooting by failure code (Display of code), Part 3	SEN01695-00
Troubleshooting by failure code (Display of code), Part 4	SEN01696-00

Troubleshooting by failure code (Display of code), Part 5	SEN01697-00
Troubleshooting by failure code (Display of code), Part 6	SEN01698-00
Troubleshooting by failure code (Display of code), Part 7	SEN01699-00
Troubleshooting by failure code (Display of code), Part 8	SEN01700-00
Troubleshooting by failure code (Display of code), Part 9	SEN01701-00
Troubleshooting by failure code (Display of code), Part 10	SEN01702-00
Troubleshooting of electrical system (E-mode)	SEN01703-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01704-00
Troubleshooting of engine (S-mode)	SEN01705-00
50 Disassembly and assembly	SEN00800-00
General information on disassembly and assembly	SEN02202-00
Engine and cooling system	SEN02203-00
Power train, Part 1	SEN02204-00
Power train, Part 2	SEN02205-00
Undercarriage and frame	SEN02206-00
Hydraulic system	SEN02207-00
Work equipment	SEN02208-00
Cab and its attachments	SEN02209-00
Electrical system	SEN02210-00
90 Diagrams and drawings	SEN00801-01
Hydraulic diagrams and drawings	SEN00805-00
Electrical diagrams and drawings	SEN00806-01 ●



Thank you very much
for your reading.
Please click here
to get more information.