

Shop Manual

WHEEL LOADER

GALEO

WA500-6

SERIAL NUMBERS 55001 and up

PDF



DOWNLOAD



ecot3

KOMATSU

WHEEL LOADER

WA500-6

Machine model	Serial number
WA500-6	55001 and up

00 Index and foreword

Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

O: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00236-05
00 Index and foreword	SEN00575-05
Index	SEN00701-05 ●
Foreword and general information	SEN00702-02 ●
01 Specification	SEN00576-01
Specification and technical data	SEN00703-01 ●
10 Structure, function and maintenance standard	SEN00577-01
Engine and cooling system	SEN00704-00
Power train, Part 1	SEN00705-01 ●
Power train, Part 2	SEN00864-01 ●
Steering system	SEN00706-01 ●
Brake system	SEN00707-01 ●
Undercarriage and frame	SEN00708-01 ●
Hydraulic system, Part 1	SEN00709-01 ●
Hydraulic system, Part 2	SEN00875-01 ●
Work equipment	SEN00710-01 ●
Cab and its attachments	SEN00711-01 ●
Electrical system, Part 1	SEN00712-01 ●
Electrical system, Part 2	SEN00713-01 ●
Electrical system, Part 3	SEN00874-01 ●
20 Standard value table	SEN00578-02
Standard service value table	SEN00724-02
30 Testing and adjusting	SEN00579-02
Testing and adjusting, Part 1	SEN00725-02
Testing and adjusting, Part 2	SEN00726-02
Testing and adjusting, Part 3	SEN00727-01
Testing and adjusting, Part 4	SEN00728-01
40 Troubleshooting	SEN00580-01
General information on troubleshooting	SEN00729-00
Troubleshooting by failure code (Display of code), Part 1	SEN00730-01



Thank you very much
for your reading.
Please click here
to get more information.