

6

5

3

 


Service Manual

PDF



DOWNLOAD

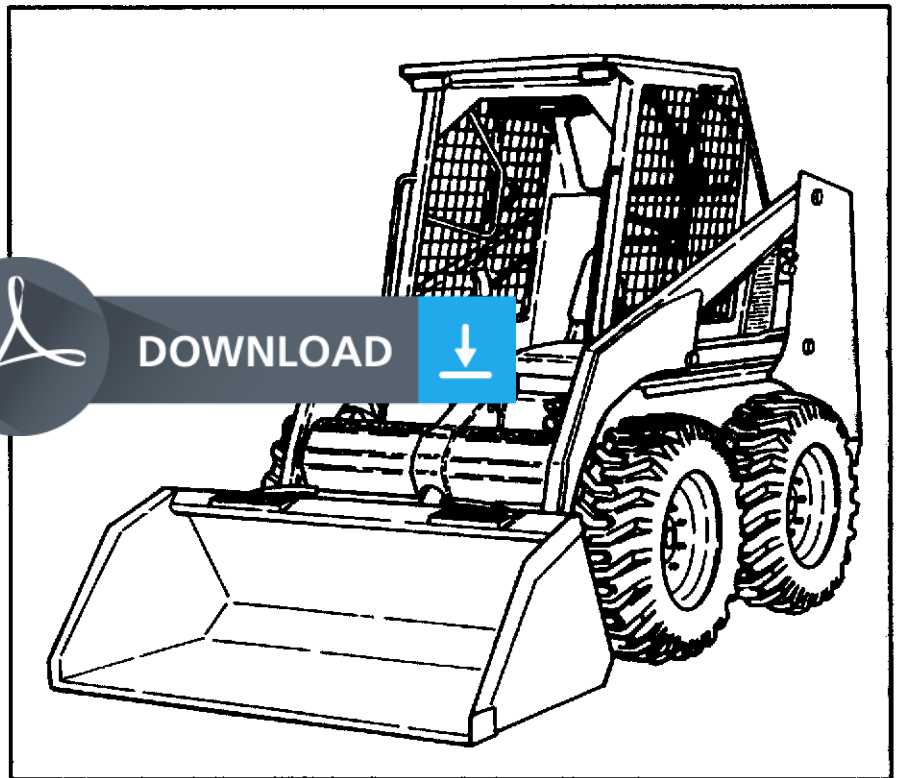

Dealer Copy -- Not for Resale

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

**MELROE
INGERSOLL-RAND**

6724493 (12-95) Revised (1-97)

Printed in U.S.A.



© Melroe Company 1997

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

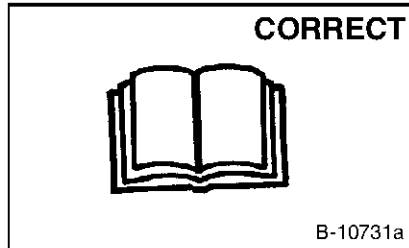

 
⚠ Never service the Bobcat Skid-Steer Loader without instructions.

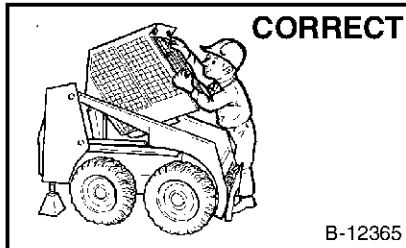

 
⚠ Use the correct procedure to lift or lower operator cab.

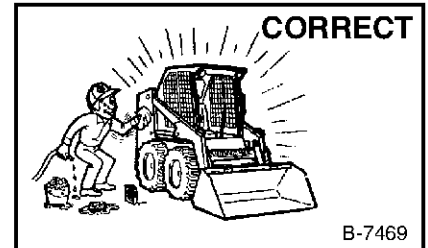

 
⚠ Cleaning and maintenance are required daily.

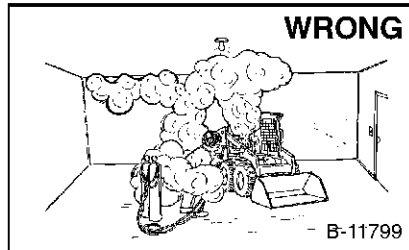

 
- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

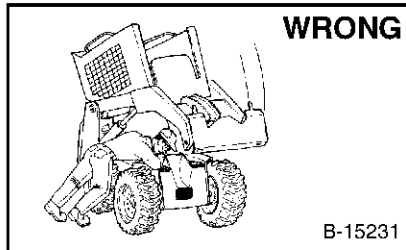

 
⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

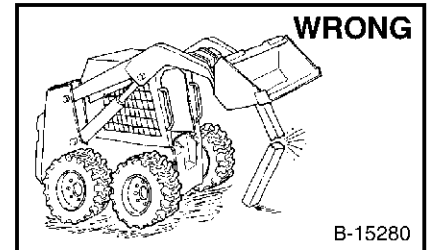

 
- ⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

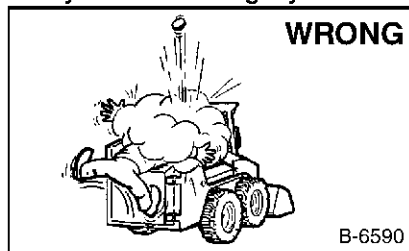

 - ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

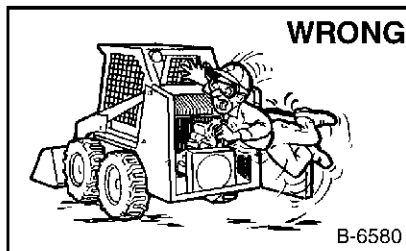

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.

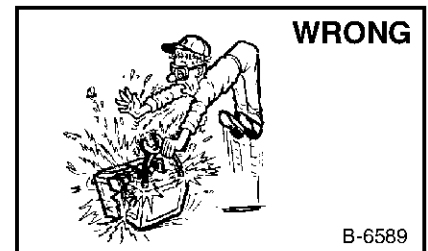 

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**. The Service Safety Training Course is available from your Bobcat dealer.

MSW01-0805



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	7-1	OIL COOLER	3-1
AIR CLEANER SERVICE	1-1	OPERATOR CAB	1-1, 5-1
ALTERNATOR	6-1	OPERATOR CAB GAS CYLINDER	5-1
ALTERNATOR BELT	1-1	OPERATOR SEAT	5-1
AXLE SEAL	4-1		
AXLE, SPROCKET AND BEARINGS	4-1	PARKING BRAKE	4-1
		PARKING BRAKE DISC	4-1
BATTERY	6-1	PEDAL INTERLOCK LINKAGE	2-1
BICS™ SYSTEM CONTROLLER	8-1	PEUGEOT ENGINE TOOL KIT	7-1
BLOWER HOUSING/FAN GEAR BOX	7-1	PISTONS AND CONNECTING RODS	7-1
BOB-TACH	5-1		
BOBCAT INTERLOCK CONTROL		RADIATOR	7-1
SYSTEM (BICS™)	8-1	REAR DOOR	5-1
		REAR GRILL	5-1
CHAINCASE COVERS	4-1	RELAY SWITCHES	6-1
CHAINCASE FLUID	4-1	REMOTE START SWITCH	1-1
CONTROL PEDALS	2-1		
CONTROL PANEL	3-1	SEAT BAR	5-1
CRANKSHAFT AND BEARINGS	7-1	SEAT BAR RESTRAINT SYSTEM	1-1
CRANKSHAFT PULLEY	7-1	SEAT BAR SENSOR	8-1
CYLINDER HEAD	7-1	SEAT SENSOR	8-1
CYLINDER LOCATION & COMPRESSION	7-1	SERVICE SCHEDULE	1-1
		SPARK ARRESTOR MUFFLER	1-1
DECIMAL & MILLIMETER EQUIVALENTS	9-1	SPRING LOADED DRIVE IDLER	3-1
DRIVE BELT	1-1	STANDARD INSTRUMENT PANEL	6-1
DRIVE BELT HOUSING	3-1	STANDARD TORQUE SPECIFICATIONS	
DRIVE BELT TENSIONER PULLEY	3-1	FOR BOLTS	9-1
DRIVE CHAIN	4-1	STARTER	6-1
		STEERING LINKAGE	3-1
ELECTRICAL SYSTEM INFORMATION	6-1	STOPPING THE BOBCAT LOADER	1-1
ENGINE	7-1	TILT CYLINDER	2-1
ENGINE BLOCK	7-1	TILT LOCK VALVE	8-1
ENGINE COOLING SYSTEM	1-1	TIMING BELT	7-1
ENGINE LUBRICATION SYSTEM	1-1	TIRE MAINTENANCE	1-1
ENGINE MUFFLER	7-1	TOWING THE LOADER	1-1
ENGINE SPECIFICATIONS	9-1	TORQUE SPECIFICATIONS FOR LOADER	9-1
ENGINE SPEED CONTROL	7-1	TRACTION LOCK	8-1
ENGINE TORQUE	7-1	TRANSPORTING THE LOADER	1-1
		TROUBLESHOOTING	2-1, 3-1 6-1, 7-1
FAN GEARBOX	1-1, 7-1		
FINAL DRIVE TRANSMISSION (CHAINCASE)	1-1	U.S. TO METRIC CONVERSION	9-1
FRONT LIGHTS	6-1		
FUEL INJECTION PUMP	7-1		
FUEL INJECTOR NOZZLE	7-1		
FUEL SYSTEM	1-1		
FUEL TANK	5-1		
GLOW PLUGS	7-1		
GLOW PLUG RELAY	6-1		
HYDRAULIC CONTROL VALVE	2-1		
HYDRAULIC CYLINDER IDENTIFICATION	2-1		
HYDRAULIC CYLINDERS	2-1		
HYDRAULIC FILTER HOUSING	2-1		
HYDRAULIC FLUID RESERVOIR	2-1		
HYDRAULIC/HYDROSTATIC			
FLUID SPECIFICATIONS	9-1		
HYDRAULIC PUMP	2-1		
HYDRAULIC SYSTEM INFORMATION	2-1		
HYDRAULIC/HYDROSTATIC SYSTEM	1-1		
HYDROSTATIC DRIVE MOTOR	3-1		
HYDROSTATIC SYSTEM INFORMATION	3-1		
INJECTION PUMP TIMING	7-1		
LIFT ARMS	5-1		
LIFT ARM SUPPORT DEVICE	1-1		
LIFT CYLINDER(S)	2-1		
LIFT LOCK BY-PASS VALVE	8-1		
LIFTING AND BLOCKING THE LOADER	1-1		
LIFTING THE LOADER	1-1		
LOADER SPECIFICATIONS	9-1		
LUBRICATING THE LOADER	1-1		
MOTOR CARRIER	4-1		



Thank you very much
for your reading.
Please click here
to get more information.