

450G, 455G, 550G, 555G, 650G Crawler Repair

TECHNICAL MANUAL 450G, 455G, 550G, 555G, 650G Crawler Repair

TM1404 14JUN11 (ENGLISH)

For complete service information also see:

450G, 455G, 550G, 555G, 650G Operation and Test (Complete)	TM1403
450G, 455G, 550G, 555G, 650G Repair (Complete).....	TM1404



**Worldwide Construction
And Forestry Division**
LITHO IN U.S.A.

Contents

Section 00—General Information

- Group 0001—Safety Information
- Group 0002—General Specifications
- Group 0003—Torque Values
- Group 0004—Fuels and Lubricants

Section 01—Tracks

- Group 0130—Track System
- Group 0199—Dealer Fabricated Tools

Section 02—Axles and Suspension Systems

- Group 0250—Axle Shaft, Bearings, and Reduction Gears
- Group 0260—Hydraulic System
- Group 0299—Dealer Fabricated Tools

Section 03—Transmission

- Group 0315—Control Linkage
- Group 0325—Input Drive Shafts and U-Joints
- Group 0350—Gears, Shafts, Bearings and Clutch
- Group 0360—Hydraulic System
- Group 0399—Dealer Fabricated Tools

Section 04—Engine

- Group 0400—Removal and Installation

Section 05—Engine Auxiliary Systems

- Group 0505—Cold Weather Starting Aid
- Group 0510—Cooling System
- Group 0515—Speed Controls and Fuel Shut-Off Linkage
- Group 0520—Intake System
- Group 0560—External Fuel Supply System

Section 06—Torque Converter

- Group 0600—Removal and Installation
- Group 0651—Turbine, Gears and Shaft

Section 07—Dampener Drive

- Group 0700—Removal and Installation

Section 09—Steering Systems

- Group 0920—Power Steering Linkage
- Group 0960—Hydraulic System

Section 16—Electrical System

- Group 1671—Batteries, Support and Cables
- Group 1672—Alternator, Regulator, and Charging System Wiring

- Group 1673—Lighting System
- Group 1674—Wiring Harness and Switches
- Group 1676—Instruments and Indicators
- Group 1677—Motors and Actuators

Section 17—Frames, Chassis, or Supporting Structure

- Group 1740—Frame Installation
- Group 1749—Chassis Weights
- Group 1799—Dealer Fabricated Tools

Section 18—Operator's Station

- Group 1800—Removal and Installation
- Group 1821—Seat and Seat Belt

Section 19—Sheet Metal and Styling

- Group 1910—Hood and Engine Enclosure
- Group 1913—Miscellaneous Guards
- Group 1921—Grille and Grille Housing
- Group 1927—Fenders

Section 20—Safety, Convenience and Miscellaneous

- Group 2004—Horn and Warning Devices

Section 21—Main Hydraulic System

- Group 2160—Hydraulic System

Section 31—Loader

- Group 3102—Bucket
- Group 3115—Controls Linkage
- Group 3140—Frames
- Group 3160—Hydraulics

Section 32—Bulldozer

- Group 3201—Blades
- Group 3215—Controls Linkage
- Group 3240—Frames
- Group 3260—Hydraulic System

Section 33—Backhoe

- Group 3300—Removal and Installation
- Group 3302—Buckets
- Group 3315—Controls Linkage
- Group 3340—Frames
- Group 3360—Hydraulic System

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2011
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION © Manual
Previous Editions
Copyright © 1998, 1993, 1992, 1991, 1988, 1987, 2003

Contents

Section 00 General Information

Contents

	Page		Page
Group 0001—Safety Information			
Handle Fluids Safely—Avoid		550G—LGP Drain and Refill	
Fires.....	00-0001-1	Capacities.....	00-0002-18
Prevent Battery Explosions.....	00-0001-1	555G Crawler Loader	
Prepare for Emergencies.....	00-0001-1	Specifications.....	00-0002-19
Prevent Acid Burns.....	00-0001-2	555G Drain and Refill Capacities.....	00-0002-21
Handle Chemical Products Safely.....	00-0001-2	650G Crawler Dozer	
Avoid High-Pressure Fluids.....	00-0001-3	Specifications.....	00-0002-22
Park Machine Safely.....	00-0001-3	650G Drain and Refill Capacities.....	00-0002-24
Support Machine Properly.....	00-0001-3	650G—LGP Crawler Dozer	
Wear Protective Clothing.....	00-0001-4	Specifications.....	00-0002-25
Work in Clean Area.....	00-0001-4	650G—LGP Drain and Refill	
Service Machines Safely.....	00-0001-4	Capacities.....	00-0002-27
Work In Ventilated Area.....	00-0001-5	9310 Backhoe Specifications.....	00-0002-27
Illuminate Work Area Safely.....	00-0001-5	9310 Backhoe Lift Capacity (G	
Replace Safety Signs.....	00-0001-5	Series Loaders).....	00-0002-28
Use Proper Lifting Equipment.....	00-0001-6	9310 Backhoe Lift Capacity	
Remove Paint Before Welding or		(G-Series Dozers).....	00-0002-29
Heating.....	00-0001-6		
Avoid Heating Near Pressurized		Group 0003—Torque Values	
Fluid Lines.....	00-0001-6	Specifications.....	00-0003-1
Keep ROPS Installed Properly.....	00-0001-7	Hardware Torque Specifications.....	00-0003-1
Service Tires Safely.....	00-0001-7	ROPS Torque Specifications.....	00-0003-1
Avoid Harmful Asbestos Dust.....	00-0001-8	Checking Track Shoe Cap Screw	
Practice Safe Maintenance.....	00-0001-8	Torque.....	00-0003-2
Use Proper Tools.....	00-0001-9	Unified Inch Bolt and Screw Torque	
Dispose of Waste Properly.....	00-0001-9	Values.....	00-0003-3
Live With Safety.....	00-0001-9	Metric Bolt and Screw Torque	
		Values.....	00-0003-4
		Additional Metric Cap Screw	
Group 0002—General Specifications		Torque Values.....	00-0003-5
450G Crawler Dozer		Check Oil Lines And Fittings.....	00-0003-6
Specifications.....	00-0002-1	Service Recommendations for	
450G Drain and Refill Capacities.....	00-0002-3	37° Flare and 30° Cone Seat	
450G—LT Crawler Dozer		Connectors.....	00-0003-6
Specifications.....	00-0002-4	Service Recommendations for	
450G—LT Drain and Refill		O-Ring Boss Fittings.....	00-0003-7
Capacities.....	00-0002-6	Service Recommendations For	
450G—LGP Crawler Dozer		Flat Face O-Ring Seal Fittings.....	00-0003-8
Specifications.....	00-0002-7	Service Recommendations For	
450G—LGP Drain and Refill		Inch Series Four Bolt Flange	
Capacities.....	00-0002-9	Fittings.....	00-0003-9
455G Crawler Loader		Service Recommendations for	
Specifications.....	00-0002-10	Metric Series Four Bolt Flange	
455G Crawler Loader		Fitting.....	00-0003-10
Specifications—cont.....	00-0002-12		
455G Drain and Refill Capacities.....	00-0002-12	Group 0004—Fuels and Lubricants	
550G—LT Crawler Dozer		Fuel Specifications.....	00-0004-1
Specifications.....	00-0002-13	Storing Fuel.....	00-0004-1
550G—LT Drain and Refill		Do Not Use Galvanized Containers.....	00-0004-1
Capacities.....	00-0002-15	Diesel Engine Oil.....	00-0004-2
550G—LGP Crawler Dozer		Final Drive Oil.....	00-0004-3
Specifications.....	00-0002-16		

Continued on next page



Thank you very much
for your reading.
Please click here
to get more information.