

# S175

# S185

## TURBO

INCLUDES HIGH FLOW



# Bobcat®

## Service Manual

S/N 517625001 & Above

S/N 518115001 & Above

S/N 519028001 & Above

S/N 519215001 & Above

PDF



DOWNLOAD



EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)

6901828 (11-08)

1 of 725

Printed in U.S.A.

© Bobcat Company 2008

Dealer Copy -- Not for Resale

# MAINTENANCE SAFETY



## WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


### CORRECT

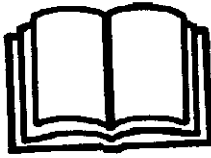

B-10731a

Never service the Bobcat Skid-Steer Loader without instructions.


### CORRECT

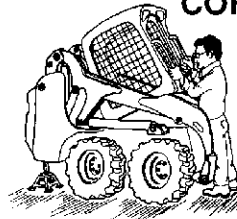 

B-15535

Use the correct procedure to lift or lower operator cab.


### CORRECT

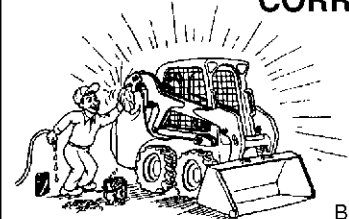 

B-15524

Cleaning and maintenance are required daily.


### WRONG

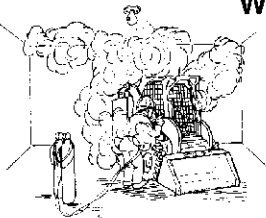 

B-15734

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


### WRONG

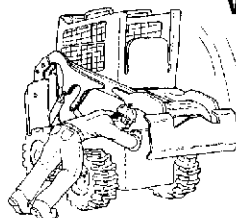 

B-15732

Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.


### WRONG

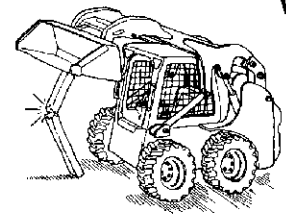 

B-15525

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.


### WRONG

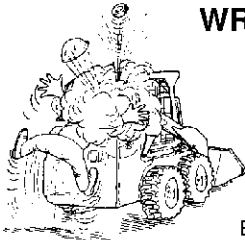 

B-15733

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

### WRONG

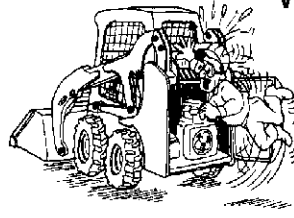 

B-15523

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

### WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW07-0805

Dealer Copy -- Not for Resale



**Bobcat®**

## ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS) .....	60-01	HEATER COIL .....	80-01-0
AIR CLEANER .....	70-01	HEATER VALVE .....	80-01
AIR CLEANER SERVICE .....	10-01	HEATER/AC FAN .....	80-01
AIR CONDITIONING SERVICE .....	80-01	HYDRAULIC CONNECTION SPECS .....	SPEC-01
AIR CONDITIONING SYSTEM FLOW .....	80-01	HYDRAULIC CONTROL VALVE .....	20-01
ALTERNATOR .....	60-01	HYDRAULIC FILTER HOUSING .....	20-01
		HYDRAULIC FLUID RESERVOIR .....	20-01
BASIC TROUBLESHOOTING .....	80-01	HYDRAULIC/HYDROSTATIC	
BATTERY .....	60-01	FLUID SPECIFICATIONS .....	SPEC-01
BOBCAT CONTROLLER .....	60-01	HYDRAULIC/HYDROSTATIC SYSTEM .....	10-01
BOBCAT INTERLOCK		HYDRAULIC PUMP .....	20-01
CONTROL SYSTEM (BICS™) .....	60-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
BOB-TACH .....	10-01, 50-01	HYDROSTATIC MOTOR .....	30-01
BRAKE .....	40-01	HYDROSTATIC PUMP .....	30-01
BUCKET POSITION VALVE .....	20-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
CHAINCASE .....	40-01	INSTRUMENT PANEL .....	60-01
CHARGE PRESSURE .....	30-01		
COMPONENTS .....	80-01	LIFT ARM .....	50-01
COMPRESSOR .....	80-01	LIFT ARM BY-PASS CONTROL VALVE .....	20-01
CONDENSER .....	80-01	LIFT ARM SUPPORT DEVICE .....	10-01
CONTROL HANDLE .....	50-01	LIFTING AND BLOCKING THE LOADER .....	10-01
CONTROL PANEL .....	50-01	LIGHTS .....	60-01
CONTROL PEDALS .....	50-01	LOADER SPECIFICATIONS .....	SPEC-01
CONVERSIONS .....	SPEC-01	LOADER TORQUES .....	SPEC-01
COOLING FAN .....	70-01	LUBRICATION OF THE BOBCAT LOADER .....	10-01
CYLINDER (LIFT) .....	20-01		
CYLINDER (POWER BOB-TACH) .....	20-01	MAIN RELIEF VALVE .....	20-01
CYLINDER (TILT) .....	20-01	MUFFLER .....	70-01
DECIMAL & MILLIMETER EQUIVALENTS ...	SPEC-01	OIL COOLER .....	30-01
DIAGNOSTICS .....	60-01	OPERATOR CAB .....	10-01, 50-01
DRIVE BELT .....	30-01	OPERATOR SEAT .....	50-01
DRIVE COMPONENTS .....	40-01	OPERATOR SEAT (SUSPENSION) .....	50-01
ELECTRICAL/HYD. CONTROLS REF .....	60-01	POWER BOB-TACH (OPTION) .....	10-01, 50-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	POWER BOB-TACH BLOCK .....	20-01
ENGINE .....	70-01	PRESSURE RELIEF VALVE .....	80-01
ENGINE COMPONENTS AND TESTING .....	70-01	PRESSURE SWITCH .....	80-01
ENGINE COOLING SYSTEM .....	10-01		
ENGINE LUBRICATION SYSTEM .....	10-01	RADIATOR .....	70-01
ENGINE SPECIFICATIONS .....	SPEC-01	REAR AUXILIARY DIVERTER VALVE .....	20-01
ENGINE SPEED CONTROL .....	70-01	REAR DOOR .....	50-01
EVAPORATOR .....	80-01	REAR GRILL .....	50-01
EVAPORATOR/HEATER UNIT .....	80-01	RECEIVER/DRIER .....	80-01
EXPANSION VALVE .....	80-01	RECONDITIONING THE ENGINE .....	70-01
		REGULAR MAINTENANCE .....	80-01
FAN GEARBOX .....	10-01	REMOTE START .....	10-01
FINAL DRIVE TRANSMISSION (CHAINCASE) ..	10-01		
FLYWHEEL AND HOUSING .....	70-01		
FRONT AUXILIARY HYD. COUPLER BLOCK .....	20-01		
FUEL SYSTEM .....	10-01		
FUEL TANK .....	50-01		
GENERAL AIR CONDITIONING SERVICE			
GUIDELINES .....	80-01		

Dealer Copy -- Not for Resale

## ALPHABETICAL INDEX (CONT'D)

SAFETY .....	80-01
SEAT BAR .....	50-01
SEAT BAR SENSOR .....	60-01
SELECT VALVE.....	20-01
SERVICE SCHEDULE .....	10-01
SPARK ARRESTOR MUFFLER .....	10-01
STANDARD TORQUE SPECIFICATIONS FOR BOLTS .....	SPEC-01
STARTER .....	60-01
SYSTEM CHARGING AND RECLAMATION .....	80-01
SYSTEM TROUBLESHOOTING CHART .....	80-01
TEMPERATURE/PRESSURE .....	80-01
THERMOSTAT.....	80-01
TIRE MAINTENANCE .....	10-01
TORQUE SPECIFICATIONS FOR BOLTS ....	SPEC-01
TOWING THE LOADER.....	10-01
TRACTION LOCK.....	60-01
TRANSPORTING THE BOBCAT LOADER.....	10-01
TROUBLESHOOTING.....	70-01
TURBOCHARGER .....	70-01
U.S. TO METRIC CONVERSION .....	SPEC-01
ACS- ADVANCED CONTROL SYSTEM	
AHC- ADVANCED HAND CONTROL SYSTEM	
BICS™-BOBCAT INTERLOCK CONTROL SYSTEM	



Thank you very much  
for your reading.  
Please click here  
to get more information.