




# Bobcat®

---

## Service Manual S205 Skid-Steer Loader

---

S/N A3LJ11001 & Above  
S/N A3LK11001 & Above  
S/N ANLP11001 & Above

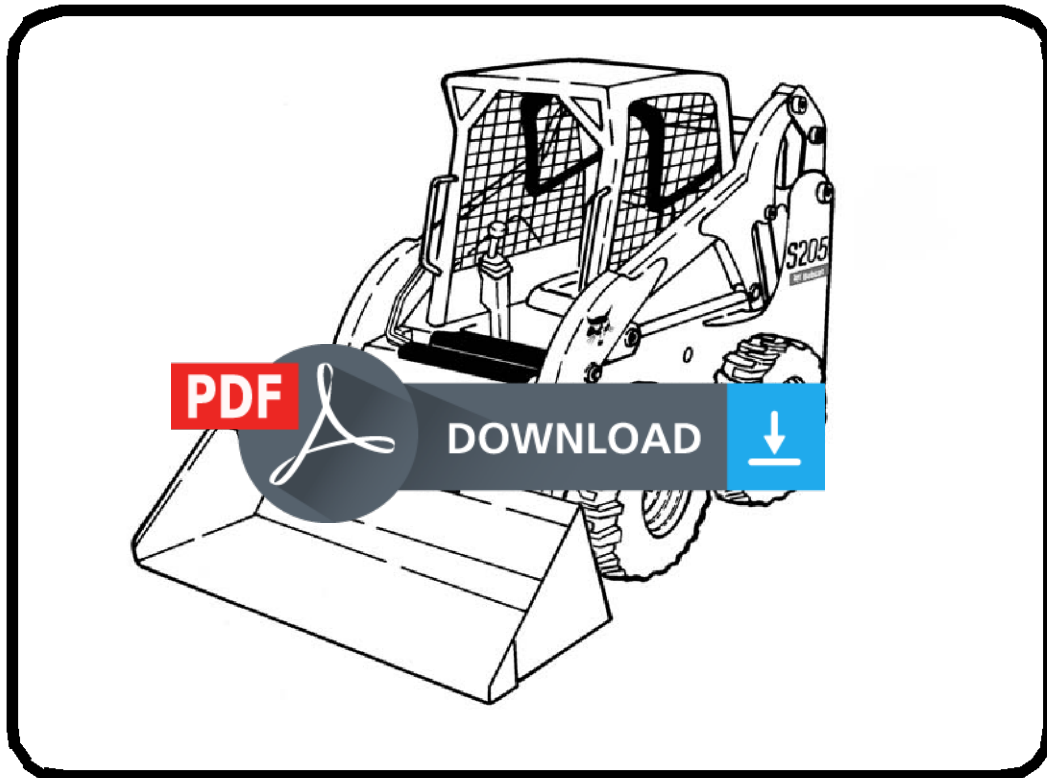

Dealer Copy -- Not for Resale

EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)





# MAINTENANCE SAFETY



 
## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

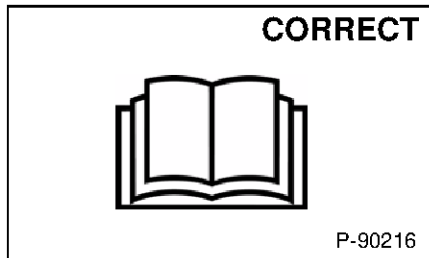


P-90216

 Never service the Bobcat Skid-Steer Loader without instructions.

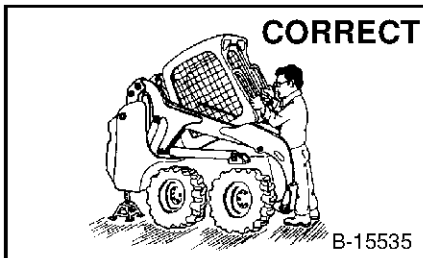


B-15535

 Use the correct procedure to lift or lower operator cab.

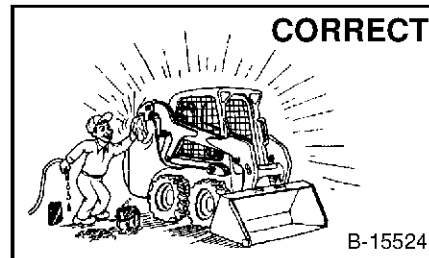


B-15524

 Cleaning and maintenance are required daily.

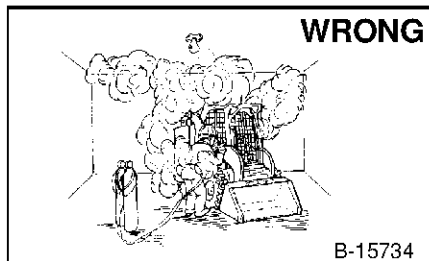


B-15734

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

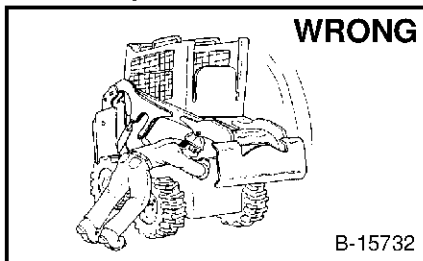


B-15732

Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

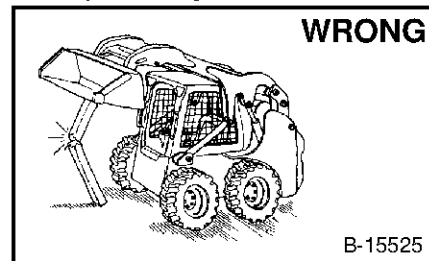


B-15525

 - Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

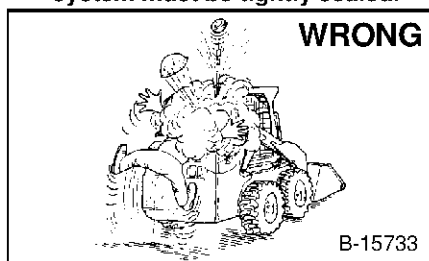

B-15733

 - Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

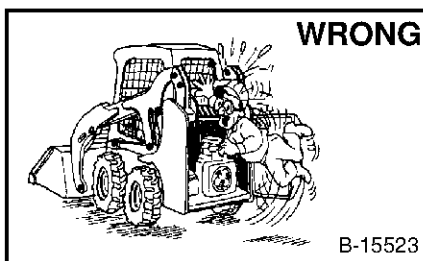

B-15523

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW07-0409



**Bobcat®**

## ALPHABETICAL INDEX

ACCESS PANEL (INSIDE) .....	50-01	ELECTRICAL / HYDRAULIC CONTROLS.....	60-01
ACCESS PANEL (INSIDE) (SJC) .....	50-01	ELECTRICAL / HYDRAULIC CONTROLS (ACS)...	60-01
AIR CLEANER .....	70-01	ELECTRICAL / HYDRAULIC CONTROLS (SJC)....	60-01
AIR CLEANER SERVICE .....	10-01	ELECTRICAL SYSTEM INFORMATION.....	60-01
AIR CONDITIONING SYSTEM FLOW .....	80-01	EMERGENCY EXIT .....	10-01
ALTERNATOR .....	60-01	ENGINE COOLING SYSTEM .....	10-01, 70-01
		ENGINE LUBRICATION SYSTEM .....	10-01
BACK-UP ALARM SYSTEM.....	60-01	ENGINE INFORMATION.....	70-01
BATTERY.....	60-01	ENGINE SPEED CONTROL .....	70-01
BLOWER FAN .....	80-01	ENGINE SPEED CONTROL (SJC).....	70-01
BOBCAT INTERLOCK CONTROL		EVAPORATOR COIL.....	80-01
SYSTEM (BICS) .....	60-01	EVAPORATOR / HEATER UNIT.....	80-01
BOBCAT CONTROLLER (ACS) .....	60-01	EXHAUST GAS RECIRCULATION	
BOBCAT CONTROLLER		(EGR) SYSTEM .....	70-01
(GATEWAY AND AUXILIARY).....	60-01	EXPANSION VALVE.....	80-01
BOBCAT CONTROLLER (SJC) (DRIVE) .....	60-01		
BOB-TACH (HAND LEVER) .....	10-01, 50-01	FINAL DRIVE TRANSMISSION (CHAINCASE).....	10-01
BOB-TACH (POWER).....	10-01, 50-01	FLYWHEEL AND HOUSING .....	70-01
BOB-TACH (POWER) BLOCK.....	20-01	FLYWHEEL RPM SENSOR .....	60-01
BRAKE (SINGLE SPEED).....	40-01	FRONT AUXILIARY HYDRAULIC	
BRAKE (TWO-SPEED).....	40-01	COUPLER BLOCK .....	20-01
BUCKET POSITION VALVE.....	20-01	FUEL SYSTEM.....	10-01, 70-01
		FUEL TANK .....	50-01
CAB DOOR.....	50-01		
CALIBRATION .....	60-01	HEATER COIL.....	80-01
CAMSHAFT AND TIMING GEARS.....	70-01	HEATER VALVE .....	80-01
CASE DRAIN FILTER.....	30-01	HIGH FLOW VALVE .....	20-01
CHAINCASE .....	40-01	HYDRAULIC CONNECTION	
CHARGE PRESSURE .....	30-01	SPECIFICATIONS.....	SPEC-01
COMPRESSOR .....	80-01	HYDRAULIC CONTROL VALVE (ACS) OR (SJC) ..	20-01
CONDENSER .....	80-01	HYDRAULIC CONTROL VALVE (STANDARD) .....	20-01
CONTROL HANDLE / LEVER .....	50-01	HYDRAULIC / HYDROSTATIC FILTERS .....	20-01
CONTROL HANDLE / LEVER (ACS) .....	50-01	HYDRAULIC FLUID RESERVOIR .....	20-01
CONTROL HANDLE / LEVER (SJC).....	50-01	HYDRAULIC / HYDROSTATIC	
CONTROL PANEL.....	50-01	FLUID SPECIFICATIONS .....	SPEC-01
CONTROL PANEL (SJC).....	50-01	HYDRAULIC / HYDROSTATIC SYSTEM.....	10-01
CONTROL PANEL SETUP .....	60-01	HYDRAULIC PUMP (STANDARD).....	20-01
CONTROL PEDALS AND LINKAGES.....	50-01	HYDRAULIC PUMP (STANDARD) (HIGH FLOW) ..	20-01
CONTROL PEDALS (ACS) .....	50-01	HYDRAULIC PUMP (SJC) .....	20-01
CONTROL SYSTEM (ACS).....	60-01	HYDRAULIC PUMP (SJC) (HIGH FLOW).....	20-01
CONVERSIONS .....	SPEC-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
CRANKSHAFT AND PISTONS .....	70-01	HYDROSTATIC DRIVE MOTOR.....	30-01
CYLINDER (BOB-TACH) .....	20-01	HYDROSTATIC DRIVE MOTOR (TWO-SPEED)....	30-01
CYLINDER (LIFT) .....	20-01	HYDROSTATIC MOTOR CARRIER	
CYLINDER (TILT) .....	20-01	(SINGLE AND TWO-SPEED WITH MANUAL	
CYLINDER HEAD.....	70-01	CONTROLS) .....	30-01
		HYDROSTATIC MOTOR CARRIER	
DIAGNOSTICS SERVICE CODES.....	60-01	(SINGLE AND TWO-SPEED WITH SJC	
DRIVE BELT .....	30-01	CONTROLS) .....	30-01
DRIVE COMPONENTS .....	40-01	HYDROSTATIC PUMP .....	30-01
		HYDROSTATIC PUMP (SJC).....	30-01
		HYDROSTATIC SYSTEM INFORMATION.....	30-01
		INSTRUMENT PANELS .....	60-01

Dealer Copy -- Not for Resale



Thank you very much  
for your reading.  
Please click here  
to get more information.