

SERVICE MANUAL

T8010 / T8020 / T8030 / T8040 / T8050
Tractors



SERVICE MANUAL



T8010 [Z8Rx06001 -]
T8020 [Z8Rx06001 -]
T8030 [Z8Rx06001 -]
T8040 [Z8Rx06001 -]
T8050 [Z8Rx06001 -]

Contents

INTRODUCTION

DISTRIBUTION SYSTEMS..... A

PRIMARY HYDRAULIC POWER SYSTEM..... A.10.A

PRIMARY HYDRAULIC POWER SYSTEM Electro-hydraulic remote valve..... A.10.C

PNEUMATIC SYSTEM..... A.20.A

ELECTRICAL POWER SYSTEM..... A.30.A

LIGHTING SYSTEM..... A.40.A

ELECTRONIC SYSTEM..... A.50.A

FAULT CODES..... A.50.A

POWER PRODUCTION..... B

ENGINE..... B.10.A

FUEL AND INJECTION SYSTEM..... B.20.A

ENGINE COOLANT SYSTEM..... B.50.A

LUBRICATION SYSTEM..... B.60.A

STARTING SYSTEM..... B.80.A

POWER TRAIN..... C

TRANSMISSION Powershift..... C.20.E

REAR PTO Hydraulic..... C.40.C

BAR AXLE..... C.60.A

TRAVELLING..... D

FRONT AXLE..... D.10.A

2WD-4WD SYSTEM Hydraulic..... D.14.C

STEERING Hydraulic..... D.20.C

SERVICE BRAKE Hydraulic..... D.30.C

PARKING BRAKE Hydraulic..... D.32.C

BRAKE CONNECTION Hydraulic..... D.34.C

BRAKE CONNECTION Pneumatic..... D.34.E

SUSPENSION Hydraulic..... D.40.C



Thank you very much
for your reading.
Please click here
to get more information.