



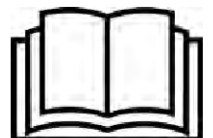

Bobcat®

Operation & Maintenance Manual Spreader

(SPDR-7-UV) S/N B3LL00101 & Above

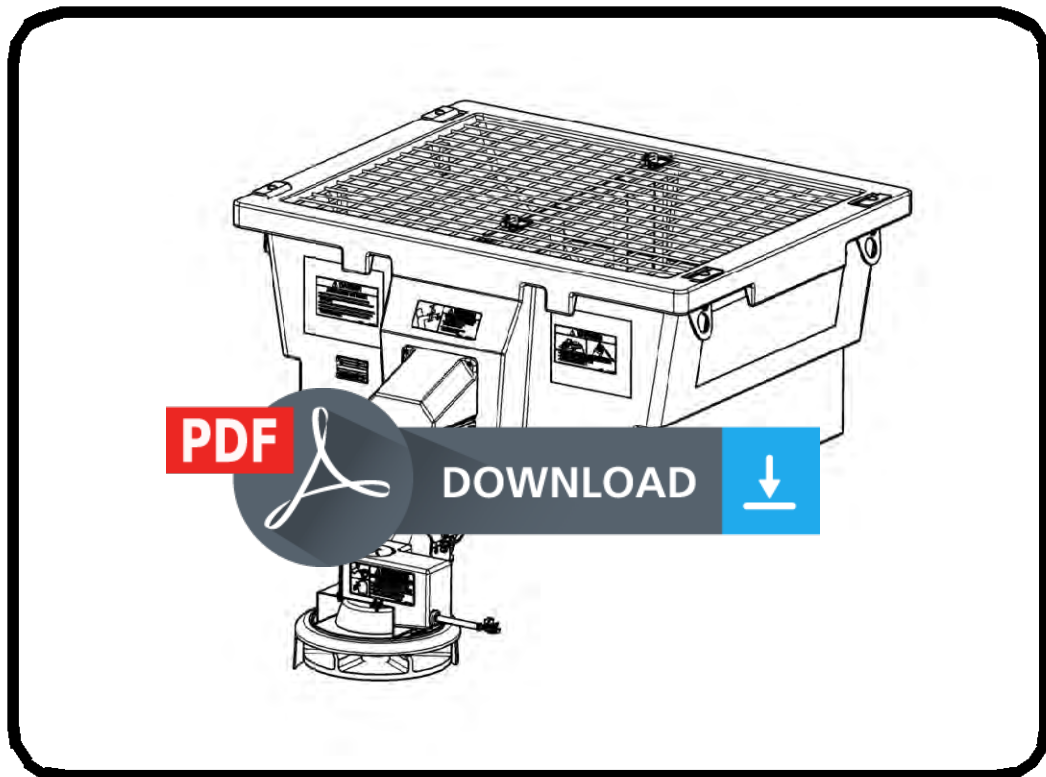

CONTENTS

CONTENTS	1
FOREWORD	3
SAFETY AND TRAINING RESOURCES	11
OPERATING INSTRUCTIONS	21
PREVENTIVE MAINTENANCE	47
SPECIFICATIONS	59
WARRANTY	63
ALPHABETICAL INDEX	67

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat implement in the spaces below. Always use these numbers when referring to your Bobcat implement.

Implement Serial Number _____

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM



Bobcat®

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat implement. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT IMPLEMENT. If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your Bobcat implement.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	5
SERIAL NUMBER LOCATION	7
Implement Serial Number	7
DELIVERY REPORT	7
IMPLEMENT IDENTIFICATION	8
FEATURES AND ACCESSORIES	9
Standard Items	9
Options And Accessories	9



Thank you very much
for your reading.
Please click here
to get more information.