






JOHN DEERE

Technical manual

John Deere 7600, 7700, 7800 Tractors

Repair manual

For complete list of manuals, visit [www.john-deere.com](#)

Diagnostic and testing manual 7700, 7800 tractors	 	DOWNLOAD 
Series 400, 6076 diesel engine repair manual		CTM42
Series 3029, 4039, 4045, 6059, 6068 diesel engine. Repair manual		CTM3274
Operation manual 7600, 7700, 7800 tractors		OMAR112756

English
TM1500

TM1500 - 7600, 7700 and 7800 Tractors

Grp	Description	Page
	Foreword	1
	Dealer Predelivery Service	2
	Quick Reference Specifications	3
05	Safety	
05	<i>Safety</i>	
	Handle Fluids Safely-Avoid Fires	4
	Prevent Battery Explosions	5
	Prepare for Emergencies	6
	Prevent Acid Burns	7
	Handle Chemical Products Safely	8
	Avoid High-Pressure Fluids	9
	Park Machine Safely	10
	Support Machine Properly	11
	Wear Protective Clothing	12
	Work in Clean Area	13
	Service Machines Safely	14
	Work in Ventilated Area	15
	Illuminate Work Area Safely	16
	Replace Safety Signs	17
	Use Proper Lifting Equipment	18
	Service Tires Safely	19
	Avoid Harmful Asbestos Dust	20
	Avoid Heating Near Pressurized Fluid Lines	21
	Remove Paint Before Welding or Heating	22
	Use Proper Tools	23
	Dispose of Waste Properly	24
	Live With Safety	25
10	General Information	
05	<i>General Information</i>	
	General Specifications	26
	Sealants and Adhesives Cross-Reference Chart	29
	Glossary of Terms	30
	Metric Bolt and Cap Screw Torque Values	32
	Unified Inch Bolt and Cap Screw Torque Values	34
20	Engine	
00	<i>Component Removal and Installation</i>	
	Special or Essential Tools	36
	Service Equipment and Tools	37
	Specifications	38
	Repair Engine-Use CTM	39
	Remove Engine	40
	Install Engine in Repair Stand	45
	Install Engine	46
05	<i>Engine Repair</i>	
	Repair Engine-Use CTM	47
	Access to Intake and Exhaust Valves	48
	Access to Front Crankshaft Seal	49
	Access to Rear Crankshaft Seal-PST or PQT W/Creeper	50
	Access to Rear Crankshaft Seal-PQT W/O Creeper	51
	Access to Camshaft	52
	Access to Timing Gear Cover	53
	Remove and Install Engine Valve Cover	54
	Remove and Install Front Cooling Assembly	55
30	Fuel, Air Intake, and Cooling Systems	
05	<i>Throttle Controls</i>	
	Specifications	57
	Repair Engine-Use CTM	58
	Adjust Hand-Foot Throttle With Mechanical Linkage	59
10	<i>Diesel Fuel System</i>	

	Specifications	61
	Fuel Tank System-Exploded View	62
	Remove and Install Fuel Tank	63
15	<i>Air Intake System</i>	
	Inspect and Service the Air Intake	64
20	<i>Engine Cooling System</i>	
	Service Equipment and Tools	65
	Specifications	66
	Test Radiator and Cap	67
	Remove and Install Radiator	68
	Remove and Install Viscous Fan Drive	69
	Inspect Belt Tensioner	70
	Replace Belt Tension Mechanism	71
	Fan Belt Routing- 7600	72
	Fan Belt Routing- 7700 and 7800	73
25	<i>Air Conditioning Condenser and Coolers</i>	
	Service Equipment and Tools	74
	Remove Fuel-Hydraulic Oil Cooler/Condenser	75
	Leak Test Fuel-Hydraulic Oil Cooler/Condenser	77
	Install Fuel-Hydraulic Oil Cooler/Condenser	78
40	Electrical	
05	<i>Connectors</i>	
	Service Equipment and Tools	79
	Other Material	80
	Using High-Pressure Washers	81
	Replace Connector	82
	Install Contact	83
	Remove Connector Body from Blade Terminals	85
	Replace (Pull Type) Connectors	86
	Replace (Push Type) Connectors	87
	Replace , Large and Pin Type Connectors	88
	Replace Blade Type Connectors	89
	Replace Small Socket Connector	90
	Replace Small Pin Connector	91
	Replace Connectors	92
	Install Contact	94
	Use Electrical Insulating Compound	96
10	<i>Wiring Harness Routings</i>	
	Ground Point Locations	97
	Cab Harness Routing- Power Shift Transmission	99
	Cab Harness Routing- Transmission	101
	Cab Harness Routing- Power Shift and Transmission	103
	Open Station Harness Routing and Component Identification	104
	Harness Routing and Component Identification- Power Shift Transmission	106
	Harness Routing and Component Identification-Transmission	107
	PowrQuad	
	PowrQuad is a trademark of Deere & Company.	
	Engine Harness Routing and Component Identification- 6068 Engine (7600 Tractor)	108
	Engine Harness Routing and Component Identification- 6076 Engine (7700 Tractor)	109
	Engine Harness Routing and Component Identification- 6076 Engine (7800 Tractor)	110
15	<i>Charging Circuit</i>	
	Repair Alternator-Use CTM	111
	Remove and Install Alternator	112
20	<i>Starting Circuit</i>	
	Special or Essential Tools	113
	Specifications	114
	Repair Starter-Use CTM	115
	Remove and Install Starter Motor	116
	Replace Starter Circuit Relay	117
	Replace Fusible Link	118
	Replace Neutral Start Switch-Transmission	119
	Replace Neutral Start Switch- Power Shift Transmission	120
	Replace Gear Encoder	121



Thank you very much
for your reading.
Please click here
to get more information.