

**John Deere Commercial and Consumer Equipment Lawn and
Garden**

**5200, 5300, 5400 and 5500 Tractors
Diagnostic and Repair Technical Manual**

TECHNICAL MANUAL

5200, 5300, 5400, 5500



tm1520, April 2004



Table of contents

FOREWORD

JOHN DEERE DEALERS

Section 10 - GENERAL INFORMATION

- Group 05 - Safety
- Group 10 - General Specifications
- Group 20 - Fuel and Lubricants
- Group 25 - Serial Number Locations
- Group 30 - Features and Accessories

Section 20 - ENGINE REPAIR

- Group 05 - Engine
- Group 10 - Cooling System

Section 30 - FUEL AND AIR REPAIR

- Group 05 - Fuel System
- Group 10 - Air Intake System
- Group 15 - Speed Control Linkage

Section 40 - ELECTRICAL REPAIR

- Group 05 - Battery, Starter and Alternator
- Group 10 - Electrical System Components
- Group 15 - Wiring Harness

Section 50 - POWER TRAIN REPAIR

- Group 05 - Clutch Housing-Collar Shift/TSS Transmission
- Group 06 - Clutch Housing-Hydraulic Reverser Transmission
- Group 10 - Clutch Assembly-Collar Shift/TSS Transmission
- Group 11 - Clutch Assembly-Hydraulic Reverser Transmission
- Group 12 - Hydraulic Reverser
- Group 15 - Collar Shift/TSS Transmission
- Group 16 - Hydraulic Reverser Transmission
- Group 20 - Rear PTO Drive Shaft-Collar Shift/TSS Transmission
- Group 21 - Rear PTO Drive Shaft-Hydraulic Reverser Transmission
- Group 25 - Differential
- Group 30 - Final Drives
- Group 35 - Mechanical Front Wheel Drive
- Group 40 - Creeper Assembly

Section 60 - STEERING AND BRAKE REPAIR

- Group 05 - Steering Repair
- Group 10 - Brake Repair

Section 70 - HYDRAULIC REPAIR

- Group 05 - Hydraulic Pump and Filter
- Group 06 - Hydraulic Oil Cooler
- Group 10 - Rockshaft
- Group 15 - Dual Selective Control Valve
- Group 16 - Single (Third) Selective Control Valve
- Group 20 - Hydraulic Mid Mount Coupler
- Group 25 - Hydraulic Power Beyond

Section 80 - MISCELLANEOUS REPAIR

- Group 05 - Front Axle-2WD
- Group 10 - Wheels
- Group 15 - 3-Point Hitch

Section 90 - OPERATOR STATION REPAIR

Group 05 - Seat and Support

Group 10 - ROLL-GARDROLL-GARD is a trademark of Deere & Company.

Group 15 - Cab Components

Group 20 - Air Conditioning System

Group 25 - Heating System

Section 210 - OPERATIONAL CHECKOUT PROCEDURES

Group 10 - Operational Checkout Procedures

Section 220 - ENGINE OPERATION, TESTS AND ADJUSTMENTS

Group 05 - Component Location

Group 10 - Theory of Operation

Group 15 - Diagnosis, Tests and Adjustments

Section 230 - FUEL/AIR OPERATION, TESTS AND ADJUSTMENTS

Group 05 - Component Location

Group 10 - Theory of Operation

Group 15 - Diagnosis, Tests and Adjustments

Section 240 - ELECTRICAL SYSTEM OPERATION, TESTS AND ADJUSTMENTS

Group 05 - Component Location

Group 10 - Theory of Operation

Group 15 - Diagnosis, Tests and Adjustments

Group 20 - Wiring Schematics

Section 250 - POWER TRAIN OPERATION, TESTS AND ADJUSTMENTS

Group 05 - Component Location-Collar Shift/TSS Transmission

Group 06 - Component Location-Hydraulic Reverser Transmission

Group 10 - Theory of Operation-Collar Shift/TSS Transmission

Group 11 - Theory of Operation-Hydraulic Reverser Transmission

Group 15 - Diagnosis, Tests and Adjustments-Collar Shift/TSS Transmission

Group 16 - Diagnosis, Tests and Adjustments-Hydraulic Reverser

Section 260 - STEERING AND BRAKE OPERATION, TESTS AND ADJUSTMENTS

Group 05 - Component Location

Group 10 - Theory of Operation

Group 15 - Diagnosis, Tests and Adjustments

Section 270 - HYDRAULIC SYSTEM OPERATION, TESTS AND ADJUSTMENTS

Group 05 - Component Location

Group 10 - Theory of Operation

Group 15 - Diagnosis

Group 16 - Hydraulic Tests-Without SCV

Group 17 - Hydraulic Tests-With SCV

Group 18 - Hydraulic Tests-All

Group 19 - Adjustments

Group 20 - Hydraulic Schematics

Section 290 - OPERATOR STATION

Group 05 - Component Location

Group 10 - Theory of Operation

Group 15 - Diagnosis, Tests and Adjustments


Section 299 - DEALER FABRICATED TOOLS

Group 00 - Dealer Fabricated Tools

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.



Thank you very much
for your reading.
Please click here
to get more information.