

Utility Vehicle

2200

2200S

2300



Bobcat®

Service Manual

S/N A59Z11001 & ABOVE (2200 DIESEL)

S/N A5KR11001 & ABOVE (2200 DIESEL) HOM.

S/N A59Y11001 & ABOVE (2200 GASOLINE)

S/N A5A111001 & ABOVE (2200S DIESEL)


S/N A5A011001 & ABOVE (2200S GASOLINE)

S/N A59W11001 & ABOVE (2300 DIESEL)

PDF



DOWNLOAD

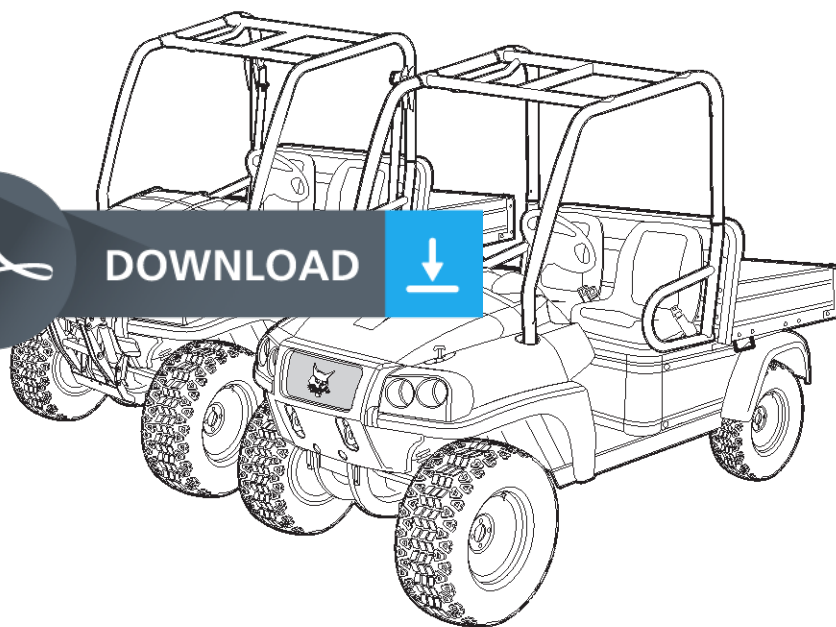

Dealer Copy -- Not for Resale

FOREWORD

Bobcat vehicles are designed and built to provide the ultimate in performance efficiency; however, proper maintenance and repair are essential for achieving maximum service life and continued safe and reliable operation.

This manual provides detailed information for the maintenance and repair of the Bobcat 2200, 2200 Homologated, 2200S and Bobcat 2300 vehicles, and should be thoroughly reviewed prior to servicing the vehicles. The procedures provided must be properly implemented, and the DANGER, WARNING, and CAUTION statements must be heeded.

This manual was written for the trained technician who already possesses knowledge and skills in electrical and mechanical repair. If the technician does not have such knowledge and skills, attempted service or repairs to the vehicle may render the vehicle unsafe. For this reason, Bobcat Company advises that all repairs and/or service be performed by an authorized Bobcat 2200 and 2200S distributor/dealer representative or by a Bobcat factory-trained technician.

It is the policy of Bobcat Company to assist its distributors and dealers in continually updating their service knowledge and facilities so they can provide prompt and efficient service for vehicle owners. Regional technical representatives, vehicle service seminars, periodic service bulletins, maintenance and service manuals, and other service publications also represent Bobcat Company's continuing commitment to customer support.

This manual covers all aspects of typical vehicle service; however, unique situations sometimes occur when servicing a vehicle. If it appears that a service question is not answered in this manual, you may write to us at: P.O. Box 204658; Augusta, GA 30917; Attention: Technical Services, or contact a Technical Service Representative at (706) 863-3000, ext. 3580.

Copyright © 2007, 2008, Bobcat Company.

This manual effective June 19, 2006.

WARNING

- **Read Section 1 – Safety before attempting any service on this vehicle.**
- **Before servicing vehicle, read complete section(s) and any referenced information that may be relevant to the service or repair to be performed.**

NOTE: *This manual represents the most current information at the time of publication. Bobcat Company is continually working to further improve its vehicles and other products. These improvements may affect servicing procedures. Any modification and/or significant change in specifications or procedures will be forwarded to all Bobcat 2200 and 2200S dealers and will, when applicable, appear in future editions of this manual.*

Damage to a vehicle or component thereof not resulting from a defect or that occurs due to unreasonable or unintended use, overloading, abuse, or neglect (including failure to provide reasonable or necessary maintenance as instructed in the vehicle owner's manual), accident or alteration, including increasing vehicle speed beyond factory specifications or modifications that affect the stability of the vehicle or the operation thereof, will void the warranty.

Bobcat Company reserves the right to change specifications and designs at any time without notice and without incurring any obligation or liability whatsoever.

There are no warranties expressed or implied in this manual. See the limited warranty found in the vehicle Operation and Maintenance Manual.

CONTENTS

SECTION 1 – SAFETY

General Warning	1-1
-----------------------	-----

SECTION 2A – VEHICLE SPECIFICATIONS: HONDA GAS & KUBOTA DIESEL POWERED

2200 and 2200S Specifications	2a-1
2300 Specifications	2a-3

SECTION 2B – VEHICLE SPECIFICATIONS: KAWASAKI GAS & KUBOTA DIESEL POWERED

2200 and 2200S Specifications	2b-1
2200 Homologated Specifications	2b-3
2300 Specifications	2b-5

SECTION 3 – GENERAL INFORMATION

General Information	3-1
Model Identification	3-1
Engine Serial Number Locations	3-2
Gasoline Engines	3-2
Diesel Engine	3-2
Storage	3-2
Preparing the Vehicle for Extended Storage	3-3
Returning the Stored Vehicle to Service	3-4
Using A Booster Battery (Jump Starting)	3-5

SECTION 4 – BODY AND TRIM

Cleaning the Vehicle	4-1
Seat Cleaning	4-1
Front Body Repair	4-2
Light Scratches	4-2
Abrasions and Haze	4-2
Large Scratches and Abrasions	4-2

Dealer Copy -- Not for Resale



Thank you very much
for your reading.
Please click here
to get more information.