



Service Manual

2

4

 
0

0

PDF



DOWNLOAD

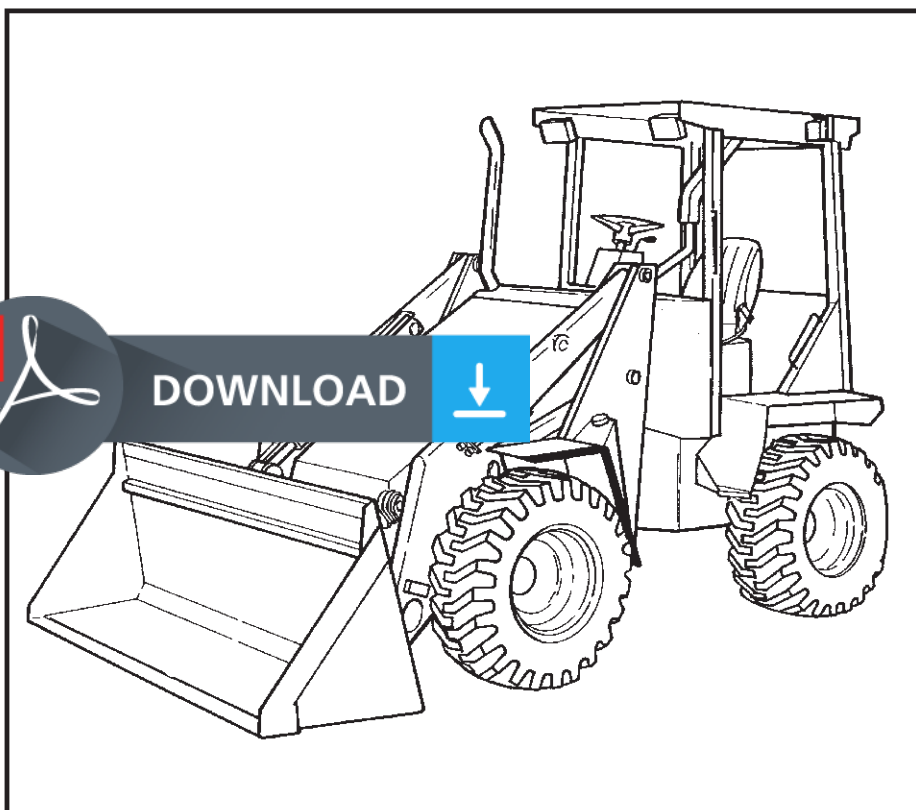

Dealer Copy -- Not for Resale

MELROE
INGERSOLL-RAND

6720455 (5-90)

Printed in U.S.A.



© Melroe Company 1990

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

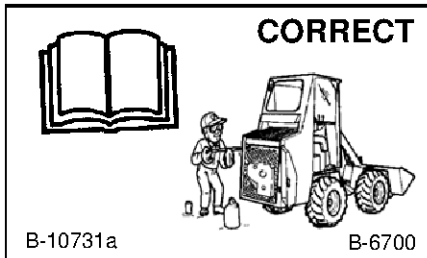

B-10731a


B-6700

 - ⚠ Never service the Bobcat Loader without instructions. See Service Manual.
- ⚠ Check engine and hydraulic fluids daily.
- ⚠ Use recommended fluids.

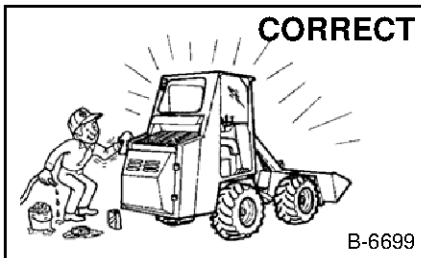


B-6699

 - ⚠ Cleaning and maintenance are required daily.

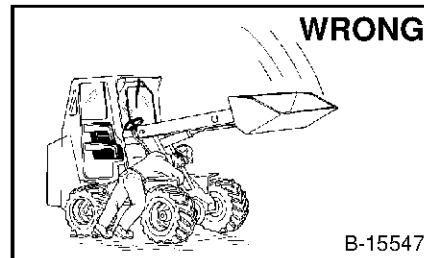


B-15547

 - ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

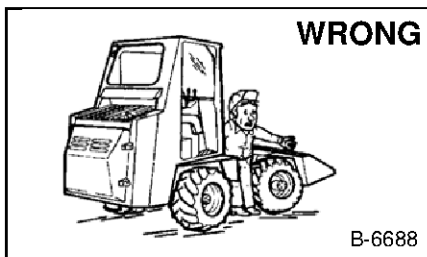


B-6688

 - ⚠ Always connect steering frame lock before working on the loader.

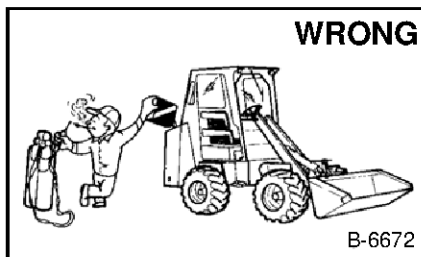


B-6672

 - ⚠ Do not fill the fuel tank with engine running, while smoking or when near an open flame.

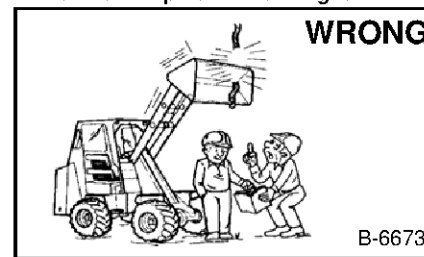


B-6673

 - ⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

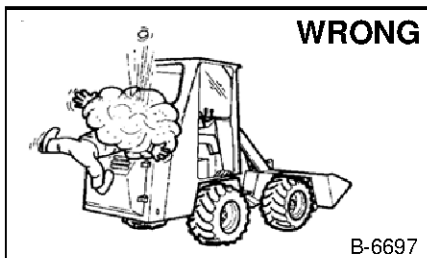

B-6697

 - ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.

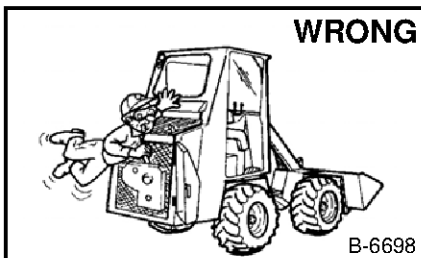

B-6698

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW04-0805

Dealer Copy -- Not for Resale



 
Bobcat®

FOREWORD


This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the loader has had service or repair:


1. Check that the ROPS/FOPS is in good condition and is not modified.

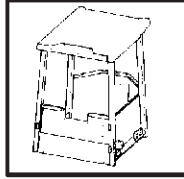

 
2. Check that ROPS mounting hardware is tightened and is Melroe approved.

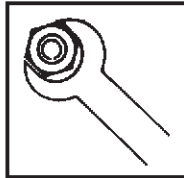

 
3. The seat belt must be correctly installed, functional and in good condition.

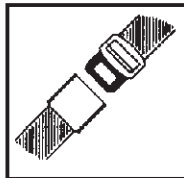

 
4. The restraint arm must function correctly.

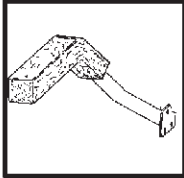

 5. Machine signs must be legible and in the correct location.

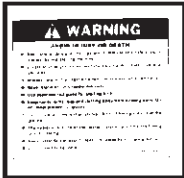

 6. Foot pedal must return to neutral.

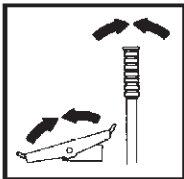

7. Check for correct function of the work lights.



8. The parking brake must function correctly.



 
9. Enclosure door latches must open and close freely.



10. Bob-Tach wedges and linkages must function correctly and be in good condition.



11. Safety treads must be in good condition.

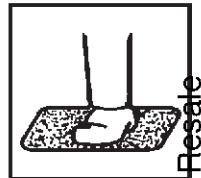


12. Check for correct function of indicator lamps.



13. Check hydraulic fluid level, engine oil level and fuel supply.



 
14. Inspect for fuel, oil or hydraulic fluid leaks.

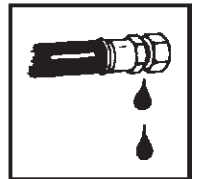

15. Lubricate the loader.



 16. Check the condition of the battery and cables.

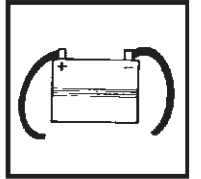

Copy Not for Resale Dealer



Thank you very much
for your reading.
Please click here
to get more information.