

# TRS21/21E/22/24/26/ 27/32 and TRX24/26 Walk-Behind Snowthrowers/ Snowblowers



JOHN DEERE

## TECHNICAL MANUAL

 
TRS21/21E/22/24/26/ 27/32 and TRX24/26  
Walk-Behind Snowthrowers/ Snowblowers

TM1466 (20JAN95) English



**John Deere**  
**Lawn & Grounds Care Division**  
**TM1466 (20JAN95)**  
Replaces TM1466 (25AUG92)

LITHO IN U.S.A.  
ENGLISH



# Introduction

## FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and diagnostics. Repair sections tell how to repair the components. Diagnostic sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, other materials needed to do the job and service parts kits.

Section 10, Group 15—Repair Specifications, consist of all applicable specifications, near tolerances and specific torque values for various components on each individual machine.

Binders, binder labels, and tab sets can be ordered by John Deere dealers direct from the John Deere Distribution Service Center.

This manual is part of a total product support program.

## FOS MANUALS—REFERENCE

## TECHNICAL MANUALS—MACHINE SERVICE

## COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

# Contents

## SECTION 10—GENERAL INFORMATION

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Repair Specifications
- Group 20—Fuels and Lubricants
- Group 25—Serial Number Locations

## SECTION 20—4 AND 5-HP ENGINE REPAIR—TRS22 AND TRS/TRX24

- Group 05—Carburetor, Fuel Tank, and Muffler
- Group 10—Remove and Install Engine
- Group 15—Blower Housing, Cylinder Head, and Breather
- Group 20—Governor, Camshaft, and Tappets
- Group 25—Flywheel, Crankshaft and Piston Assembly
- Group 30—Cylinder Block
- Group 35—Recoil Starter

## SECTION 21—8 AND 10-HP ENGINE REPAIR—TRS/TRX26, TRS27, TRS32

- Group 05—Carburetor, Fuel Tank, and Muffler
- Group 10—Remove and Install Engine
- Group 15—Blower Housing, Cylinder Head, and Breather
- Group 20—Governor, Camshaft, and Tappets
- Group 25—Flywheel, Crankshaft and Piston Assembly
- Group 30—Cylinder Block
- Group 35—Recoil Starter

## SECTION 25—4 AND 5-HP ENGINE REPAIR—TRS21

- Group 05—Fuel System and Muffler
- Group 10—Engine
- Group 15—Recoil Starter

## SECTION 40—ELECTRICAL

- Group 05—Electric Starter—4-Cycle Engines
- Group 06—Electric Starter
- Group 10—4 and 5-HP Ignition and Charging

- System
- Group 15—8 and 10-HP Ignition and Charging System
- Group 20—4 HP (2-Cycle) Ignition System

## SECTION 50—POWER TRAIN—TRS22, TRS/TRX24 & 26

- Group 05—Drive Belt Care and Maintenance
- Group 10—Power Train Repair
- Group 15—Blower and Auger Drive Repair

## SECTION 55—POWER TRAIN—TRS27 AND 32

- Group 05—Drive Belt Care and Maintenance
- Group 10—Power Train Repair—TRS27 and 32 (S.N. —140000)
- Group 15—Blower and Auger Drive Repair
- Group 20—Power Train Repair—TRS27 and 32 (S.N. 140001—)

## SECTION 85—AUGER DRIVE SYSTEM—TRS21

- Group 05—Drive Belt Care and Maintenance
- Group 10—Auger Drive Repair

## SECTION 210—TEST AND ADJUSTMENT SPECIFICATIONS/OPERATIONAL CHECKOUT PROCEDURES

- Group 05—Test and Adjustment Specifications
- Group 10—Operational Checkout Procedures

## SECTION 220—ENGINE—4-CYCLE ENGINES

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

## SECTION 225—ENGINE—2-CYCLE ENGINES

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM1466-20Jan95

COPYRIGHT© 1995  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright© 1989 Deere & Company



Thank you very much  
for your reading.  
Please click here  
to get more information.