


BACKHOE

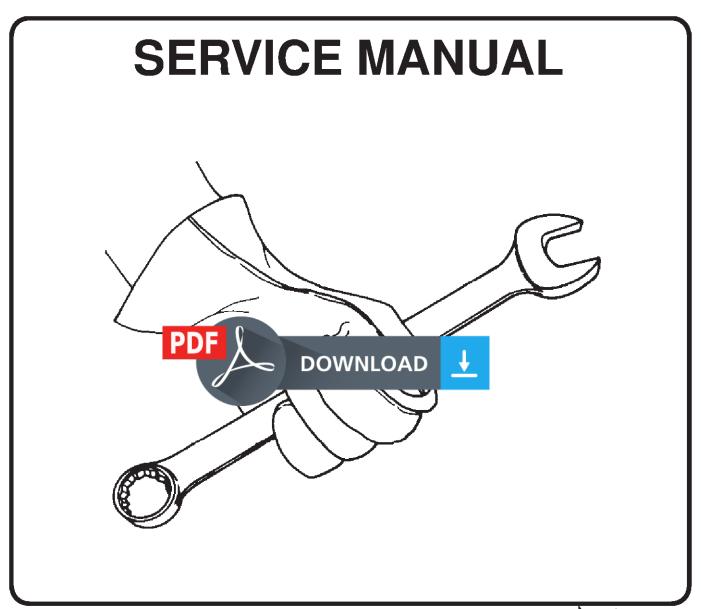





MAINTENANCE SAFETY




Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

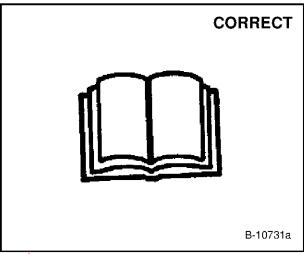

- Never service the Bobcat Loader or Backhoe without instructions. See Operation & Maintenance and Service Manual.
- A Check engine and hydraulic fluids daily.
- A Cleaning and maintenance are required daily.
- Never service or adjust loader/backhoe with the engine running unless instructed to do so in manual.

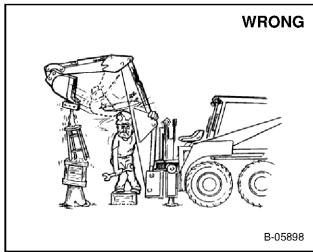

- Always lower the backhoe attachment to the ground before lubricating or servicing.
 - Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.
 - Stop, cool and clean engine of flammable materials before checking fluids.
 - Keep body, loose objects are clothing away from moving parts, electrical contacts, hot parts and

A

Safety glasses are needed for eye protection from electrical arcs, battery acid, compresses springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.



914B														×
914													×	
913											X	X		
911C												×	×	
911B														×
8709										×				
811								×	×					
502				×	X	X	X		×					
209			×	×	×	×	×							
8358								×	×	×				
7258		×	×	×	×									
730S				×	×	×	×							
911								×	×					
909				X	X									
908B			X	×										
206			X	X	X									
928S				×	×									
923S			X	×	X									
923SA		×												
905B	×	×												
	440 450 453	543 553	630 645 643	730 743	751 753 753H	892 1837	822 822	843	853 853H 863	873	943	823	896	2400

NOTE: Refer to the sales handbook for Backhoe mounting kit part numbers and serial numbers.



Thank you very much for your reading.

Please click here to get more information.