John Deere Select Series Tractors Ultimate Series X740, X744, X748, and X749 (North America) Diagnostic and Repair



TECHNICAL MANUAL

Select Series Tractors models X740, X744, X748, X749 (SN 060001-)

TM2350 28 APR 15 (ENGLISH)





tm2350-TECHNICAL MANUAL (g) by Belgreen v2.5

Table of contents

FOREWORD

Section 10 - SAFETY

Group 05 - Safety

Section 20 - SPECIFICATIONS

- Group 05 Fastener Torques
- Group 10 O-Ring Seal Service Recommendations
- Group 15 General Information
- Group 20 Coolant
- Group 25 Serial Number Locations

Section 30 - ENGINE DIESEL

- Group 05 Specifications
- Group 10 Theory of Operation
- Group 15 Component Location
- Group 20 Diagnostics
- Group 25 Tests and Adjustments
- Group 30 Repair
- Group 35 Starting Motor

Section 40 - ELECTRICAL

- Group 05 General Information
- Group 10 Specifications
- Group 15 Component Location
- Group 20 Schematics and Harnesses
- Group 25 Operation and Diagnostics
- Group 30 Tests and Adjustments
- Group 35 Repair

Section 50 - POWER TRAIN

- Group 05 Specifications
- Group 10 Component Location
- Group 15 Theory of Operation
- Group 20 Diagnostics
- Group 25 Tests and Adjustments
- Group 30 Repair
- Group 35 MFWD Repair
- Group 40 HFWD Repair

Section 60 - HYDRAULICS

- Group 05 Specifications
- Group 10 Schematics 2WD and MFWD
- Group 15 Schematics HFWD
- Group 20 Component Location
- Group 25 Theory of Operation
- Group 30 Diagnostics
- Group 35 Tests and Adjustments
- Group 40 Repair

Section 70 - STEERING

- Group 05 Specifications
- Group 10 Component Location
- Group 15 Theory of Operation
- Group 20 Diagnostics
- Group 25 Tests and Adjustments
- Group 30 Repair

Section 80 - BRAKES

Group 05 - Specifications

tm2350-TECHNICAL MANUAL (g) by Belgreen v2.5

Group 10 - Component Location

Group 15 - Theory of Operation

Group 20 - Diagnostics

Group 25 - Tests and Adjustments

Group 30 - Repair

Section 90 - ATTACHMENTS

Group 05 - Specifications

Group 10 - Diagnostics

Group 15 - Tests and Adjustments

Group 20 - Repair

Section 100 - MISCELLANEOUS

Group 05 - Specifications

Group 10 - Repair

<- Go to Global Table of contents</p>
tm2350-TECHNICAL MANUAL

<- Go to Global Table of contents</p>
tm2350-TECHNICAL MANUAL

SAFETY (g) by Belgreen v2.0

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



CAUTION:

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.



Thank you very much for your reading.

Please click here to get more information.