 
 


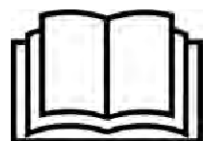

Bobcat®

Operation & Maintenance Manual Flail Cutter

(FC155 Europe Only) S/N A01P00101 & Above
(FC175 Europe Only) S/N 467500101 & Above
(FC200) S/N 467300101 & Above

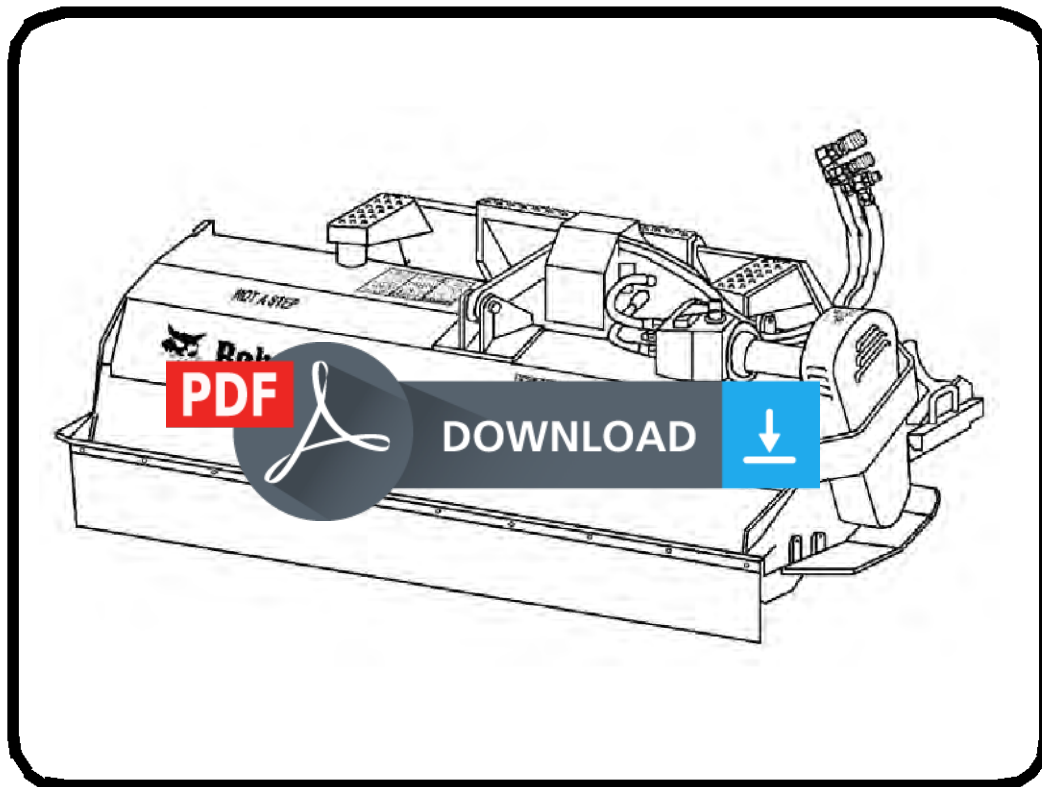

OPERATOR SAFETY WARNINGS



WARNING

Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT



P-90216



Never use the flail cutter without instructions. See machine signs (decals), Operation & Maintenance Manual, and Operator's Handbook.

CORRECT

 


P-60250



Always install approved lift arm support device when servicing flail cutter. Raise lift arm(s) and tilt Bob-Tach fully forward.

CORRECT

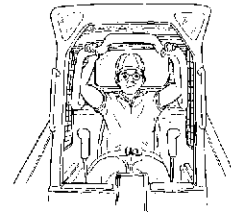 


B-15570



Always use the seat bar and fasten seat belt snugly.
Always keep hands and feet on the controls when operating machine.

CORRECT

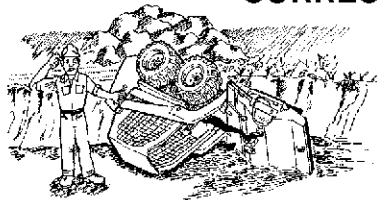

P-60256

 


Always check work area before operating flail cutter.



Never use machine without operator cab with ROPS and FOPS approval. Fasten your seat belt.

WRONG

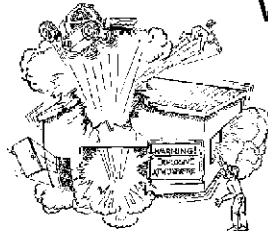 


P-60252



Do not use machine or flail cutter in atmosphere with explosive dust, gas, or where exhaust can contact flammable material.

WRONG

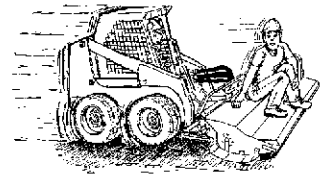

P-60251

 


Never allow riders on flail cutter.



Keep bystanders away when operating flail cutter.

WRONG

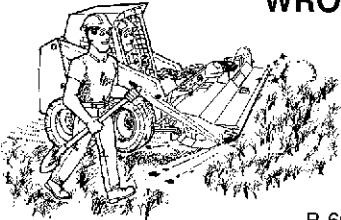

P-60253

 


Keep bystanders away when operating flail cutter.



Do not operate without rotor shutoff device.

WRONG

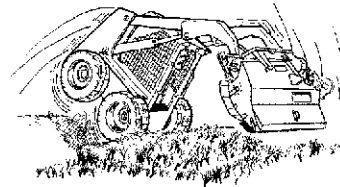

P-60254



Always carry attachment as low as possible.



Do not travel or turn with lift arm(s) up.

WRONG



P-60255



Do not put hands, feet, or objects under flail cutter when engine is running.



To park, engage parking brake and put attachment flat on the ground and stop engine.

SAFETY EQUIPMENT

The Bobcat machine and attachment must be equipped with safety items necessary for each job. Ask your dealer about attachments and accessories.

1. SEAT BELT: Check belt fasteners and check for damaged webbing or buckle.
2. SEAT BAR OR ARM REST IF EQUIPPED: When up, it must lock the machine's hydraulic functions.
3. OPERATOR CAB (ROPS and FOPS): It must be on the machine with all fasteners tight.
4. OPERATOR'S HANDBOOK: Must be in the cab.
5. MACHINE AND ATTACHMENT SAFETY SIGNS (DECALS): Replace if damaged.
6. SPECIAL APPLICATIONS KIT: Available from your Dealer.
7. GRAB HANDLES: Replace if damaged.
8. SAFETY TREADS: Replace if damaged.
9. LIFT ARM SUPPORT DEVICE
10. PARKING BRAKE
11. ROTOR SHUTOFF DEVICE

OSW47-0809



Bobcat®

CONTENTS

FOREWORD	5
SAFETY AND TRAINING RESOURCES	13
OPERATING INSTRUCTIONS	23
PREVENTIVE MAINTENANCE	71
MACHINE SIGN TRANSLATIONS	89
SPECIFICATIONS	97
WARRANTY	101
ALPHABETICAL INDEX	105

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat attachment in the spaces below. Always use these numbers when referring to your Bobcat attachment.

Attachment Serial Number _____

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM



Thank you very much
for your reading.
Please click here
to get more information.