


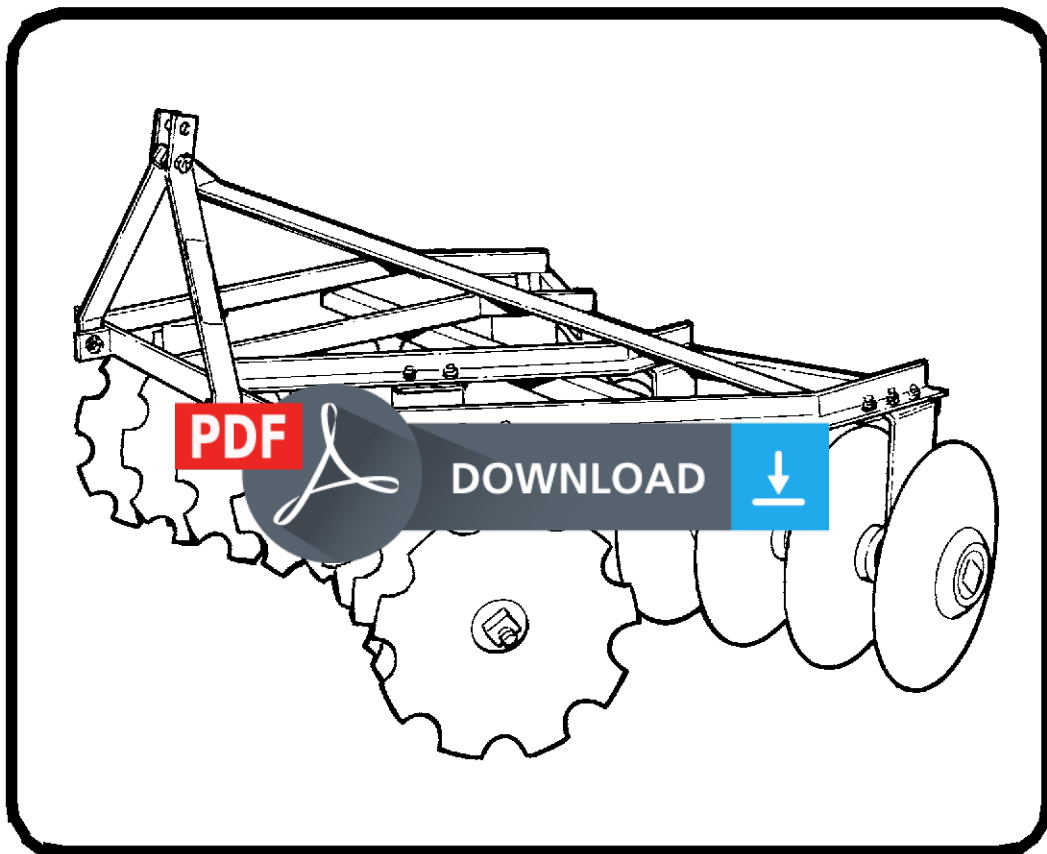

Bobcat®

Operation & Maintenance Manual Three-Point Disc Harrow

(3DH72) S/N AHYN00101 & Above
(3DH84) S/N AHYP00101 & Above



CONTENTS

CONTENTS1

FOREWORD3

SAFETY & TRAINING RESOURCES 11

OPERATING INSTRUCTIONS21

PREVENTIVE MAINTENANCE57

SPECIFICATIONS75

WARRANTY79

ALPHABETICAL INDEX83

REFERENCE INFORMATION

Write the correct information for YOUR three-point disc in the spaces below. Always use these numbers when referring to your three-point disc.

Three-Point Disc Serial Number _____

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
Drève Richelle 167
B-1410 WATERLOO
Belgium



Bobcat®

FOREWORD

This Operation & Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the planer. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR PLANER. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001:2000 CERTIFIED	5
SERIAL NUMBER LOCATION	7
Implement Serial Number	7
DELIVERY REPORT	7
IMPLEMENT IDENTIFICATION	8
3DH72 Three-Point Disc	8
3DH84 Three-Point Disc	8
FEATURES AND ACCESSORIES	9
Standard Items	9



Thank you very much
for your reading.
Please click here
to get more information.