

ORIGINAL INSTRUCTIONS

OPERATOR'S MANUAL

T7.175

T7.190

T7.210

T7.225

Tier 4B (final)

Sidewinder II

Auto Command - Tractor



Part number 47771112

2nd edition English

January 2015

Replaces part number 47657463



Contents

1 GENERAL INFORMATION

Metric and imperial units abbreviations.....	1-1
To the owner.....	1-3
Product identification.....	1-5
Engine identification.....	1-6
Drive line identification.....	1-7
Cab identification.....	1-7
Ecology and the environment.....	1-8
Programming tractor functions.....	1-9
Operator's manual storage.....	1-10
Before operating the tractor.....	1-10
International symbols.....	1-11
Machine stability.....	1-12
Selective Catalytic Reduction (SCR) system.....	1-16

2 SAFETY INFORMATION

Safety precautions.....	2-1
Safety decals.....	2-3
Safety rules.....	2-11
Burn prevention.....	2-18
Prevention of fire or explosions.....	2-19
Fire extinguisher.....	2-20
Protection offered by the tractor.....	2-21
Hazardous substances.....	2-24
Emergency exit.....	2-25
Wheel chocks.....	2-26
Intended use statement.....	2-27
Instructor's seat.....	2-29

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Introduction.....	3-1
Cab air filters.....	3-5
In cab storage (where fitted).....	3-6
Cable and wiring routing.....	3-7
Mobile telephone usage.....	3-7
Implement monitor installation.....	3-8
Cab air pressurisation control (where fitted).....	3-8

OPERATOR'S SEAT

Operator's seat.....	3-10
Air suspension seat deluxe.....	3-11
Air suspension seat with passive or Dynamic Damping System (DDS).....	3-15
Seat belt.....	3-19

INSTRUCTOR'S SEAT

Instructional seat	3-20
--------------------------	------

FORWARD CONTROLS

Ignition key	3-21
Hazard light switch	3-21
Lights and turn indicator lever	3-22
Windshield wiper and washer controls	3-23
Electronic parking brake	3-24
Clutch pedal	3-28
Foot brakes	3-28
Exhaust brake (where fitted)	3-29
Steering column	3-30

LEFT-HAND SIDE CONTROLS

Hand brake	3-31
------------------	------

RIGHT-HAND SIDE CONTROLS

Integrated control panel	3-32
--------------------------------	------

REARWARD CONTROLS

Switches on C-pillar	3-33
Hydraulic master switch	3-34
Heated screens (where fitted)	3-35
Fast steering system (where fitted)	3-36
Autoguidance system (where fitted)	3-38
ISO bus functionality	3-39
Battery isolator control switch	3-40
Climate controls	3-41
Manual temperature control	3-42
Automatic Temperature Control (ATC)	3-43

OVERHEAD CONTROLS

Switch panel	3-44
Left-hand and right-hand outermost work light switch	3-45
Interior light	3-46

INSTRUMENT CLUSTER

Analog Digital Instrument Cluster (ADIC)	3-47
Gauges	3-47
Indicator and warning lights	3-48
Displays	3-50
Transmission display	3-53
Keypad enhanced	3-55
Selecting or changing the display settings	3-57
Ground speed calibration	3-58
Performance monitor	3-61

Armrest color display	3-66
Pop-up screens on color display	3-68
Performance monitor on color display	3-74
Programming the displays	3-77
Alarm functions	3-80
Accessing stored error codes	3-82
Selective Catalytic Reduction (SCR) system instrumentation warning	3-83
Warning and advisory symbols	3-87

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Refueling the tractor	4-1
-----------------------------	-----

STARTING THE UNIT

Starting the engine	4-3
Grid heater cold start aid (where fitted)	4-4
Fuel heater (where fitted)	4-5
Coolant immersion heater (where fitted)	4-5
Transmission oil heater (where fitted)	4-6
Boosting the battery	4-7

STOPPING THE UNIT

Stopping the engine	4-8
Automatic engine shut down	4-8
Automatic engine shut down with enhanced keypad (where fitted)	4-9

MOVING THE UNIT

Operating in cold temperatures	4-10
Low idle speed management	4-13
Reversible engine fan	4-14

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

Carrying the tractor on a transporter	5-1
Secure the high visibility roof panel	5-1

RECOVERY TRANSPORT

Freeing a stuck tractor	5-2
Towing the tractor	5-3

6 WORKING OPERATIONS

GENERAL INFORMATION

Variable engine power management	6-1
Constant engine speed	6-3



Thank you very much
for your reading.
Please click here
to get more information.