

210LE Landscape Loader Repair

TECHNICAL MANUAL

TM1692 17AUG16 (ENGLISH)

For complete service information also see:

210LE Landscape Loader Operation and Test ..	TM1691
210LE Landscape Loader Operator's Manual...	OTM186794
120 Series Hydraulic Cylinders	CTM120519
POWERTECH®4.5 L & 6.8 L Diesel Engines—Base Engine	CTM104
POWERTECH®4.5 L & 6.8 L Diesel Engines—Mechanical Fuel Systems	
POWERTECH®4.5 L & 6.8 L Diesel Engines—Level 12 Electronic Fuel System with DE10 Pump	
Alternators and Starting Motors	CTM77
Front Wheel Drive Axles—AS and MS Series ...	CTM4687
Hydraulic Cylinders	CTM120519
Super Caddy Oil Cleanup Procedure.....	CTM310
Specifications Manual.....	SP458VOL2



Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals

of troubleshooting, general maintenance, and basic type of failures and their causes.

See DB1990 Service Publications Catalog to order a Technical Manual (TM). A Repair Manual includes the following sections:

- Section 00 General Information
- Section 01 Wheels
- Section 02 Axles and Suspension Systems
- Section 03 Transmission
- Section 04 Engine
- Section 05 Engine Auxiliary Systems
- Section 06 Torque Converter
- Section 09 Steering System
- Section 10 Service Brakes
- Section 11 Park Brake
- Section 15 Hitch Attachments
- Section 16 Electrical Systems
- Section 17 Frames, Chassis, or Supporting Structure
- Section 18 Operator's Station
- Section 19 Sheet Metal and Styling
- Section 20 Safety, Convenience and Miscellaneous
- Section 21 Main Hydraulics
- Section 31 Loader
- Section 40 PTO

TX,INTR,BG109 -19-20NOV03-1/1

Introduction



Thank you very much
for your reading.
Please click here
to get more information.