

9300 DynaFlex™ Draper Header

9325

9330

9335

9340

9345

9350





**CALIFORNIA
Proposition 65 Warning**

WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, or other reproductive harm.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling.

TABLE OF CONTENT

General.....	1
Frame.....	2
Augers.....	3
Drive system.....	4
Hydraulic system.....	5
Electrical system.....	6
Shielding.....	7
Reels.....	8
Cutterbar.....	9
Attachments.....	10
Diagrams.....	11
Index.....	12

1 General

1.1	General information	1-5
1.1.1	Introduction to this service manual	1-5
1.1.2	Units of measurement	1-5
1.1.3	Table of contents	1-5
1.1.4	Page numbers	1-5
1.1.5	Intended use	1-5
1.1.6	Proper disposal of waste	1-5
1.2	Safety	1-7
1.2.1	Safety symbol	1-7
1.2.2	Safety messages	1-7
1.2.3	Information messages	1-7
1.2.4	Safety signs	1-7
1.2.5	A word to the technician	1-8
1.2.6	The service manual	1-9
1.3	Operation	1-10
1.3.1	Prepare for operation	1-10
1.3.2	General information	1-10
1.3.3	Personal protective equipment	1-11
1.3.4	Seat instructions	1-12
1.3.5	Shield and guards	1-12
1.3.6	Exhaust warning	1-13
1.3.7	Flying debris	1-13
1.3.8	Handrails	1-14
1.3.9	Agricultural chemicals	1-14
1.4	Travel on public roads	1-15
1.5	Maintenance	1-17
1.5.1	General maintenance information	1-17
1.5.2	Fire prevention and first aid	1-18
1.5.3	High pressure leaks	1-19
1.5.4	Tire safety	1-20
1.5.5	Replacement parts	1-20
1.6	Cylinder stops	1-21
1.6.1	Engage the stop for the reel lift cylinder	1-21
1.6.2	Disengage the stop for the reel lift cylinder	1-21
1.6.3	Header lift cylinder stop	1-22
1.7	Shields	1-23
1.7.1	Draper drive shields	1-23
1.7.2	Auger shaft shield	1-23
1.7.3	End shields	1-23
1.7.4	Reel drive shield	1-24
1.7.5	Top covers	1-25
1.8	Safety and informational signs	1-26
1.8.1	Operators manual	1-28
1.8.2	Warning - Hydraulic fluid pressure	1-28
1.8.3	Warning - Entanglement hazard	1-29
1.8.4	Warning - Crushing hazard	1-29
1.8.5	Warning - Crushing hazard	1-29
1.8.6	Reflector yellow	1-29
1.8.7	Reflector red	1-30
1.8.8	Reflector orange	1-30

1.8.9	Informational decals	1-30
1.9	Introduction	1-34
1.9.1	Units of measurement	1-34
1.9.2	Replacement parts	1-34
1.9.3	Intended use	1-34
1.9.4	Recommended header/combine usage	1-34
1.9.5	Proper disposal of waste	1-34
1.10	Machine identification	1-35
1.10.1	Serial number plate	1-35
1.10.2	Serial number description	1-35
1.11	Configure a header	1-37
1.11.1	Required kits to install the header on the combines	1-38
1.11.2	Break in the header	1-38
1.11.3	Check draper belt	1-38
1.11.4	Parking stands	1-39
1.12	Install the header	1-40
1.13	Remove the header	1-43
1.14	Reel speed	1-45
1.15	Cutterbar	1-46
1.15.1	Lock and unlock the cutterbar	1-46
1.16	Sickle storage	1-47
1.17	Header extremity lights	1-48
1.18	Fighting filler	1-49
1.19	Variable speed drive lockout	1-50
1.19.1	Lockout variable speed drive	1-50
1.20	Feeder chain speed	1-51
1.21	Draper maintenance	1-52
1.21.1	Draper care	1-52
1.21.2	Remove clogged material from header	1-52
1.21.3	Draper speed	1-52
1.22	Adjustments	1-53
1.22.1	Synchronize the reel lift arms	1-53
1.22.2	Adjust the minimum reel lift height	1-53
1.22.3	Reel position	1-55
1.22.4	Adjust the roller chain	1-58
1.22.5	Adjust the cutterbar flex pressure - IDEAL	1-58
1.22.6	Adjust cutterbar flex pressure - 2009 and later axial combines	1-58
1.22.7	Adjust cutterbar flex pressure - 2003 to 2008 axial combines	1-59
1.22.8	Bleed air for the cutter flex system	1-60
1.22.9	Adjust the tine pitch	1-60
1.22.10	Adjust header pitch - IDEAL combines	1-61
1.22.11	Adjust the header pitch - 2009 and later axial combines	1-62
1.22.12	Adjust the auger	1-62
1.22.13	Adjust left and right draper tension	1-64
1.22.14	Adjust main drive belt tension	1-65
1.22.15	Adjust the center draper drive belt tension	1-66
1.22.16	Adjust auger drive belt tension	1-67
1.22.17	Adjust variable speed belt	1-67
1.22.18	Adjust reel speed sensors	1-68
1.22.19	Set the sickle time	1-68
1.23	Specifications	1-69
1.23.1	Header depth	1-69
1.23.2	Header width	1-70
1.23.3	Weights	1-70
1.23.4	Pick up reel	1-70



Thank you very much
for your reading.
Please click here
to get more information.