

3200 and 3400 Telescopic Handlers



For complete series

PDF



DOWNLOAD



POWERTECH 4.5 l and 6.8 l Diesel

Engines

Alternator and Starting Motor

CTM77

Drive Axles for 3200 and 3400 Telescopic

Handlers

CTM4655

John Deere Werke Zweibrücken

TM4626 (29JAN01)

Worldwide Edition

Printed in Germany


KT Country Machinery

Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC --19-29SEP98-1/1

KT Country Machinery

Contents

SECTION 05—Safety

Group 05—Safety Information

SECTION 10—General Information

Group 05—Technical Information
 Group 10—Lubricants
 Group 15—Torque Values
 Group 20—Serial Numbers

SECTION 20—Engine — Repair

Group 05—Engine
 Group 10—Cooling System

SECTION 30—Fuel/Air Intake Systems — Repair

Group 05—Fuel system
 Group 10—Air Intake System

SECTION 40—Electrical System — Repair

Group 05—Electrical Connectors
 Group 10—Alternator and Battery
 Group 15—Starting Motor
 Group 20—Other Components

SECTION 50—Power Train — Repair

Group 05—Torque Converter Unit
 Group 10—Transmission
 Group 15—Axles
 Group 20—Other Components

SECTION 60—Brake and Steering Systems — Repair

Group 05—Service Brakes
 Group 10—Handbrake
 Group 20—Steering system

SECTION 70—Hydraulic System — Repair

Group 05—Hydraulic Pump
 Group 10—Hydraulic Valves
 Group 15—Hydraulic Cylinders
 Group 20—Other Components

SECTION 80—Miscellaneous — Repair

Group 05—Boom

Group 10—Removal and Installation of Components
 Group 15—Hydraulic Hitch
 Group 20—Mechanical Hitch

SECTION 90—Operator's Cab, Air Conditioning System — Repair

Group 05—Operator's Cab
 Group 10—Air Conditioning System
 Group 15—Heating System
 Group 20—Seats

SECTION 220—Engine — Tests

Group 10—Engine Tests

SECTION 230—Fuel/Air Intake Systems — Tests

Group 10—Air Intake System

SECTION 240—Electrical System — Tests

Group 05—General Information
 Group 06—Test Equipment
 Group 10—Electrical System Diagrams
 Group 15A—Section 1: Starting Motor Power Supply
 Group 15B—Section 2: Seat Adjustment
 Group 15C—Section 3: Windshield Wiper/Washer System
 Group 15D—Section 4: Heating/Air Conditioning System
 Group 15E—Section 5: Radio, Cab Interior Lighting and Signal Horn
 Group 15F—Section 6: Lights
 Group 15G—Section 7: Reverse Alarm, Cab Electrical Socket
 Group 15H—Section 8: Instruments
 Group 15J—Section 9: Load Indicator
 Group 15K—Section 10: Steering mode
 Group 15L—Section 11: Power Train
 Group 15M—Section 12: Boom Control System
 Group 15N—Section 13: Additional hydraulic functions
 Group 20—Load Indicator

SECTION 250—Power Train — Tests

Group 05—Transmission and Torque Converter —

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT 2001
 DEERE & COMPANY
 European Office Mannheim
 All rights reserved
 A John Deere ILLUSTRATION Manual

220

230

240

250

260

270

290

NDX

KT Country Machinery

Section 05 Safety

Contents

	Page
Group 05—Safety Information	
Recognize Safety Information05-05-1
Understand Signal Words05-05-1
Live With Safety05-05-1
Wear Protective Clothing05-05-2
Service Machines Safely05-05-2
Work In Ventilated Area05-05-2
Illuminate Work Area Safely05-05-3
Use Proper Tools05-05-3
Construct Dealer-Made Tools Safely05-05-3
Practice Safe Maintenance05-05-4
Protect Against Noise05-05-4
Use Proper Lifting Equipment05-05-5
Support Machine Properly05-05-5
Work in Clean Area05-05-5
Handle Fluids Safely — Avoid Fires05-05-6
Park Machine Safely05-05-6
Prevent Battery Explosions05-05-6
Prevent Acid Burns05-05-7
Avoid High-Pressure Fluids05-05-8
Avoid Heating Near Pressurized Fluid Lines05-05-8
Remove Paint Before Welding or Heating05-05-9
Service Tires Safely05-05-9
Replace Safety Signs05-05-10
Prepare for Emergencies05-05-10
Dispose of Waste Properly05-05-10



Thank you very much
for your reading.
Please click here
to get more information.