

344E and 444E Loader Operation and Test



TECHNICAL MANUAL

For complete service information

PDF



DOWNLOAD



344E and 444E Loader Repair	CTM422
Teammate Axles	CTM18
Teammate II Axles	CTM43
4276 Engine	CTM4
4045 Engine	CTM8
Alternators and Starting Motors	CTM77

John Deere Dubuque Works
TM1421 (13JUN94)

LITHO IN U.S.A.
ENGLISH

Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Dealer Presentation Sheet

Contents

SECTION I—GENERAL INFORMATION

- Group I —Safety Information
- Group II —General Specifications
- Group III —Torque Values
- Group IV —Fuels and Lubricants

SECTION 9005—OPERATIONAL CHECKOUT PROCEDURE

- Group 10—Operational Checkout Procedure

SECTION 9010—ENGINE

- Group 05—Theory Of Operation
- Group 10—System Operational Checks
- Group 15—Diagnostic Information
- Group 20—Adjustments
- Group 25—Tests

SECTION 9015—ELECTRICAL SYSTEM

- Group 00—Electrical System

SECTION 9020—POWER TRAIN

- Group 05—Theory Of Operation
- Group 10—System Operational Checks
- Group 15—Diagnostic Information
- Group 20—Adjustments
- Group 25—Tests

SECTION 9025—HYDRAULIC SYSTEM

- Group 05—Theory Of Operation
- Group 10—System Operational Checks
- Group 15—Diagnostic Information
- Group 20—Adjustments
- Group 25—Tests

SECTION 9031—HEATING AND AIR CONDITIONING

- Group 05—Theory Of Operation
- Group 10—System Operational Checks
- Group 15—Diagnostic Information
- Group 20—Adjustments
- Group 25—Tests

Index

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1421-19-13JUN94

COPYRIGHT® 1994
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright® 1992, 1989, 1988, 1987 Deere & Company

Contents

1

9005

9010

9015

9020

9025

9031

INDX



Thank you very much
for your reading.
Please click here
to get more information.