

# 6020 to 6620 Tractors and SE Tractors Repair

Part 1: Sections 05 to 55

Part 2: Sections 56 to 99

## TECHNICAL MANUAL 6020 to 6620 Tractors and SE Tractors Repair

TM4750 01OCT02 (ENGLISH)

For complete service information also see:

6020 to 6920S Tractors and SE Tractors Operation and Tests .....	TM4741
6020 to 6920S Tractors and SE Tractors Diagnostics .....	TM4726
Front-Wheel Drive Axles (AS and MS Series) .....	CTM4687
Front-Wheel Drive Axles (700 POWERTECH® Diesel Engines ...	CTM4687
Mechanical Fuel Injection Systems	CTM287
Electronic Fuel Injection Systems	
Level 1 .....	CTM284
Level 4 .....	CTM170
Level 11 .....	CTM220
Level 12 .....	CTM331
Alternators and Starting Motors (available in English only) .....	CTM77



# Introduction

## Vorwort

Dieses Reparatur-Handbuch ist gültig für folgende Traktortypen:

**6020, 6120, 6220, 6320, 6420, 6420S, 6520, 6620.**

**SE-Traktoren: 6020, 6120, 6220, 6320, 6420 und 6520.**

Das Handbuch wurde für erfahrenes Kundendienstpersonal geschrieben. Die zur Durchführung bestimmter Arbeiten notwendigen Spezialwerkzeuge sind in diesem Handbuch angegeben. Es wird empfohlen, diese Werkzeuge unbedingt zu benutzen.

Sicherheitsmaßnahmen einhalten: Die Sicherheitshinweise am Anfang dieses Handbuchs genau durchlesen, ebenso wie die mit "Achtung" gekennzeichneten Abschnitte, die überall im Handbuch zu finden sind.



Dieses Zeichen macht auf die an der Maschine angebrachten oder in diesem Handbuch enthaltenen Sicherheitshinweise aufmerksam. Es bedeutet, daß Verletzungsgefahr besteht.

Technische Handbücher sind Leitfäden zur Wartung bestimmter Maschinen. Sie enthalten nur Informationen, die zur Reparatur und zum Verständnis von Wirkungsweise und Prüfungen unerlässlich sind.

Grundsätzliche Wartungsinformationen können aus anderen Quellen entnommen werden, die sich mit der Arbeitsweise, Grundlagen der Störungssuche und Wartung beschäftigen, sowie eine Beschreibung von grundlegenden Störungen und deren Ursachen enthalten.

LX24888,000042E -19-01OCT02-1/1

# Contents

## SECTION 05—SAFETY

Group 05—Safety Measures

## SECTION 10—GENERAL INFORMATION

Group 05—Specifications

Group 10—Tune-Up

Group 15—Predelivery Inspection

## SECTION 20—ENGINE

Group 00—Engine Removal and Installation

## SECTION 30—FUEL, AIR INTAKE, COOLING AND EXHAUST SYSTEMS

Group 05—Speed Control Linkage

Group 10—Fuel System

Group 15—Air Intake System

Group 20—Cooling System

Group 25—Cold-Weather Starting Aids

Group 30—Exhaust System

## SECTION 40—ELECTRICAL SYSTEM

Group 05—Connectors

Group 10—Wiring Harnesses

Group 15—Charging Circuit

Group 20—Starter Motor Circuit

Group 25—Fuses, Relays and Switches

Group 30—Monitoring Systems

Group 40—Electrical Components

## SECTION 50—SYNCRPLUS TRANSMISSION

Group 00—Removal and Installation of Transmission Components

Group 05—Transmission Shift Controls

Group 10—Perma Clutch II Module

Group 15—Gear Transmission

## SECTION 51—POWER REVERSER TRANSMISSION

Group 00—Removal and Installation of Power Reverser Module

Group 05—Transmission Shift Controls

Group 10—Power Reverser Module

Group 15—Gear Transmission

## SECTION 53—AUTOPOWR/IVT TRANSMISSION

Group 00—Removing and Installing the

AutoPowr/IVT Transmission

Group 05—Transmission Shift Controls

Group 10—Input Housing

Group 15—Output Housing

Group 20—Assembling the Differential Drive Shaft

## SECTION 55—POWRQUAD, POWRQUAD PLUS AND AUTOQUAD TRANSMISSIONS

Group 00—Removal and Installation of Components

Group 05—Transmission Shift Controls

Group 10—PowrQuad Module

Group 15—Creeper Transmission

Group 20—Option Transmission

Group 25—Range Transmission

## SECTION 56—DRIVE SYSTEMS

Group 00—Removal and Installation of Components

Group 05—U-Jointed Shafts and Torsion Damper

Group 10—Front-Wheel Drive Clutch

Group 15—Differential

Group 20—Hydraulic Pump Drive

Group 25—Final Drives

Group 30—Rear PTO Options

Group 35—Front PTO

Group 40—Front Implement Drive

## SECTION 60—STEERING AND BRAKES

Group 05—Hydrostatic Steering

Group 10—Steering Cylinder(s)

Group 15—Brake Valve

Group 20—Rear Brakes

Group 25—Handbrake

Group 30—Hydraulic Trailer Brake

Group 35—Air Brakes

## SECTION 70—HYDRAULIC SYSTEM

Group 05—Controls

Group 10—Hydraulic Pump and Charge Pump (PFC Hydraulic System)

Group 11—Hydraulikpumpe (PC-Hydrauliksystem)

Group 15—Valves

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2002  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright © 2001

- 05 Group 20—Rockshaft
- Group 25—Selective Control Valves and Couplers
- Group 30—Independent Control Valve

**SECTION 80—MISCELLANEOUS**

- 10 Group 00—Removal and Installation of Components
- Group 05—Main Frame
- Group 10—Front Axle
- Group 15—Front and Rear Wheels
- Group 20—Trailer Mounting and Swinging Drawbar
- 20 Group 25—Triple Link Suspension (TLS) of  
Front-Wheel Drive Axle
- Group 30—Pick-Up Hitch

**SECTION 90—OPERATOR'S CAB**

- 30 Group 00—Removal and Installation of Components
- Group 05—Controls and Instruments
- Group 10—Air-Conditioning System
- Group 15—Heating System
- Group 20—Seats
- Group 25—Operator's Cab
- 40 Group 30—Cab Suspension

**SECTION 99—SPECIAL TOOLS  
(DEALER-FABRICATED)**

- 50 Group 05—Special Tools (Dealer-Fabricated)

51

53

55

56

*Contents*

60

70

80

90

99

INDX



Thank you very much  
for your reading.  
Please click here  
to get more information.