



2350 and 2550 Tractors



JOHN DEERE

TECHNICAL MANUAL 2350 and 2550 Tractors

TM4403 (01MAY85) English



TM4403 (01MAY85)

LITHO IN U.S.A.
ENGLISH



2350 AND 2550 TRACTORS TECHNICAL MANUAL TM-4403 (May-85)

CONTENTS

SECTION 10 - GENERAL

- Group 00 - Specifications and Special Tools
- Group 05 - Predelivery, Delivery and After-Sales Inspections
- Group 10 - Lubrication and Periodic Service
- Group 15 - Engine and Tractor Tune-Up
- Group 20 - Tractor Separation

SECTION 20 - ENGINE

- Group 00 - Specifications and Special Tools
- Group 05 - General Information Diagnosing Malfunctions
- Group 10 - Cylinder Head, Valves, Camshaft and Balancer Shafts
- Group 15 - Cylinder Block, Liners, Pistons and Connecting Rods
- Group 20 - Crankshaft, Main Bearings and Flywheel
- Group 25 - Timing Gear Train
- Group 30 - Engine Lubrication System
- Group 35 - Cooling System

SECTION 30 - FUEL AND AIR INTAKE SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - General Information, Diagnosing Malfunctions
- Group 10 - Fuel Tank, Water Trap, Fuel Transfer Pumps and Fuel Filter
- Group 15 - Roto Diesel Fuel Injection Pump
- Group 20 - Fuel Injection Nozzles
- Group 25 - Cold Weather Starting Aids
- Group 30 - Speed Control Linkage
- Group 35 - Air Cleaner

SECTION 40 - ELECTRICAL SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Diagnosing Malfunctions and Tests
- Group 10 - Wiring Harnesses
- Group 15 - Controls and Instruments
- Group 20 - Lighting Systems
- Group 25 - Wiring Diagrams
- Group 30 - Starting Motor
- Group 35 - Alternator

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT® 1985
DEERE & COMPANY
Moline, Illinois
All rights reserved
Previous Edition
Copyright® 1982
Copyright® 1984
DEERE & COMPANY

CONTENTS

SECTION 50 - POWER TRAIN

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Operation and Lubricating System
- Group 10 - Clutch Operating Linkages
- Group 15 - Engine Clutch
- Group 20 - Hi-Lo Shift Unit
- Group 21 - Reverser Transmission
- Group 22 - Creeper Transmission
- Group 25 - Transmission Shift Linkages
- Group 30 - Synchronized Transmission and Transmission Oil Pump
- Group 31 - Collarshift Transmission and Transmission Oil Pump
- Group 35 - Differential
- Group 40 - Final Drives
- Group 45 - Independent PTO
- Group 46 - Continuous - Running PTO
- Group 50 - Mechanical Front Wheel Drive

SECTION 60 - STEERING SYSTEM AND BRAKES

- Group 00 - Specifications and Special Tools
- Group 05 - Steering
- Group 10 - Brakes

SECTION 70 - HYDRAULIC SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Diagnosing Malfunctions and Pressure Tests
- Group 10 - Oil Reservoir, Filter, Valves and Oil Cooler
- Group 15 - 22.6 cm³ (1.38 cu. in.) Hydraulic Pump
- Group 16 - 40.0 cm³ (2.40 cu. in.) Hydraulic Pump
- Group 20 - Rockshaft
- Group 25 - Selective Control Valve (Poppet Valve Type) and Breakaway Coupler
- Group 26 - Selective Control Valves (Spool Type)
- Group 30 - Remote Cylinder

SECTION 80 - MISCELLANEOUS

- Group 00 - Specifications
- Group 05 - Front Axle
- Group 10 - Front and Rear Wheels

SECTION 90 - OPERATOR'S STATION

- Group 00 - Specifications and Special Tools
- Group 05 - Air Conditioning System
- Group 10 - Cab Ventilation and Heating
- Group 15 - Seats
- Group 20 - SOUND-GARD Body
- Group 25 - ROLL-GARD Protective Structure

Section 10 GENERAL

CONTENTS OF THIS SECTION

	Page		Page
GROUP 00 - SPECIFICATIONS AND SPECIAL TOOLS		GROUP 05 - PREDELIVERY, DELIVERY AND AFTER-SALES INSPECTIONS	
Specifications	10-00-3	Tractor Storage	10-05-1
Serial Numbers	10-00-3	Predelivery Inspection	10-05-2
Model Numbers	10-00-3	Delivery Inspection	10-05-9
Engine	10-00-3	After-Sales Inspection	10-05-10
Engine Clutch	10-00-4		
Cooling System	10-00-4	GROUP 10 - LUBRICATION AND SERVICE	
Fuel System	10-00-4	Lubrication and Service	10-10-1
Electrical System	10-00-5		
Synchronized Transmission	10-00-5	GROUP 15 - TUNE-UP	
Collar Shift Transmission	10-00-5	Preliminary Engine Testing	10-15-1
Hi-Lo Shift Unit	10-00-5	Dynamometer Test	10-15-1
Reverser Transmission	10-00-5	Testing Compression Pressure	10-15-2
Creeper Transmission	10-00-6	Engine Tune-Up	10-15-3
Differential and Final Drives	10-00-6	Checking Tractor Operation	10-15-8
Differential Lock	10-00-6	Standard Torques	10-15-9
PTO	10-00-6		
Mechanical Front Wheel Drive	10-00-7	GROUP 20 - TRACTOR SEPARATION	
Hydrostatic Steering	10-00-7	Separating Between Engine and	
Foot Brakes	10-00-7	Tractor Front End	10-20-1
Handbrake	10-00-7	Removal and Installation of Engine	10-20-5
Hydraulic System	10-00-7	Removal and Installation of	
Capacities	10-00-7	Clutch Housing	10-20-9
Travel Speeds	10-00-8	Removal and Installation of	
Front and Rear Wheels	10-00-8	Final Drives	10-20-13
Dimensions and Weights	10-00-8	Removal and Installation of	
Predelivery, Delivery and		Rockshaft	10-20-18
After-Sales Inspections	10-00-8	Removal and Installation of	
Lubrication and Service	10-00-9	SOUND-GARD® Body	10-20-20
Tune-Up	10-00-11		
Tractor Separation	10-00-12		
Standard Torques	10-00-13		
Special Tools	10-00-15		



Thank you very much
for your reading.
Please click here
to get more information.