

**XUV590i and XUV590i S4
Gator™ Utility Vehicle
(S.N. 010001-)**



JOHN HARE



COLLECTION

**DIAGNOSTIC TECHNICAL MANUAL
XUV Gator™ Utility Vehicle XUV590i and XUV590i S4
(S.N. 010001-)**

TM143219 01DEC18 (ENGLISH)



John Deere Horicon Works

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



CAUTION:

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components.

Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC-19-20140415

Section 10 - General Information

- [Group 10 - Safety](#)
- [Group 20 - General Specifications](#)
- [Group 30 - Fuel and Lubricants](#)
- [Group 40 - Machine Specifications](#)

Section 20 - Engine Repair

- [Group 10 - Engine](#)

Section 30 - Electrical Repair

- [Group 10 - Wiring Harnesses](#)
- [Group 20 - Wiring Harnesses, Kits](#)

Section 40 - Power Train Repair

- [Group 10 - Transmission](#)
- [Group 20 - Mechanical Front Wheel Drive](#)
- [Group 30 - Axles and Driveshaft](#)

Section 50 - Steering and Brake Repair

- [Group 10 - Steering](#)
- [Group 20 - Brakes](#)

Section 60 - Miscellaneous Repair

- [Group 10 - Wheels](#)
- [Group 20 - Hood, Cargo Box, and Bumper](#)
- [Group 30 - Fuel and Air System](#)
- [Group 40 - Cooling System](#)

Section 70 - Operator `s Station Repair

- [Group 10 - Operator `s Station and Seat](#)
- [Group 20 - Occupant Protective Structure \(OPS\)](#)

Section 220 - Engine Operation, Tests and

Adjustments

- [Group 10 - Component Location](#)
- [Group 20 - Tests and Adjustments](#)
- [Group 30 - Diagnosis](#)

Section 230 - Electrical Operation, Tests and Adjustments

- [Group 10 - Component Location](#)
- [Group 20 - Theory of Operation](#)
- [Group 30 - Schematics](#)
- [Group 31 - Schematics, Kits](#)
- [Group 40 - Tests and Adjustments](#)
- [Group 50 - Diagnostic Trouble Codes, EPAS](#)
- [Group 55 - Diagnostic Trouble Codes, ECU](#)
- [Group 60 - Service ADVISOR Readings](#)
- [Group 70 - Connector Information](#)

Section 240 - Power Train Operation, Tests and Adjustments

- [Group 10 - Component Location](#)
- [Group 20 - Theory of Operation](#)
- [Group 30 - Diagnosis, Tests, and Adjustments](#)

Section 250 - Steering and Brake Operation, Tests and Adjustments

- [Group 10 - Component Location](#)
- [Group 20 - Theory of Operation](#)
- [Group 30 - Diagnosis](#)
- [Group 40 - Tests and Adjustments](#)

Section 299 - Service Tools

- [Group 10 - Service Tools and Kits](#)

Section 10 General Information

Contents

	Page		Page
Group 10 - Safety			
<u>Recognize Safety Information</u>	<u>10-10-1</u>	<u>Protect Against High Pressure Spray</u>	<u>10-10-7</u>
<u>Understand Signal Words</u>	<u>10-10-1</u>	<u>Live With Safety</u>	<u>10-10-7</u>
<u>Follow Safety Instructions</u>	<u>10-10-1</u>	Group 20 - General Specifications	
<u>Practice Safe Maintenance</u>	<u>10-10-2</u>	<u>Service Recommendations for O - Ring Boss Fittings</u>	<u>10-20-1</u>
<u>Use Proper Tools</u>	<u>10-10-2</u>	<u>Service Recommendations For Flat Face O - Ring Seal Fittings</u>	<u>10-20-2</u>
<u>Handle Fluids Safely - Avoid Fires</u>	<u>10-10-2</u>	<u>Metric Cap Screw Torque Values - Grade 7</u>	<u>10-20-2</u>
<u>Drain Gasoline When Storing Machine</u>	<u>10-10-3</u>	<u>Metric Bolt and Screw Torque Values</u>	<u>10-20-3</u>
<u>Handling Batteries Safely</u>	<u>10-10-3</u>	<u>Unified Inch Bolt and Screw Torque Values</u>	<u>10-20-4</u>
<u>Prepare for Emergencies</u>	<u>10-10-4</u>	Group 30 - Fuel and Lubricants	
<u>Park Machine Safely</u>	<u>10-10-4</u>	<u>Gasoline Engine Oil</u>	<u>10-30-1</u>
<u>Support Machine Properly</u>	<u>10-10-4</u>	<u>Oil Filters</u>	<u>10-30-1</u>
<u>Wear Protective Clothing</u>	<u>10-10-4</u>	<u>Gasoline Fuel for 4 - Cycle Engines</u>	<u>10-30-1</u>
<u>Work in Clean Area</u>	<u>10-10-5</u>	<u>Transmission and Hydraulic Oil</u>	<u>10-30-2</u>
<u>Service Machines Safely</u>	<u>10-10-5</u>	<u>Grease</u>	<u>10-30-2</u>
<u>Work In Ventilated Area</u>	<u>10-10-5</u>	<u>Mixing of Lubricants</u>	<u>10-30-2</u>
<u>Illuminate Work Area Safely</u>	<u>10-10-5</u>	<u>Alternative and Synthetic Lubricants</u>	<u>10-30-2</u>
<u>Replace Safety Signs</u>	<u>10-10-6</u>	<u>Lubricant Storage</u>	<u>10-30-3</u>
<u>Use Proper Lifting Equipment</u>	<u>10-10-6</u>	Group 40 - Machine Specifications	
<u>Keep ROPS Installed Properly</u>	<u>10-10-6</u>	<u>Machine Specifications</u>	<u>10-40-1</u>
<u>Follow Tire Recommendations</u>	<u>10-10-6</u>	<u>Product Identification Number Location</u>	<u>10-40-1</u>
<u>Decommissioning - Proper Recycling and Disposal of Fluids and Components</u>	<u>10-10-7</u>		



Thank you very much
for your reading.
Please click here
to get more information.