

John Deere 2355, 2555 Tractors (SN. from 730 000 L) Operators Manual (oml64483)

**2355 AND 2555
TRACTORS
(FROM SERIAL
NO. 730 000L)**



 
OPERATORS MANUAL
2355 AND 2555 TRACTORS (FROM
SERIAL NO. 730 000L)

OML64483 C1 English



JOHN DEERE WERKE MANNHEIM
OML64483 C1

LITHO IN THE U.S.A.
ENGLISH



Covers: 730000L);,2355,2555

Type: Service Manual

Language: English

Pages: 173

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 2355, 2555 Tractors (SN. from 730 000 L) Operators Manual (oml64483)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:


- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

SPOOL TYPE VALVES

The less movement on the control lever, the slower the raise or lower movement. Hold control lever until required position has been reached and then return it to neutral.

A—Lower implement
B—Raise implement

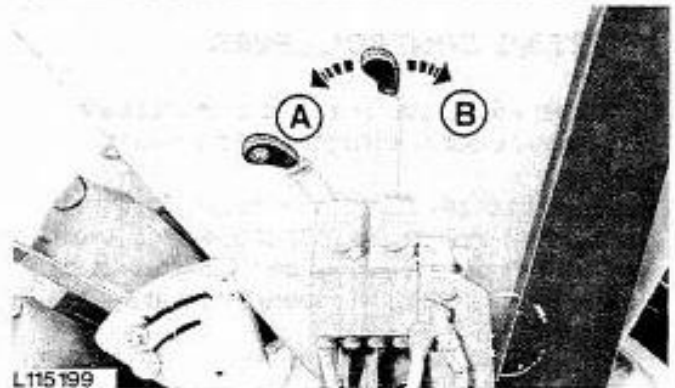

L115199

L115199-2955ALE-011086

QUICK-COUPLERS

This type of coupler has a "breakaway function" which protects hoses by permitting them to be pulled loose from tractor without damage if drawn implement should become disconnected from the tractor.

Connecting Hydraulic Hoses

Shut off the engine before connecting hoses to couplers, lower any mounted implement and move control lever forward and backward. This will relieve pressure to the couplers.

1. Remove dust cap (A) and check connections for cleanliness.
2. Press hose connector (B) into quick-coupler.


NOTE: When the remote cylinder control lever is pushed to the rear, the implement will normally rise if the hoses are attached correctly.

Disconnecting Hydraulic Hoses


Relieve coupler pressure by stopping the engine, lowering the implement and shift the remote cylinder control lever back and forth.

1. Pull hose (B) from coupler and install dust cap (A).

Similarly insert dust plugs in implement hose ends.

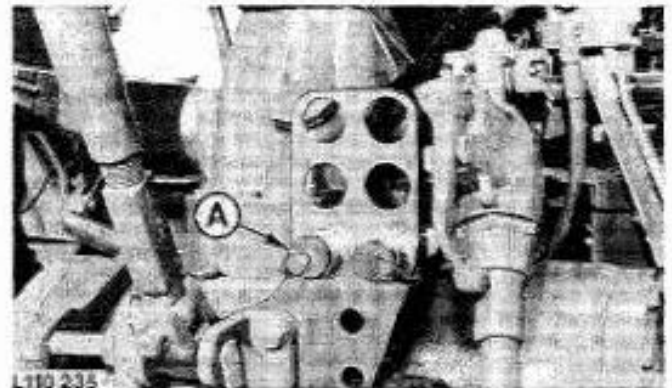

L110235

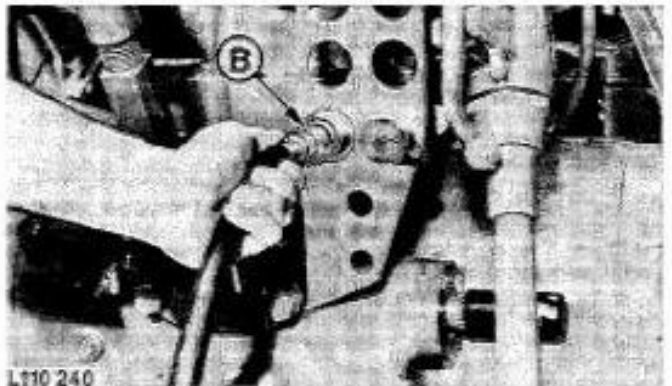

L110240

L110235.L110240-2950ALE-150585

Crime Prevention Tips

HELP PREVENT CRIME

You can help take a bite out of crime by properly documenting ownership and discouraging theft.

TAKE A BITE OUT OF
CRIME

© 1976 The Advertising Council, Inc.



DX,CRPRV,A -19-04JUN93

TS140 -19-07OCT88

RECORD IDENTIFICATION NUMBERS

1. Mark your machines with your own unique numbering system.
2. Record the Product Identification Number (PIN) of the unit and also individual component identification numbers for engines, axles, pumps, etc. Include the PIN numbers on all documentation, such as insurance, financial, and warranty papers.




DX,CRPRV,B -19-04JUN90

TS161 -UN-25MAR89

KEEP PROOF OF OWNERSHIP

1. Take color photographs from several angles of each machine.
2. Maintain an up-to-date inventory of all your machines.
3. Keep your documented identification numbers, color photographs, and inventory in a safe, secure location.

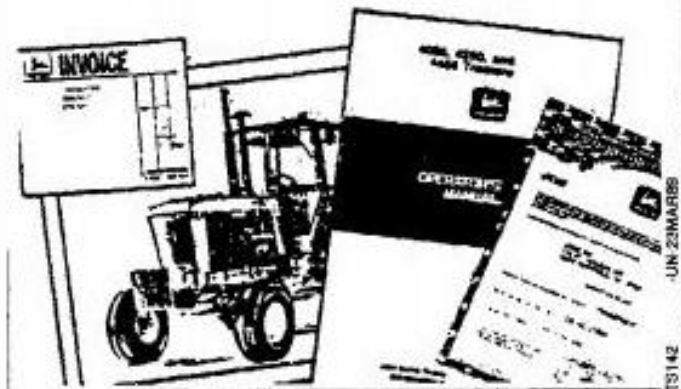


DX,CRPRV,C -19-04JUN90

TS142 -UN-23MAR85

PARK INDOORS OUT OF SIGHT

Make machines hard to move:

- Park large equipment in front of exits.
- Lower equipment to the ground. Remove key.
- Remove battery when unit is in storage.
- Lock cab doors, windows, and vandal-proof devices.
- Set wheels in widest position making loading more difficult. Lock building.

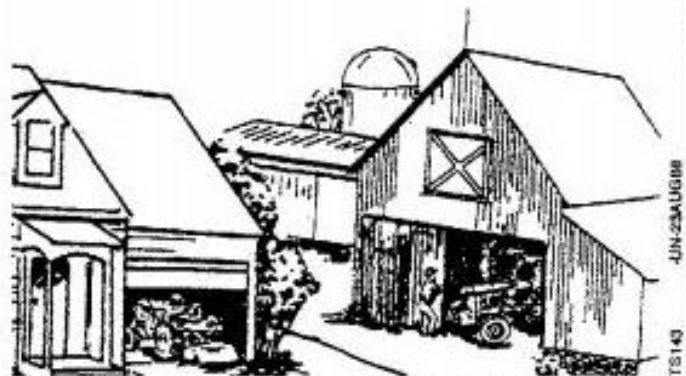

DX,CRPRV,D -19-04JUN90

TS143 -UN-23AUG88



Thank you very much
for your reading.
Please click here
to get more information.