

# John Deere 5065M, 5075M, 5085M, 5095M, 5105M, 5105ML & 5095MH Tractors Repair Service Manual (TM102619)



**Covers:** 5065M,5075M,5085M,5095M,5095MH,5105M,5105ML

**Type:** Service Manual

**Language:** English

**Pages:** 1933

**Format:** PDF

**Features:** Bookmarked, searchable, printable

**Compatibility:** Windows/Mac/Tablet/Mobile

 
This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 5065M, 5075M, 5085M, 5095M, 5105M, 5105ML & 5095MH Tractors Repair Service Manual (TM102619)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

 
**Contents:**

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

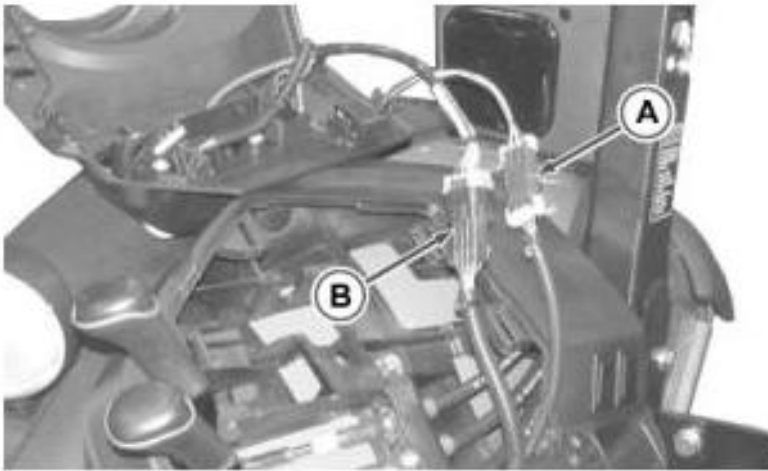

*Harness Connector*

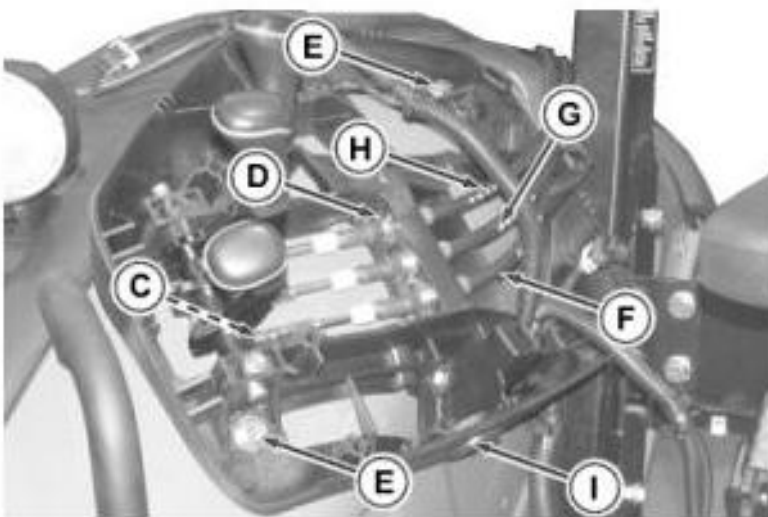

*SCV Control Cables*

**LEGEND:**

 
- A Draft Control Knob Connector
- B Raise and Lower Switch Connector
- C Yoke
- D Clip
- E Cap Screw (5 used)
- F SCV I Cable
- G SCV II Cable
- H SCV III Cable
- I Bottom Panel

Disconnect hitch control connectors (A and B) and SCV control cables (F—H) as per SCV option equipped.

**→NOTE:**

**Disconnect cables from yokes.**

[22] -

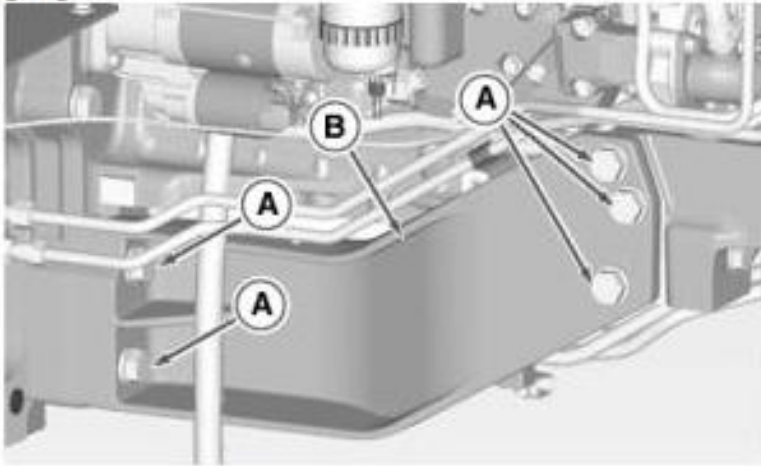 
*Right Side View of Engine***LEGEND:**

A Cap Screw

B Side Frame

**For 4-cylinder engine :** Remove cap screws (A) and then remove side frame (B) from both sides of the engine.

[23] -

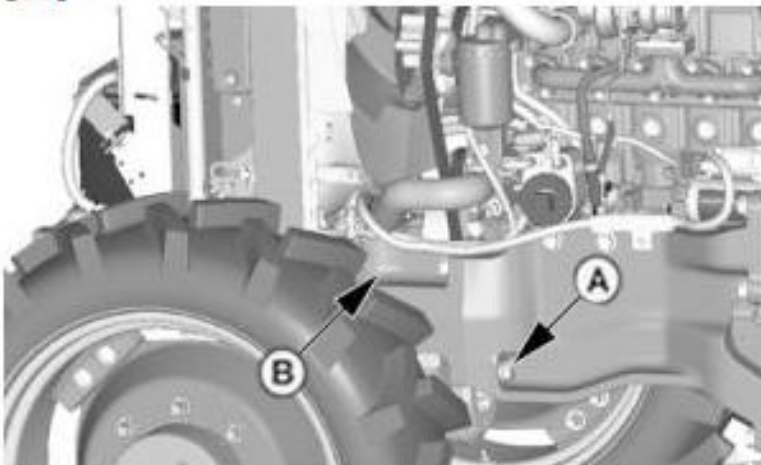*5 Cylinder*



Thank you very much  
for your reading.  
Please click here  
to get more information.