

Shop Manual

HYDRAULIC
EXCAVATOR

PC300 -8

PC300LC-8

PC350 -8

PC350LC-8

SERIAL NUMBERS

PC300- 60001
PC300LC-60001
PC350- 60001
PC350LC-60001

and up

PDF



DOWNLOAD



ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC300-8

PC300LC-8

PC350-8

PC350LC-8

Machine model	Serial number
---------------	---------------

PC300-8	60001 and up
PC300LC-8	60001 and up
PC350-8	60001 and up
PC350LC-8	60001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

O: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN01983-05
00 Index and foreword	SEN01984-05
Index	SEN01985-05 ●
Foreword and general information	SEN01986-02 ●
01 Specification	SEN01987-01
Specification and technical data	SEN01988-01
10 Structure, function and maintenance standard	SEN01989-02
Engine and cooling system	SEN01990-00
Power train	SEN01991-00
Undercarriage and frame	SEN01992-00
Hydraulic system, Part 1	SEN01993-00
Hydraulic system, Part 2	SEN01994-00
Hydraulic system, Part 3	SEN01995-00
Work equipment	SEN01996-01
Cab and its attachments	SEN01997-00
Electrical system	SEN01998-01 ●
20 Standard value table	SEN01999-02
Standard service value table	SEN02624-02 ●
30 Testing and adjusting	SEN02000-02
Testing and adjusting, Part 1	SEN02625-02 ●
Testing and adjusting, Part 2	SEN02626-02 ●
Testing and adjusting, Part 3	SEN02663-02 ●
40 Troubleshooting	SEN02001-02
Failure code table and fuse locations	SEN02627-02 ●
General information on troubleshooting	SEN02628-02 ●
Troubleshooting by failure code (Display of code), Part 1	SEN02629-02 ●
Troubleshooting by failure code (Display of code), Part 2	SEN02630-02 ●
Troubleshooting by failure code (Display of code), Part 3	SEN02631-02 ●
Troubleshooting of electrical system (E-mode)	SEN02632-02 ●
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02633-02 ●

Troubleshooting of engine (S-mode)	SEN02634-02 ●
50 Disassembly and assembly	SEN02002-01
General information on disassembly and assembly	SEN02635-01 ●
Engine and cooling system	SEN02636-01 ●
Power train	SEN02637-01 ●
Undercarriage and frame	SEN02638-01 ●
Hydraulic system	SEN02639-01 ●
Work equipment	SEN02640-00
Cab and its attachments	SEN02641-01 ●
Electrical system	SEN02642-01 ●
90 Diagrams and drawings	SEN02003-02
Hydraulic diagrams and drawings	SEN02004-00
Electrical diagrams and drawings	SEN02005-02 ●



Thank you very much
for your reading.
Please click here
to get more information.