

**6105R, 6170R, 6115R, 6125R, 6130R,
6140R, 6150R, 6190R & 6210R
Tractors (Worldwide Edition)**

**DIAGNOSIS AND TESTS
SERVICE MANUAL**

**Covered models: 6105R, 6170R,
6115R, 6125R, 6130R, 6140R, 6150R,
6190R, 6210R**



TM403819, June 2013



Table of contents

FOREWORD

INFORMATION ON SERIAL NUMBERS

Section 210 - GENERAL INFORMATION

Group 05 - Safety Measures

Group 10 - General References

Section 211 - DIAGNOSTIC TROUBLE CODES

Group AIC - AIC Control Software

Group ATC - ATC Control Software

Group CCU - CCU Control Software

Group CLC - CLC Control Software

Group CSC - CSC Control Software

Group CRU - CRU Control Software

Group CSM - CSM Control Software

Group ECU - ECU Control Software

Group EIC - EIC Control Software

Group ETC - ETC Control Software

Group FCC - FCC Control Software

Group HCC - HCC Control Software

Group JDL - JDL Control Software

Group OIC - OIC Control Software

Group PDU - PDU Control Software

Group PLC - PLC Control Software

Group PTA - PTA Control Software

Group PTF - PTF Control Software

Group PTQ - PTQ Control Software

Group RLC - RLC Control Software

Group RPT - RPT Control Software

Group SCC - SCC Control Software

Group SCO - SCO Control Software

Group SFA - SFA Control Software

Group SMV - SMV Control Software

Group TEC - TEC Control Software

Group TEI - TEI Control Software

Group TIA - TIA Control Software

Group TIQ - TIQ Control Software

Group VLC - VLC Control Software

Group VTI - VTI Control Software

Group XMC - XMC Control Software

Group XSC - XSC Control Software

Section 212 - OBSERVABLE SYMPTOMS AND SYSTEM DIAGNOSIS

Group 20 - Engine

Group 30 - Fuel, Air Intake and Cooling Systems

Group 40 - Electrical System

Group 45 - Electronic Control Units

Group 50A - Drive Train (without Transmission)

Group 50B - AutoPowr™/IVT™ transmission

Group 50C - PowrQuad™ transmission

Group 60A - Steering

Group 60B - Brakes

Group 70 - Hydraulic System

Group 80A - Machine-Specific Systems

Group 80B - Suspension Systems

Group 90 - Operator's cab

Section 220 - ENGINE

Group 20 - Exhaust Aftertreatment, Theory of Operation

Group 50 - Tests and Adjustments

Section 230 - FUEL, AIR INTAKE AND COOLING SYSTEMS

Group 05 - General Information

Group 20A - Fuel System, Theory of Operation

Group 20B - Air intake system, Theory of Operation

Group 20C - Cooling system, Theory of Operation

Group 20D - Charge Air Circuit, Theory of Operation

Group 20E - Cold-weather starting system, Theory of Operation

Group 30 - Fuel, Air Intake and Cooling Systems - Schematics

Group 50 - Fuel, air intake, and cooling systems - Tests and adjustments

Section 239 - FUEL, AIR INTAKE, AND COOLING SYSTEMS - COMPONENT INFORMATION

Group 40A - Fuel system, Component information

Group 40C - Cooling system, Component information

Group 40D - Charge air circuit, Component information

Group 40E - Cold-weather starting system, Component information

Section 240 - ELECTRICAL SYSTEM

Group 30A - Electrical System - Schematics (Section Diagrams)

Group 50AA - Starting Motor and Charging Circuit

Group 50AB - Voltage Converter

Group 50AC - Cold-Weather Starting Aids

Group 50BA - Lights

Group 50BB - Worklight

Group 50BC - Dome Light

Group 50BD - Turn-Signal Lights

Group 50CA - Operator's seat

Group 50CB - Acoustic Alarm

Group 50CC - Windshield and Rear Window Wipers

Group 50CD - HVAC

Group 50CE - Power Outlet Sockets

Group 50CF - Radio

Group 50CG - Electrical Outside Mirrors

Group 50CH - Accessory

Group 50EA - TEC Control Software and ISOBUS

Group 50EB - AutoTrac™

Group 50EC - Radar

Group 50ED - JDLINK™/Service ADVISOR™ Remote

Group 50FA - Electronic Engine Control

Group 50FB - Immobilizer

Group 50FC - Fuel System

Group 50GA - PowrQuad™ transmission

Group 50GB - AutoPowr™/IVT™ transmission

Group 50GC - Differential lock

Group 50GD - Front-wheel drive

Group 50GE - Rear PTO

Group 50GF - Front PTO

Group 50GG - Brakes

Group 50HA - Rear Hitch

Group 50HB - E-SCV Selective Control Valves

Group 50HC - E-ICV Independent Control Valves

Group 50HD - Suspended MFWD Axle

- Group 50HE - Cab Suspension
- Group 50HF - electro-hydraulic pick-up hitch (E-PUH)
- Group 50HH - Front End Loader
- Group 50IA - Display
- Group 50IB - Cab Switch Module
- Group 50IC - Reversing Camera
- Group 50JA - CAN BUS Systems
- Group 50X - Ground Connections

Section 245 - ELECTRONIC CONTROL UNITS

- Group 05 - Electronic Control Units - General Information
- Group 10B - Electronic Control Units - Interactive Tests and Calibrations
- Group 10C - Electronic Control Units - Information on Programming
- Group 20 - Electronic Control Units - Theory of Operation
- Group 40 - Electronic Control Units - Component Information
- Group 50 - Electronic Control Units - Tests and Adjustments
- Group Immobilize - Control unit for immobilizer
- Group AIC - AIC Control Software
- Group ATC - ATC Control Software
- Group CCU - CCU Control Software
- Group CLC - CLC Control Software
- Group CRU - CRU Control Software
- Group CSC - CSC Control Software
- Group CSM - CSM Control Software
- Group ECU - ECU Control Software
- Group EIC - EIC Control Software
- Group ETC - ETC Control Software
- Group FCC - FCC Control Software
- Group HCC - HCC Control Software
- Group JDL - JDL Control Software
- Group OIC - OIC Control Software
- Group PAP - PAP Control Software
- Group PDU - PDU Control Software
- Group PLC - PLC Control Software
- Group PTA - PTA Control Software
- Group PTF - PTF Control Software
- Group PTQ - PTQ Control Software
- Group RLC - RLC Control Software
- Group RPT - RPT Control Software
- Group SCC - SCC Control Software
- Group SCO - SCO Control Software
- Group SFA - SFA Control Software
- Group SMV - SMV Control Software
- Group TEC - TEC Control Software
- Group TEI - TEI Control Software
- Group TIA - TIA Control Software
- Group TIQ - TIQ Control Software
- Group VLC - VLC Control Software
- Group VTI - VTI Control Software
- Group XMC - XMC Control Software
- Group XSC - XSC Control Software

Section 249 - ELECTRICAL CONNECTORS, WIRING HARNESSSES AND COMPONENTS

- Group 40 - Overview of Electrical Components and Harnesses
- Group 40A - Electrical Components - Assemblies

Group 40B - Electrical Components - Sensors
 Group 40E - Electrical Components - Various Devices and Equipment
 Group 40F - Electrical Components - Protective Equipment
 Group 40G - Electrical Components - Power Supply and Alternator
 Group 40H - Electrical Components - Control and Signal Devices
 Group 40K - Electrical Components - Relays
 Group 40M - Electrical Components - Electrical Motors
 Group 40R - Electrical Components - Resistors
 Group 40S - Electrical Components - Switches
 Group 40V - Electrical Components - Diodes
 Group 40W - Electrical Components - Harnesses
 Group 40XA - Connectors from X0001 to X0099
 Group 40XB - Connectors from X0100 to X0199
 Group 40XC - Connectors from X0200 to X0299
 Group 40XD - Connectors from X0300 to X0399
 Group 40XE - Connectors from X0400 to X0499
 Group 40XF - Connectors from X0500 to X0599
 Group 40XG - Connectors from X0600 to X0699
 Group 40XH - Connectors from X0700 to X0799
 Group 40XI - Connectors from X0800 to X0899
 Group 40XJ - Connectors from X0900 to X0999
 Group 40XK - Connectors from X1000 to X1099
 Group 40XL - Connectors from X1100 to X1199
 Group 40XM - Connectors from X1200 to X1299
 Group 40XW - Connectors and Contacts
 Group 40XX - Ground Points
 Group 40Y - Electrical Components - Solenoid Valves and Solenoids
 Group 40Z - Electrical Components - Other

Section 250A - DRIVE TRAIN (WITHOUT TRANSMISSION)

Group 10 - Drive Train (without Transmission) - Operational Checks
 Group 20 - Drive Train (without Transmission) - Theory of Operation
 Group 50 - Drive Train (without Transmission) - Tests and Adjustments

Section 250B - AUTOPOWR™/IVT™ TRANSMISSION

Group 05 - AutoPowr™/IVT™ Transmission - General Information
 Group 10 - AutoPowr™/IVT™ Transmission - Operational Checks
 Group 20 - AutoPowr™/IVT™ Transmission - Theory of Operation
 Group 30 - AutoPowr™/IVT™ Transmission - Hydraulic Diagrams
 Group 50 - AutoPowr™/IVT™ Transmission - Tests and Adjustments

Section 250C - POWRQUAD™ TRANSMISSION

Group 05 - PowrQuad™ Transmission - General Information
 Group 10 - PowrQuad™ Transmission - Operational Checks
 Group 20 - PowrQuad™ Transmission - Theory of Operation
 Group 30 - PowrQuad™ Transmission - Electrical System Diagrams
 Group 50 - PowrQuad™ Transmission - Tests and Adjustments

Section 259 - DRIVE TRAIN - COMPONENT INFORMATION

Group 40A - Drive Train (without Transmission) - Component Information
 Group 40B - AutoPowr™/IVT™ Transmission - Component Information
 Group 40C - PowrQuad™ Transmission - Component Information

Section 260A - STEERING

Group 05 - Steering - General Information
 Group 10 - Steering - Operational Checks
 Group 20 - Steering - Theory of Operation
 Group 50 - Steering - Tests and Adjustments



Thank you very much
for your reading.
Please click here
to get more information.