




# Bobcat®

---

## Service Manual T320 Compact Track Loader

---

S/N A7MP11001 - A7MP59999

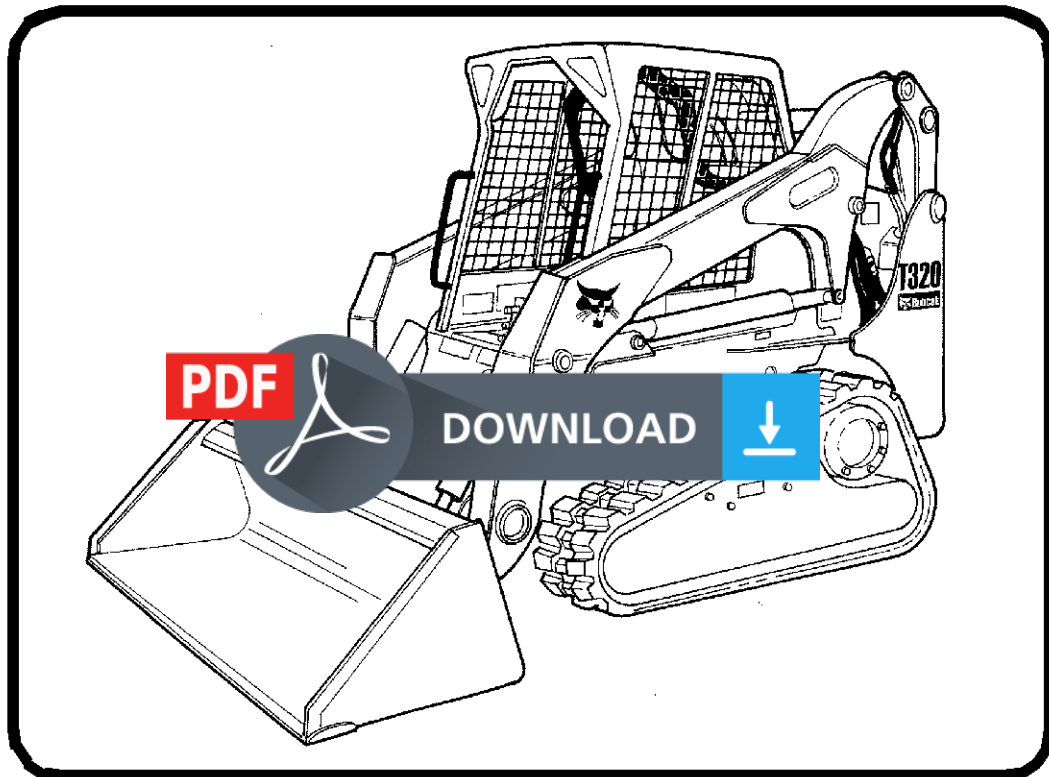

Dealer Copy -- Not for Resale

EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)





# MAINTENANCE SAFETY



 
## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

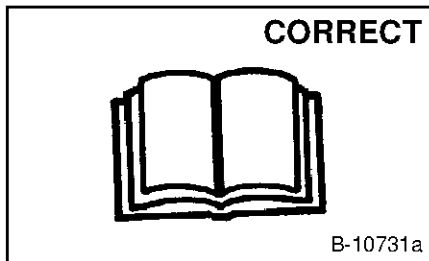


B-10731a

- Never service the Bobcat Compact Track Loader without instructions.

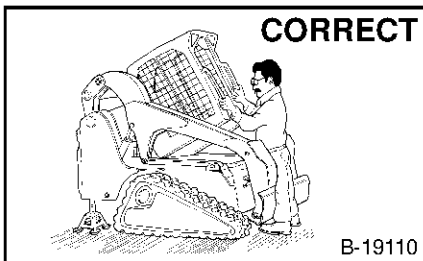


B-19110

 - Use the correct procedure to lift to lower operator cab.

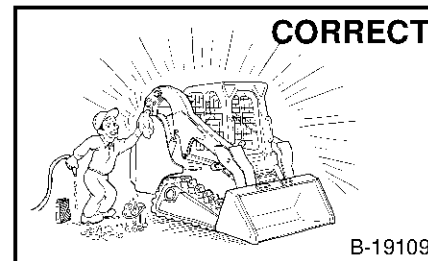


B-19109

 - Cleaning and maintenance are required daily.

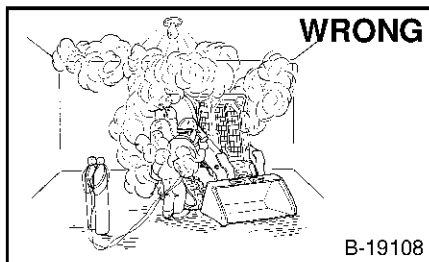


B-19108

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

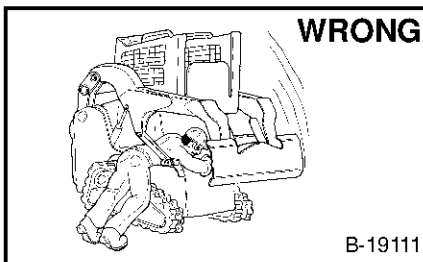


B-19111

- Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

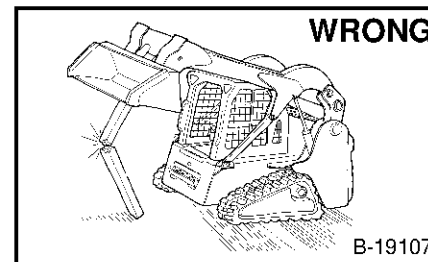


B-19107

 - Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

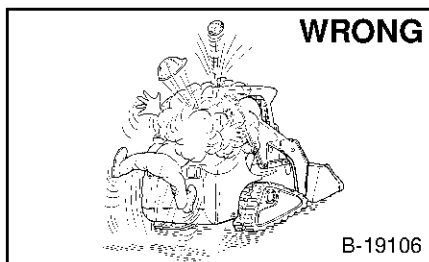

B-19106

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

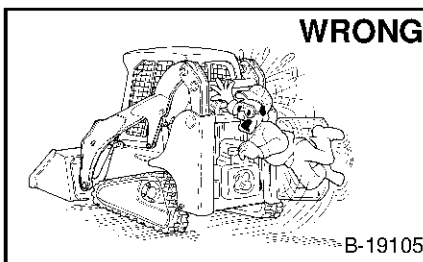

B-19105

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW24-0805

Dealer Copy -- Not for Resale



**Bobcat®**

## ALPHABETICAL INDEX

ACCESS PANEL (INSIDE) .....	50-01	ELECTRICAL / HYDRAULIC CONTROLS.....	60-01
ACCESS PANEL (INSIDE) (SJC) .....	50-01	ELECTRICAL / HYDRAULIC CONTROLS (SJC)....	60-01
AIR CLEANER .....	70-01	ELECTRICAL SYSTEM INFORMATION.....	60-01
AIR CLEANER SERVICE .....	10-01	ENGINE COOLING SYSTEM .....	10-01, 70-01
AIR CONDITIONING SYSTEM FLOW .....	80-01	ENGINE INFORMATION .....	70-01
ALTERNATOR .....	60-01	ENGINE LUBRICATION SYSTEM .....	10-01
		ENGINE SPEED CONTROL .....	70-01
BACK-UP ALARM SYSTEM.....	60-01	ENGINE SPEED CONTROL (SJC).....	70-01
BATTERY.....	60-01	EVAPORATOR COIL.....	80-01
BOBCAT CONTROLLER (ACS).....	60-01	EVAPORATOR / HEATER UNIT.....	80-01
BOBCAT CONTROLLER (MAIN).....	60-01	EXPANSION VALVE.....	80-01
BOBCAT CONTROLLER (SJC) (DRIVE) .....	60-01	FLYWHEEL AND HOUSING .....	70-01
BOBCAT INTERLOCK CONTROL SYSTEM		FLYWHEEL RPM SENSOR .....	60-01
(BICS) .....	60-01	FRONT AUXILIARY HYDRAULIC COUPLER	
BLOWER FAN .....	80-01	BLOCK .....	20-01
BOB-TACH (HAND LEVER) .....	10-01, 50-01	FUEL SYSTEM.....	10-01, 70-01
BOB-TACH (POWER - OPTION).....	50-01	FUEL TANK .....	50-01
BOB-TACH (POWER) BLOCK.....	20-01		
BRAKE.....	40-01	HEATER COIL.....	80-01
BUCKET POSITION VALVE .....	20-01	HEATER VALVE .....	80-01
		HYDRAULIC CONNECTION SPECIFICATIONS..	SPEC-01
CALIBRATION		HYDRAULIC CONTROL VALVE (ACS) OR (SJC)..	20-01
(SELECTABLE JOYSTICK CONTROL) (SJC) .....	60-01	HYDRAULIC CONTROL VALVE (STANDARD) .....	20-01
CAMSHAFT AND TIMING GEARS.....	70-01	HYDRAULIC FLUID RESERVOIR .....	20-01
CASE DRAIN FILTER.....	30-01	HYDRAULIC / HYDROSTATIC SYSTEM.....	10-01
CHARGE PRESSURE.....	30-01	HYDRAULIC / HYDROSTATIC FILTERS .....	20-01
COMPRESSOR .....	80-01	HYDRAULIC / HYDROSTATIC FLUID	
CONDENSER .....	80-01	SPECIFICATIONS.....	SPEC-01
CONTROL HANDLE / LEVER .....	50-01	HYDRAULIC PUMP (STANDARD).....	20-01
CONTROL HANDLE / LEVER (ACS) .....	50-01	HYDRAULIC PUMP (STANDARD) (HIGH FLOW)..	20-01
CONTROL HANDLE / LEVER (SJC).....	50-01	HYDRAULIC PUMP (SJC) (HI FLOW).....	20-01
CONTROL PANEL.....	50-01	HYDRAULIC PUMP (SJC) .....	20-01
CONTROL PANEL (SJC).....	50-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
CONTROL PANEL (SETUP).....	60-01	HYDROSTATIC MOTOR .....	30-01
CONTROL PEDALS AND LINKAGES.....	50-01	HYDROSTATIC PUMP .....	30-01
CONTROL PEDALS (ACS) .....	50-01	HYDROSTATIC PUMP (SJC).....	30-01
CONTROL SYSTEM (ACS).....	60-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
CONVERSIONS .....	SPEC-01		
CRANKSHAFT AND PISTONS .....	70-01	INSTRUMENT PANEL.....	60-01
CYLINDER HEAD.....	70-01		
CYLINDER (LIFT).....	20-01	LIFT ARMS.....	50-01
CYLINDER (BOB-TACH) .....	20-01	LIFT ARM BYPASS CONTROL VALVE .....	20-01
CYLINDER (TILT) .....	20-01	LIFT ARM SUPPORT DEVICE .....	10-01
		LIFTING AND BLOCKING THE LOADER.....	10-01
DIAGNOSTICS SERVICE CODES .....	60-01	LIGHTS .....	60-01
DRIVE BELT .....	30-01	T320 LOADER SPECIFICATIONS.....	SPEC-01
		LOADER STORAGE AND RETURN	
		TO SERVICE.....	10-01
		LUBRICATION SYSTEM.....	70-01
		LUBRICATING THE LOADER.....	10-01
		MAINTENANCE CLOCK.....	60-01
		MAIN RELIEF VALVE .....	20-01
		MUFFLER.....	70-01

Dealer Copy - Not for Resale



Thank you very much  
for your reading.  
Please click here  
to get more information.