# 1998-1999 Kawasaki ZX9R Motocycle Service Repair Workshop Manual



## 1-4 GENERAL INFORMATION

## Model Identification

## ZX900-C1 (US) Left Side View:




#### Air Suction Valves


The air suction valve is a check valve which allows fresh air to flow only from the air cleaner via air hoses into the exhaust port and prevents return flow. Remove and inspect the air suction valves periodically (see Engine Top End chapter). Also, remove and inspect the air suction valves whenever the idle speed is unstable, engine power is greatly reduced, or there are abnormal engine noises.

#### Vacuum Switch Valve

Although the vacuum switch valve usually permits secondary air flow , it closes when a high vacuum (low pressure) is developed at the inlet pipe during engine braking. This is to shut off secondary air flow and prevent explosions in the exhaust ports which might be caused by extra unburned fuel in the exhaust during deceleration. These explosions, or backfiring in the exhaust system could damage the air suction valves.

Regular inspection of the vacuum switch valve is not needed. If backfiring occurs frequently in the exhaust system during engine braking or if there are abnormal engine noises, check the vacuum switch valve as described in the text (see Engine Top End chapter).

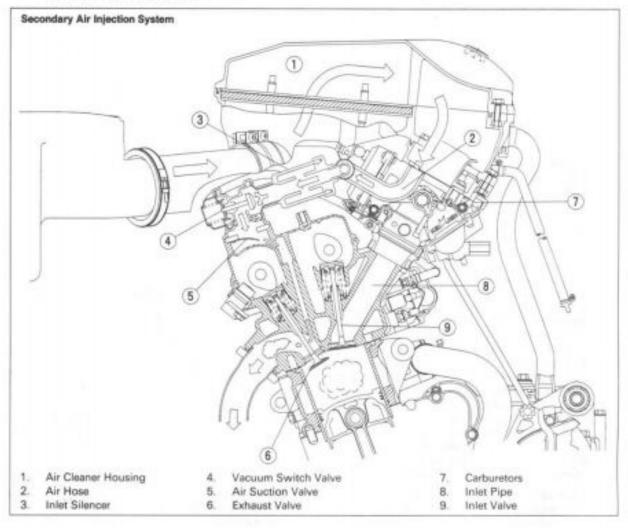

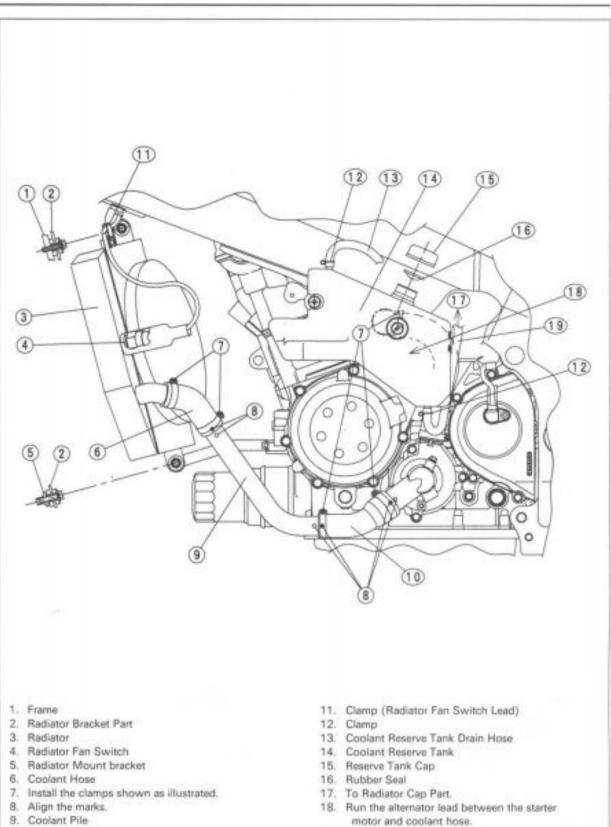

10. Coolant Hose

19. Coolant Hose

# 1998-1999 Kawasaki ZX9R Motocycle Service Repair Workshop Manual

Instant download 1998-1999 Kawasaki ZX9R Motocycle Service Repair Workshop Manual.B This manual content all service, repair, maintenance, troubleshooting procedures for Kawasaki Motorcycle Machine.

All major topics are covered step-by-step instruction, diagrams, illustration, wiring schematic, and specifications to repair and troubleshoot. With this factory service repair manual on hand can easily help you with any repairs that you may need for your Kawasaki Motorcycle Machine. Machine model :

ZX9R Manual Covers: \*General Information \*Fuel System(DFI) \*Cooling System \*Engine Top End \*Clutch \*Engine Lubrication System \*Engine Removal/Installation \*Crankcase/Transmission \*Wheels/Tires \*Final Drive \*Brakes \*Suspension \*Steering \*Frame \*Electric System \*Appendix AND MORE...SPECIFICATION: Pages:307 Format: PDF Language: English Compatible: Win/MacAll pages are printable, so run off what you need & take it with you into the garage or workshop. Save money \$\$ by doing your own repairs! It make it easy for any skill level with these very easy to follow, step-by-step instructions! Instant download means no shipping cost or waiting for a CD to arrive in the mail...you will receive this manual today via instant download on completion of payment via our secure

payment processor. We accept all major credit/debit cards/paypal. Instant download! Thank you for visiting!



# Thank you very much for your reading. Please click here to get more information.