



Kawasaki Ninja ZX-10R



Motorcycle Service Manual

Quick Reference Guide

General Information	1
Periodic Maintenance	2
Fuel System (DFI)	3
Cooling System	4
Engine Top End	5
Clutch	6
Engine Lubrication System	7
Engine Removal/Installation	8
Crankshaft/Transmission	9
Wheels/Tires	10
Final Drive	11
Brakes	12
Suspension	13
Steering	14
Frame	15
Electrical System	16
Appendix	17

This quick reference guide will assist you in locating a desired topic or procedure.

 Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.

 Refer to the sectional table of contents for the exact pages to locate the specific topic required.

2-18 PERIODIC MAINTENANCE

Maintenance Procedure

Brake Pad Wear Inspection

- Remove the brake pads (see Brakes chapter).
- Check the lining thickness [A] of the pads in each caliper.
- ★If the lining thickness of either pad is less than the service limit [B], replace both pads in the caliper as a set.

Pad Lining Thickness

Standard:


Rear


4 mm (0.16 in) Front 5 mm (0.20 in.)

1 mm (0.04 in.) Service Limit:

Brake Light Switch Operation

- Turn on the ignition switch.
- The brake light [A] should go on when the brake lever is applied or after the brake pedal is depressed about 10 mm (0.39 in.).

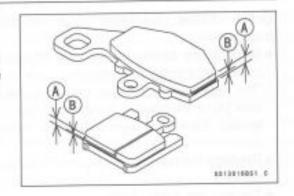

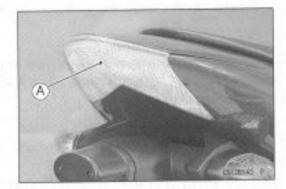

- ★If it does not, adjust the brake light switch.
- Remove:

Right Footpeg Stay Bolts [A] Footpeg Stay Assy



 While holding the switch body, turn the adjusting nut to adjust the switch.

Switch Body [A]


Adjusting Nut [B]

Light sooner as the body rises [C]

Light later as the body lowers [D]

CAUTION

To avoid damaging the electrical connections inside the switch, be sure that the switch body does not turn during adjustment.

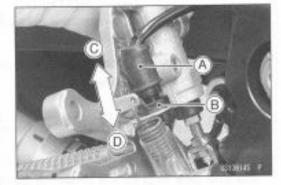

★If it does not go on, inspect or replace the following items.

Battery (see Electrical System chapter) Brake Light (see Electrical System chapter)

Main Fuse 30 A and Taillight Fuse 10 A (see Electrical System chapter)

Front Brake Light Switch [A] (see Electrical System chapter)

Rear Brake Light Switch (see Electrical System chapter) Harness (see Wiring Inspection in Electrical System chapter)



2004 Kawasaki Ninja ZX-10R Motocycle Service Repair Workshop Manual

Instant download 2004 Kawasaki Ninja ZX-10R Motocycle Service Repair Workshop Manual.B This manual content all service, repair, maintenance, troubleshooting procedures for Kawasaki Motorcycle Machine.

All major topics are covered step-by-step instruction, diagrams, illustration, wiring schematic, and specifications to repair and troubleshoot. With this factory service repair manual on hand can easily help you with any repairs that you may need for your Kawasaki Motorcycle Machine.

Machine model:

Ninja ZX-10R

Manual Covers:

- *General Information
- *Periodic Maintenance
- *Fuel System(DFI)
- *Cooling System
- *Engine Top End
- *Clutch
- *Engine Lubrication System
- *Engine Removal/Installation
- *Crankcase/Transmission
- *Wheels/Tires
- *Final Drive
- *Brakes
- *Suspension
- *Steering
- *Frame
- *Electric System
- *Appendix

AND MORE...SPECIFICATION:

Pages:595 Format: PDF

Language: English

Compatible: Win/MacAll pages are printable, so run off what you need & take it with you into the garage or workshop.

Save money \$\$ by doing your own repairs! It make it easy for any skill level with these very easy to follow, step-by-step instructions!

Instant download means no shipping cost or waiting for a CD to arrive in the mail...you will receive this manual today via instant download on completion of payment via our secure payment processor. We accept all major credit/debit cards/paypal.

Instant download! Thank you for visiting!



Thank you very much for your reading.

Please click here to get more information.